

この度はセイコークロック商品をお買い上げ いただき、誠にありがとうございました ご使用の前にこの取扱説明書をよくお読みの うえ、正しくご使用くださいますよう、お願 い申し上げます。 なお、この取扱説明書はお手元に保管し、必 要に応じてご覧ください。





説明書番号 FQQ-017P

この取扱説明書の内容は、将来予告なく変更することがありま す。あらかじめご了承ください。印刷による制限のため、この 取扱説明書中の図が実際の表示と異なる場合があります。この 時計によって生じた、いかなる支出、損益、その他の損失に対 して、弊社は一切の責任を負いません。この取扱説明書の内容 の一部またはすべてを、製造者の許可なく転載・変更・複製す ることは禁じらわています ることは禁じられています。

#### (改良のため予告なく変更する 製品仕様 ▶ 場合があります。)

- ●時 間 精 度 : 月差±30秒(気温5℃から35℃で使用した場合) ●使用温度範囲:-10℃~50℃
- ー ム:ボリュームアップ電子音 ● 7 = (音量が段階的にアップする電子音) 約4分間スヌーズ
- ●アラーム精度:±5分
- ●使用電池:単4形乾電池 1個
- ●電 池 寿 命:約1年 単4アルカリ乾電池(LRO3)を使用時 ※1日につきアラームを10秒間/ライトを2秒間使用した場合

#### 付属品

●取扱説明書(本書)1枚 ●保証書 1枚 ●モニター用電池(単4形乾電池)1個 ※付属の雷池は、工場出荷時に同梱された雷池です。お買い上げ後

製品仕様の年数に満たないうちに電池の寿命が切れることがあります。

(単4形乾電池 1個)

· /\

 $\langle \rangle$ 

アラームの針





※ふたを使って、時計を置く ことができます。

#### 例えば、7時に合わせたとき、6時55分 から7時5分の間に鳴りだします。

※時計まわりにアラームの針を回すと

セットした時刻より早く鳴りだすことがあります。

## 4. アラームを鳴らす/アラームを鳴らさない

アラームスイッチを「ON」にする ーセットした時刻になるとアラームが鳴ります。

アラームスイッチを「OFF」にする --アラームは鳴りません。

#### 5. 鳴っているアラームを一度止めて、 約4分後に再び鳴らす(スヌーズ機能)

スヌーズ/ライトボタンを押してください。 約30分間はこの操作を繰り返すことができます。 寝過ごし防止にご利用ください。 ※アラームを完全に止めるには、アラームスイッチをOFF にしてください。

●スヌーズ/ライトボタンを押している間はライトが点灯 します。

※スヌーズ/ライトボタンは構造上、6時と12時の上部付近が 反応しづらくなっています。

#### 必ずお読になってから ご使用ください。 使用場所・お手入れについて ▶

# く使用場所について> 下記のような場所では使用しないでください。時計や電池の品質が確保されなくなり、 精度不良や電池切れを起こすことがあります。また、本製品は業務用ではありません。 ●温度が50℃以上になる所や直射日光の当たる所。

- (例)屋外、または暖房器具などの熱風や火気に近い所。
- ●温度が一10℃以下になる所。

- 環知のの つけ。インタビ (なけ)。 電波ノイズを発生させるものの近く。 工場、台所など、多くの油を使用する所。 ビニール系素材の壁、敷物などの上。壁や敷物、および時計が汚れたり傷むことがあります。 ●温度や湿度の変化が激しい所。 寒い所から暖かい所への移動などにより、結露が生じることがあります。
- <お手入れについて>
- ●枠を清掃するときは、湿った、やわらかい布でふいてください。 ●汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。
- ●スイは、していたして、なくなりに、「したい」の「していた」」、
   ●お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種ブラシなどは使用しないでください。
   ●たさい。また、殺虫剤、ヘアスプレーなどがかからないようにしてください。 傷が付く恐れがあります

●この時計はメーカー保証です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応と なります.

保証・アフターサービス

- ●保証期間中の保証規定に基づいた修理品は、販売店がお預 かりし、メーカーが無料で修理いたします。必ず販売店名 が捺印された保証書を添えてご依頼ください。
- ●保証期間中でも無料修理の対象とならない修理品、および 保証期間経過後の修理品は、ご希望により有料で修理させ ていただきます。
- この時計の修理用部品は、製造終了後3年間保有しています。この期間は原則として修理が可能です。修理用部品とは、製品の機能を維持するために不可欠な時計本体の部品です。なお、修理可能な期間は、ご使用条件により異なります。また、修理可能な場合でも、元どおりの精度とならない場合があります。販売店とよくご相談ください。
   修理の際、部品・その他の付属品は、一部代替部品またはであった。
- 再生品を使用させていただくこともありますので、ご了承 ください
- <たさい。</p>
  ●有料修理の際は、本体の修理料金のほか、取扱店と修理工 場との間の往復運賃など、諸費用をお客様にご負担いただ きます。なお、修理代金が標準小売価格を上回る場合があ ります。あらかじめご預知ください。
  ●保証期間中・経過後ともに、修理を依頼されるときは本製 品を販売店にご持参ください。販売店で保証が受けられない場合は、お客様相談室にご相談ください。
- お客様が本製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりますので、ご注意く ださい
- ●ご不明な点は、お客様相談室にお問い合わせください。

必ずお守り ください。 安全上のご注意

#### ⚠ 警 告 死亡または重傷を負う恐れがある内容

(1)充電、ショート、変形、分解、加熱、火中に投入などをしないでください。液漏れや発熱、破裂の原因となります。
(2)万一、アルカリ性溶液が皮膚や衣類に付着した場合は、きれいな水で洗い流してください。また、眼に入ったときは、さたいなであいたとないたとないなたをはないであったときは、そのないなたをいたであったときは、そのないなたをいた。そのないなたをいた。

きれいな水で洗った後、直ちに医師の治療を受けてくださ

#### 〈梱包用ポリ袋について〉

窒息する恐れがありますので、ポリ袋を絶対にかぶらない でください。

▲ 注 意 けがをしたり家財に損害を与える恐れがある内容 <時計の設置場所について>

- 落下や転倒により、けがをしたり器物を破損する恐れがあ りますので、振動のある場所や、不安定な場所には時計を 設置しないでください。
- 〈雷池について〉
- 下記の注意事項を必ず守ってください。電池の使い方を間 違えると、液漏れや破裂により、本製品の故障やけがの恐れがあります。
- (1)製品仕様に記載された電池寿命を経過した場合は、時計が るの目体に記載された電池なりに電池を設置した場合は、時日が まだ動いていても、新しい電池と交換してください。また、 時計を使わないときは、電池を取り外してください。電池 を入れたままにしておくと、寿命の切れた電池からの液漏 れなどにより、時計や周囲の物を汚したり、傷めたりする 恐れがあります。
- (2)電池は必ず○側から入れてください。また、⊕⊖を正しく 入れてください。
- (3)付属の電池は充電式ではありません。充電すると液漏れや 破裂の恐れがあります
- (4)電池に直接ハンダ付けしたり、水滴を付けたりしないでく ださい
- にとい。 にして、 にの してください。 また、 使用済みの 電池は速やかに処分する か、幼児の手の届かない所に保管してください。 (6)時計が動かないなどの場合、電池の端子が汚れていること
- があります。そのときは、やわらかい布で乾ぶきしてくだ さい
- (7)付属の電池は、工場出荷時に同梱された電池です。お買い 上げ後、製品仕様の年数に満たないうちに電池寿命が切れ ることがあります。
- (8)充電式電池や初期電圧が高い電池を使用しないでください。 正常に動作しなかったり、電池寿命が短くなるなどの不具 合が発生する場合があります。

## 故障かなと思ったときには

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。 なお、新しい電池と交換する場合は、電池の使用推奨期限をご確認のうえご使用ください。

症状	考えられる原因	処置
針が動かない。	<ul> <li>・電池が入っていない。</li> <li>・電池が正しい向きで入って いない。</li> </ul>	<ul> <li>新しい電池を、電池の向きを確 かめて入れてください。</li> </ul>
	<ul> <li>電池端子や接片が汚れている。</li> </ul>	<ul> <li>・電池端子や接片の表面を拭いてください。</li> <li>また、電池を入れて2~3回</li> </ul>
		まわしてください。
アラームが鳴らない。		・アラームスイッチを <b>ON</b> にして
	なっている。	ください。

本製品、またはアフターサービスなどについてご不明な点がありましたら、 製品の裏面または底面に表示されている製品番号(品番)をご確認のうえ、

下記お客様相談室にお問い合わせください。

(例:QQ000、AC000、SQ000など)

## Alarm Clock

#### Instruction Manual

Thank you for purchasing a clock. Please read the instructions carefully for proper and safe use of your clock before using it, and retain this manual for future reference

#### SEIKO CLOCK CUSTOMER SERVICE

Toll free 0120-315-474

www.seiko-clock.co.ip (Japanese language website)

#### Sales Representative SEIKO CLOCK INC.

INSTRUCTION MANUAL No. FQQ-017P

### HOW TO USE



[ Rear : The battery cover opened]



Cover

\*Turn the cover to stand the clock.

Make sure to read before use

<Location>

#### Instructions are subject to change without prior notice. The appearance of the figures in the instructions may differ from the actual display due to printing limitations. SEIKO CLOCK is not responsible for any additional expenses or losses that result from the use of this clock. Any amendment or copying of this instruction manual without the permission of SEIKO CLOCK is prohibited.

#### Specifications

- Loss/gain(monthly rate) : ±30 seconds at normal temperature range (5°C~35°C)
- Operational temperature range : -10°C ~50°C
  Alarm : Ascending beep with 4 minute snooze
- Battery : "AAA" size battery 1 pc.
- Accuracy of the alarm : ±5 minutes
- Battery life : Use the alkaline type(LR03) ··· Approx.1year \*Use the alarm:10seconds/day and the light:2seconds/day \*The above specifications are subject to change without
- prior notice for product improvement.

#### Accessories

• One instruction manual One guarantee certificate • "AAA" size battery 1 pc (R03 for test ).

## (While the design of the clock differs depending on the model, the method of operation is the same.)

#### 1. Set the battery. ("AAA" size battery 1 pc.)

Open the battery cover and insert a fresh, good quality battery. Be sure to position the positive (+) and negative (-) correctly. \*Do not use the rechargeable battery and Hi-volt type.

#### 2. Set the time.

Turn "KNOB-2" in the direction of  $\bigcup$  to set the time.

#### 3. Set the alarm time.

Turn "KNOB-1" in the direction of 
to set the alarm time. - Be sure to turn the alarm hand for

counterclockwise.

- The alarm starts ringing during the time period between 5 minutes before and 5 minutes after the designated time.



- (For example, if the alarm is set to 7:00, it will start ringing between 6:55 and 7:05.)

#### 4. Engagement / disengagement of the alarm.

Slide "ALARM switch" to ON position.

- ---- The alarm rings at the designated time.
- Slide "ALARM switch" to OFF position.
  - ---- Stop and disengage the alarm.

#### 5. To stop the alarm and ring it again about 4 minutes later.

Press "SNOOZE/LIGHT button", and the alarm stops and rings again about 4 minutes later.(snooze)

Snooze function works for about 30 minute.

- \* To stop and disengage the alarm, slide "ALARM switch" to OFF position.
- The clock lights while "SNOOZE/LIGHT button" is pressed. \*Note: Due to the machanism of this clock, "SNOOZE/LIGHT button" around 6H and 12H may not work properly.

# AFTERSALES SERVICE AND GUARANTEE

- •We certify your SEIKO clock is guaranteed against defects in material and workmanship. Refer to the guarantee attached to the clock for further details. This guarantee is valid only in Japan. Aftersales service is also available only in Japan.
- •If your clock malfunctions during the course of normal use while under guarantee, we will regulate, adjust, repair, or replace it at no cost to you. Please bring your clock to the A malfunction which is not covered by our guarantee or which is not covered by our guarantee or that
- has occurred after the expiration of the guarantee will be repaired at your expense, if you request to have your clock repaired.
- A stock of replacement parts for SEIKO clocks will be kept for 3 years. In principle, your clock can be repaired within this period. The replacement parts mean the parts essential to maintaining the functional integrity of the clock. Please note that, depending on the conditions of use, your clock may not be able to be reconditioned or its accuracy may not be restored. When you request repairs, please consult the retailer from whom you purchased the clock.
- •Please note that, if the clock parts or accessories are damaged, some alternative parts may be used for repairs.
- •During the guarantee period or after the expiration of the guarantee, if your clock needs repairs, please bring your clock to the retailer from whom you perchased the clock.
- •In case of a malfunction which is not covered by our guarantee or a malfunction that has occurred after the guarantee period has elapsed, repair expenses, transfer fees from the retailer to our factory, and other expenses are subject to charge. Please note that these expenses may exceed the retail price of the clock.
- •If you disassemble the clock, the clock cannot be repaired. Any defects caused by disassembly on your own is not covered by the guarantee.

#### Make sure to observe. SAFETY PRECAUTIONS

#### ▲ WARNING

- <Remarks on alkaline batteries> (1) Never attempt to short circuit, recharge, dismantle, or heat the alkaline batteries, or place them in a fire. This may cause an explosion or a leak of the alkaline solution inside
- (2) If your skin or clothing comes into contact with the alkaline solution, rinse with clean water. If the solution gets into your eyes, rinse eyes with clean water and the determined intervent.
- consult a doctor immediately.
- Consult a doctor minimulately. **Remarks on plastic bag packaging>**Never put a plastic bag over your head or face.

## ▲ CAUTION

Context A con

## damage to property. <Remarks on batteries>

Please be sure to observe the following correct battery usage. Misusing the batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury

- (1) Insert the batteries following the (+) and (-) polarity diagram.
- (2) If you replace the batteries, replace all of them at one time with new ones as specified.
- (3) The included batteries are not rechargeable. If you attempt to recharge them, a battery leakage or a battery explosion
- may occur. (4) Do not solder anything directly to the batteries nor drop water on the batteries.
- (5) Do not expose the batteries to direct sunlight or where the temperature and humidity are high when storing the batte-
- (6) Remove the batteries when the clock is not used for a long time.
- (7) As the included batteries are for test, their actual lives may be shorter than the specified period.(8) Do not use rechargeable batteries and Hi-volt type.

#### LOCATION AND CARE OF YOUR CLOCK

- Avoid using your SEIKO clock in the following places. Otherwise, the quality of the product and batteries may not be ensured, resulting in warmer place. trouble in precision or battery exhaustion. This <Care of your clock>
- product is not for commercial use. • Under conditions where the temperature is below -10°C
- Under conditions where the temperature is above 50°C or where the product is exposed to direct sunlight. For example, outdoors, places exposed to hot air caused by heating appliances, etc., or close to flames.
- Moist, humid environments such as a bathroom places splashed with water and places directly exposed to steam from humidifying devices
- · Places exposed to strong magnetic fields or vibrations, or unstable places.
- The kitchen and factory where much oil is used. • Dusty places.
- Close to sources that create radio static.

· Places where temperature or humidity changes rapidly. Dew condensation may occur when the product is moved from a colder place to a

- When cleaning the clock case, wipe it with a soft moist cloth. If the clock case becomes excessively dirty,
- wipe it with a soft cloth moistened with a small amount of diluted detergent, and wipe again with a dry cloth.
- Do not use benzene, thinner or alcohol, cleanser or brushes to clean the clock case. Also, do not expose the clock to insecticide or hair spray. Otherwise, discoloration or damage may occur.

#### TROUBLESHOOTING 🕨

When the product does not operate normally, refer to the table below to check before requesting repair. And when replacing the batteries with new ones, check the recommended period of use before use

Symptom	Possible Cause	Treatment
The second/minute hand does not move.	-No batteries. -The batteries are set reversely.	-Please set the new batteries with checking the (+),(-) direction.
	-The batteries or terminals are stained.	-Please clean the batteries and terminals, and when you set the batteries, turn them 2 or 3 times.
The alarm does not ring.	- "ALARM switch" is turned OFF.	-Turn ON "ALARM switch."

Should you have any questions concerning a clock or aftersales service, confirm the serial number on the back of the case or the bottom of the clock, and contact the SEIKO CLOCK CUSTOMER SERVICE.

(Examples of serial numbers : QQ000, AC000, SQ000, etc.)