

デジタルタイマー

取扱説明書

INSTRUCTION MANUAL : English follows Japanese.

この度は弊社商品をお買い上げいただき、誠にありがとうございました。
ご使用前にこの取扱説明書をよくお読みのうえ、正しくご使用くださいますよう、
お願い申し上げます。
なお、この取扱説明書はお手元に保管し、必要に応じてご覧ください。

- ・この取扱説明書の内容は、将来予告なく変更することがあります。あらかじめご了承ください。
- ・印刷による制限のため、この取扱説明書中の図が実際の表示と異なる場合があります。
- ・本製品によって生じた、いかなる支出、損益、その他の損失に対して、弊社は一切の責任を負いません。
- ・この取扱説明書の内容の一部またはすべてを、製造者の許可なく転載・変更・複製することは禁じられています。

はじめに

安全上のご注意ならびにその他の注意事項をお読みのうえ、ご使用ください。
表示部にシールが貼ってある場合は、ゆっくりはがしててください。
※静電気により黒い線、しみなどが発生することがありますが、しばらく放置しますと元に戻ります。

付属品 ご使用の前に確認してください。

ご使用の前に確認してください。

- チラシ 1枚
- 保証書 1枚
- モニター用電池（単4形乾電池） 2個

※付属の電池は、工場出荷時に同梱された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池の寿命が切れることがあります。

必ずお守りください。 安全上のご注意

⚠ 警 告 死亡または重傷を負う恐れがある内容

<アルカリ電池について>

- (1) 充電、ショート、変形、分解、加熱、火中に投入などをしないでください。液漏れや発熱、破裂の原因となります。
- (2) 万一、アルカリ性溶液が皮膚や衣類に付着した場合は、きれいな水で洗い流してください。また、目に入ったときは、きれいな水で洗った後、直ちに医師の治療を受けてください。

<梱包用ポリ袋について>

窒息する恐れがありますので、ポリ袋を絶対にかぶらないでください。

<液晶パネルについて>

液晶パネルが破損すると、破損した部分から液晶（液状）が漏れたり、ガラスの破片が飛び散ることがありますので、十分注意してください。万一、以下の状態になったときは、それぞれの応急処置を行ってください。

- (1) 皮膚に付着した場合
付着物をふき取り、水で流し、石けんでよく洗浄してください。
- (2) 目に入った場合
きれいな水でよく洗い流し、最低 15 分間洗浄した後、医師の診断を受けてください。
- (3) 飲み込んだ場合
水でよく口の中を洗浄してください。大量の水を飲んで吐き出した後、医師の診断を受けてください。

⚠ 注 意 けがをしたり家財に損害を与える恐れがある内容

<製品の設置場所について>

落下や転倒により、けがをしたり器物を破損する恐れがありますので、振動のある場所や、不安定な場所には本製品を設置しないでください。

<電池について>

下記の注意事項を必ず守ってください。電池の使い方を間違えると、液漏れや破裂により、本製品の故障やけがの恐れがあります。

- (1) 製品仕様に記載された電池寿命を経過した場合は、本製品がまだ動いていても、すべて新しい電池と交換してください。また、本製品を使わないときは、電池をすべて取り外してください。電池を入れたままにしておくと、寿命の切れた電池からの液漏れなどにより、本製品や周囲の物を汚したり、傷めたりする恐れがあります。
- (2) 電池は必ず ⊖ 側から入れてください。また、⊕ ⊖ を正しく入れてください。
- (3) 付属の電池は充電式ではありません。充電すると液漏れや破裂の恐れがあります。
- (4) 電池に直接ハンタ付けしたり、水滴を付けたりしないでください。
- (5) 直射日光の当たる場所や、高温・多湿の場所を避けて保管してください。また、使用済みの電池は速やかに処分するか、幼児の手の届かない所に保管してください。
- (6) 本製品が動かないなどの場合、電池の端子が汚れていることがあります。そのときは、やわらかい布で乾布きしてください。
- (7) 付属の電池は、工場出荷時に同梱された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池寿命が切れることがあります。
- (8) 充電式電池や初期電圧が高い電池を使用しないでください。正常に動作しなかったり、電池寿命が短くなるなどの不具合が発生する場合があります。

<磁石について>

- (1) 裏面に磁石が付いているので、鉄製のホワイトボードなどに付けることができますが、衝撃・振動などで落ちないことを確かめてください。
- (2) 磁石面と磁気カード（キャッシュカードなど）を重ねると磁気カードに記憶されている内容が損なわれることがありますので注意してください。

<LEDライトについて>

直視しないでください。目を傷める原因となります。

<分解や改造をしない>

本製品を分解したり、改造したりしないでください。本製品の故障やけがの恐れがあります。

<製品と電池の廃棄について>

お住まいの自治体の定める規則に従い、廃棄してください。

必ずお読みになってからご使用ください。

■ 使用上のご注意

- 本製品にはマイコンが内蔵されています。静電気などにより誤動作することがありますが、故障ではありません。誤動作した場合は、電池を入れ直してください。

<液晶パネルについて>

- 見る方向によって表示が薄くなったり、ムラになったりすることがあります。
- 温度が低くなると液晶表示の反応が遅くなることがあります。
- 温度が高くなると液晶パネル面が黒くなり、判読できなくなることがあります。
- 湿度が低く、静電気や圧力を加えることにより、黒い線・しみ・縞模様が発生することがありますが故障ではありません。しばらく放置しますと元に戻ります。
・表示部のシールをはがしたり、乾いた布などで拭いたとき
・指などで液晶パネルを押したとき


■ 使用場所について

下記のような場所では使用しないでください。本製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。
また、本製品は業務用ではありません。

- 温度が50℃以上になる所や直射日光の当たる所。
（例）屋外、または暖房器具などの熱風や火気に近い所。
- 湿度が一10℃以下になる所。
プラスチック製の部品や電池が劣化することがあります。
- ちり・ほこりの多い所。
- 大型テレビ・スピーカーのそばや、強い磁気のある所。
磁気の影響で、進み・遅れが生じたり、時計が止まることがあります。
- サウナや浴槽など水の中、加湿器の蒸気が直接当たるような所。
- 振動のある所。不安定な所。
- 工場、台所など、多くの油を使用する所。
- ビニール系素材の壁、敷物などの上。
壁や敷物、および本製品が汚れたり傷むことがあります。
- 温度や湿度の変化が激しい所。
寒い所から暖かい所への移動などにより、結露が生じることがあります。

ご使用方法

■ 各部の名称

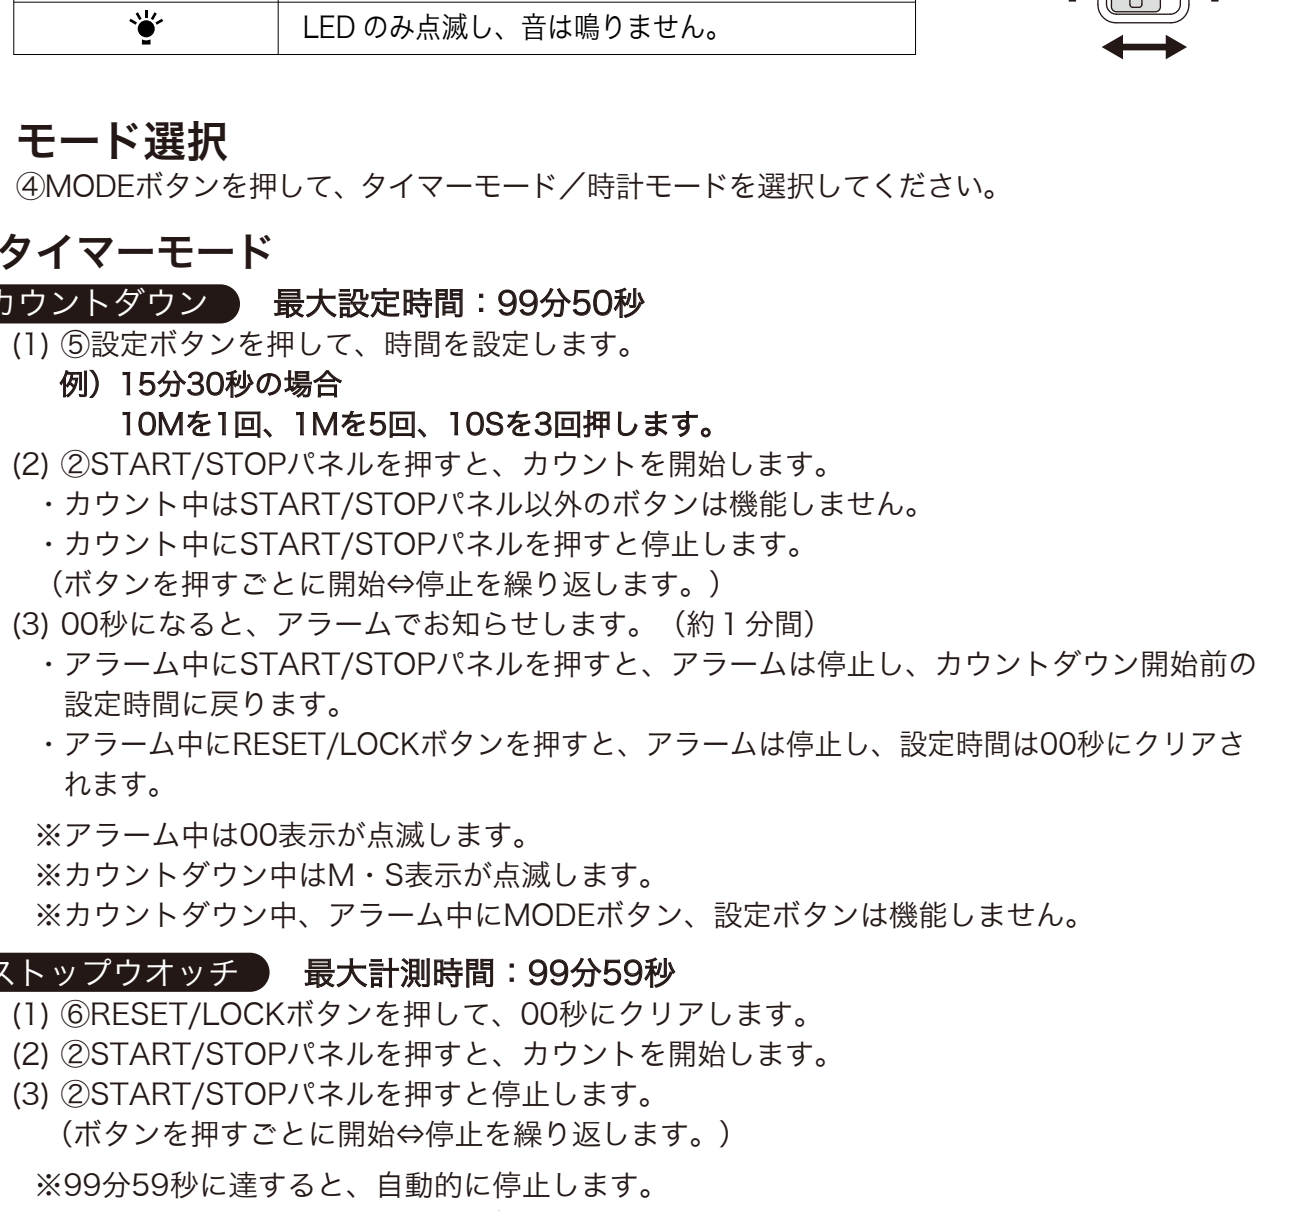

■ ご使用方法

1 電池を入れる（単4形乾電池 2個）

本体裏面の電池ふたを開けてください。
※電池ふたの(A)部を軽く押しながら矢印方向へスライドさせてください。
電池を ⊖ 側から入れてください。

- 注意**
- 電池の⊕ ⊖ の向きを間違えないように注意してください。
 - 種類の異なる電池を混ぜて使用しないでください。
 - 充電式電池や初期電圧の高い電池を使用しないでください。
正常に動作しなかったり、電池寿命が短くなるなどの不具合が発生する場合があります。

2 アラームを選択

③切替スイッチでアラームを設定してください。

切替スイッチ	アラームの設定内容
☾☼+🔊	LED が点滅し、アラーム・操作音が鳴ります。
🔊	LED のみ点滅し、音は鳴りません。

3 モード選択

④MODEボタンを押して、タイマーモード／時計モードを選択してください。

● タイマーモード

カウントダウン 最大設定時間：99分50秒

- (1) ⑤設定ボタンを押して、時間を設定します。
例) 15分30秒の場合
10Mを1回、1Mを5回、10Sを3回押します。
- (2) ②START/STOPパネルを押すと、カウントを開始します。
・カウント中はSTART/STOPパネル以外のボタンは機能しません。
・カウント中にSTART/STOPパネルを押すと停止します。
（ボタンを押すごとに開始⇄停止を繰り返します。）
- (3) 00秒になると、アラームでお知らせします。（約 1 分間）
・アラーム中にSTART/STOPパネルを押すと、アラームは停止し、カウントダウン開始前の設定時間に戻ります。
・アラーム中にRESET/LOCKボタンを押すと、アラームは停止し、設定時間は00秒にクリアされます。

※アラーム中は00表示が点滅します。
※カウントダウン中はM・S表示が点滅します。
※カウントダウン中、アラーム中にMODEボタン、設定ボタンは機能しません。

ストップウォッチ 最大計測時間：99分59秒

- (1) ⑥RESET/LOCKボタンを押して、00秒にクリアします。
- (2) ②START/STOPパネルを押すと、カウントを開始します。
- (3) ②START/STOPパネルを押すと停止します。
（ボタンを押すごとに開始⇄停止を繰り返します。）

※99分59秒に達すると、自動的に停止します。
※ストップウォッチ停止中に設定ボタンを押し、START/STOPパネルを押すと、カウントダウンを開始します。

● 時刻モード

時刻の設定

- (1) ④MODEボタンを2秒以上押し続けて下さい。
・表示が点滅し、時刻設定モードになります。
- (2) ⑤設定ボタン(10M, 1M)を押し、現在の時刻に合わせて下さい。
・約1分以上、設定ボタンが押されなかった場合は、自動的に時刻設定モードが終了します。
・設定ボタン、MODEボタンが押される度に、“秒”の値はリセットされます。
- (3) 時刻設定後、④MODEボタンを押して時計モードに切り替えて下さい。
・タイマーモードに切り替えても時刻は進みます。

注意 ・START/STOPパネルは指の腹でしっかりと触れてください。

便利な機能

■ ロック機能

誤操作を防止するため、RESET/LOCKボタン以外の操作をロックすることができます。

- (1) ⑥RESET/LOCKボタンを約2秒以上押し続けるとボタンをロックできます。
・ロック中は、RESET/LOCKボタン以外のボタンが機能しません。
・操作音も発しません。
・時計モードまたは、タイマーが動いている時はロックできません。
- (2) 再度⑥RESET/LOCKボタンを約2秒以上押し続けるとロックが解除されます。

■ 設置について

多様な設置の方法があります。

- (1) 机やテーブルの上など平らな場所に置いてご使用になれます。
- (2) 磁石を使って壁面に付けて使用
裏面の磁石を利用して冷蔵庫など鉄製の壁面に付けてご使用になれます。
- (3) ストラップを使って下げて使用
ストラップ取付用の穴が1カ所あります。フックなどに掛けたり首に掛けたりしてご使用になれます。
※ストラップは付属しません。

その他

- カウント中に設定ボタンを押しても、カウントは続行されます。
（この場合、操作音は鳴りません。）
- 電池を入れた時、時刻はAM 12:00に設定されています。

お手入れについて

- 本体を清掃するときは、濡めた、やわらかい布でふいてください。
- 汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。その後、やわらかい布で乾布きしてください。
- お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種ブラシなどは使用しないでください。また、殺虫剤、ヘアスプレーなどがからないようにしてください。変色したり、傷が付く恐れがあります。

故障かな？と思ったときは

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。なお、新しい電池と交換する場合は、電池の使用推奨期限をご確認のうえご使用ください。

症 状	考えられる原因	処 置
表示が出ないまたは表示が欠けている	・電池が入っていない。	・新しい電池を、向きを確かめながら入れてください。
	・電池の容量が少なくなっている。	・電池を正しく入れ直してください。
アラームが鳴らない (LEDが点滅しない)	・電池の端子や電池ボックスの接片が汚れている。	・電池の端子や電池ボックスの接片の表面を拭いてください。また、電池を入れた後、電池を2～3回回転させてください。
	・電池の容量が少なくなっている。	・新しい電池を、向きを確かめながら入れてください。

製品仕様 改良のため予告なく変更する場合があります。

精 度：タイマー…±1秒（99分50秒で設定）
時 計…平均月差±30秒（気温5℃～35℃で使用した場合）
使用温度範囲：- 10℃～50℃（液晶表示部 判読可能温度範囲：0℃～40℃）
タ イ マー：カウントダウン …最大設定 99分50秒
ストップウォッチ…最大設定 99分59秒
ア ラ ム：電子音、LEDライト、タイムアップ約1分間
使 用 電 池：単4形乾電池 2個
電 池 寿 命：約1年 単4アルカリ乾電池（LR03）を2個使用時
約1日あたり、アラームを20秒間使用した場合

※電池の寿命はご使用の条件によって変わります。

保証・アフターサービス

- 本製品はメーカー保証です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応となります。
- 保証期間外の保証規定に基づいた修理品は、販売店がお預かりし、メーカーが無料で修理いたします。必ず販売店名が捺印された保証書を添えてご依頼ください。
- 保証期間中でも無料修理の対象とならない修理品、および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
- 本製品の修理用部品は製造終了後3年間保有しています。この期間は原則として修理が可能です。修理用部品とは製品の機能を維持するために不可欠な製品本体の部品です。なお、修理可能な期間 は、ご使用条件により異なります。また、修理可能な場合でも、元通りの精度とならない場合 があります。販売店とよくご相談ください。
- 修理の際、部品・その他の付属品は、一部代替部品または再生品を使用させていただくこともありますので、ご了承ください。
- 有料修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃など、諸費用をお客 様に負担いただきます。なお、修理代金が標準小売価格を上回る場合があります。あらかじめご 承知ください。
- 保証期間中・経過後ともに、修理を依頼されるときは本製品を販売店にご持参ください。販売店で 保証が受けられない場合は、クロックお客様相談室にご相談ください。
- お客様が本製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりま すので、ご注意ください。
- ご不明な点は、クロックお客様相談室にお問い合わせください。

お問い合わせについて

本製品、またはアフターサービスなどについてご不明な点がございましたら、製品の裏面または底面に表示されている製品番号（品番）をご確認のうえ、下記クロックお客様相談室にお問い合わせください。

（例：MT○○○、BC○○○、CQ○○○など）

クロックお客様相談室 0120-315-474

<https://www.seikowatches.com/jp-ja/>

発売元

セイコーウォッチ株式会社

DIGITAL TIMER

INSTRUCTION MANUAL

Thank you for purchasing a SEIKO clock.

Please read the instructions carefully for proper and safe use of your SEIKO clock before using it, and retain this manual for future reference.

- Instructions are subject to change without prior notice.
- The appearance of the figures in the instructions may differ from the actual display due to printing limitations.
- SEIKO WATCH is no responsible for any additional expenses or losses that result from the use of this clock.
- Any amendment or copying of this instruction manual without the permission of SEIKO WATCH is prohibited.

INTRODUCTION

Please be sure to observe the following safety precautions and other cautions before use.

If a protective film is attached to the display, remove it slowly before using the clock.

※Static electricity may cause black lines or spots to appear on the display, but this is not malfunction. Leave it for a while to be back to normal.

ACCESSORY Check the included accessories before use.

- One leaflet
- One guarantee certificate
- AAA alkaline batteries(JIS standard : LR03), 2 pcs.

Make sure to observe. SAFETY PRECAUTIONS

⚠ WARNING May cause death or serious injury.

<Remarks on alkaline batteries>

(1) Never attempt to short circuit, recharge, dismantle, or heat the alkaline battery, or place it in a fire. This may cause a leak of the alkaline solution inside the battery, and if the solution should get into your eyes, it will cause damage. Additionally, the battery may generate intense heat or explode.

(2) If your skin or clothing comes into contact with the alkaline solution, rinse with clean water. If the solution gets into your eyes, rinse eyes with clean water and consult a doctor immediately.

<Remarks on plastic bag packaging>

Never put a plastic bag over your head or face.

<Remarks on liquid crystal panel>

If the liquid crystal panel of the clock is broken, care should be taken to avoid injury. In the case of any of the incidents below, take the following emergency steps;

(1) If your skin is in contact with the liquid crystal, gently wipe away, rinse your skin with clean water.

(2) If the liquid crystal gets into your eyes, rinse your eyes with clean water for more than 15 minutes, and consult a doctor immediately.

(3) If the liquid crystal is swallowed, rinse the inside of the mouth, drink an excessive amount of water so as to induce vomiting, and consult a doctor immediately.

⚠ CAUTION May cause injury or damage to property.

<Remarks on places where the clock is installed>

Do not install the clock in a place subject to vibration or an unstable place where the clock may fall resulting in injury or damage to property.

<Remarks on batteries>

Please be sure to observe the following correct battery usage. Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of a clock or personal injury.

- Insert batteries into the battery holders, locating the positive (+) and negative (-) ends correctly.
- If the battery life described in the product specifications has passed, replace all batteries with new ones as specified in this manual even when the clock is still working. Also, remove all batteries if you do not use the clock. If only one of the batteries is replaced or old batteries are kept inside, other parts may stop or liquid leakage from old batteries may contaminate or damage the clock.
- Charging may result in liquid leakage or damage because included batteries are not rechargeable types.
- Do not directly solder the batteries, and do not drop water on the batteries.
- For storage, avoid places exposed to direct sunlight, high temperatures and high humidity. Immediately dispose of used batteries and keep them away from children in the case of storage.
- When the clock does not work, the battery terminals may be contaminated. Clean the terminals with a soft cloth.
- As the initial batteries are inserted at the factory, their actual lives once in your possession may be shorter than the specified period.

<Do not disassemble or remodel the clock>

Disassembling or remodeling of the clock may lead to malfunction or injury.

<Disposal of the clock and batteries>

Dispose of the clock and batteries following the regulations of a local government where you live.

Make sure to read before use.

■ Precautions for use

<Remarks on liquid crystal panel>

- Depending on the direction of the clock, the digital display may be faint or uneven.
- When the clock is operated in low temperatures, the response of the digital display may become slower.
- When the clock is operated in high temperatures, the liquid crystal panel may become dark and may not be readable.
- Do not touch the liquid crystal panel, as the digital display may become faint or uneven. If the panel is touched, leave it untouched for a while, and the display will return to normal.

■ Location of use

Avoid using your SEIKO clock in the following places.


Otherwise, the quality of the product and batteries may not be ensured, resulting in trouble in precision and battery exhaustion. This product is not for commercial use.

- Under conditions where the temperature is below -10°C
- Under conditions where the temperature is above 50°C or where it is exposed to direct sunlight: for example, outdoors, places exposed to hot air caused by heating appliances, etc., or close to flames
- Do not place in moist, humid environments such as in a bathroom, places splashed with water and places directly exposed to steam from humidifying devices
- Also, do not place near areas exposed to strong magnetic fields or vibrations or unstable places
- Close to sources that create radio static


HOW TO USE

■ Switch and Buttons


[Front]

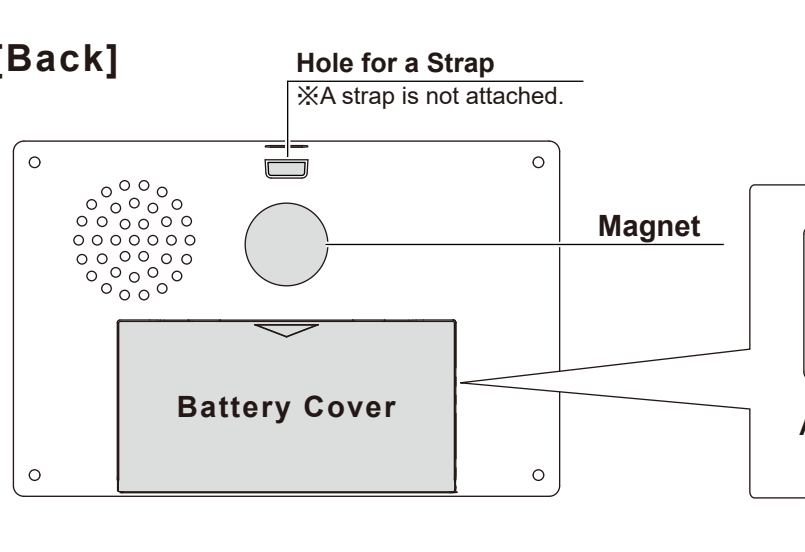

[Back]

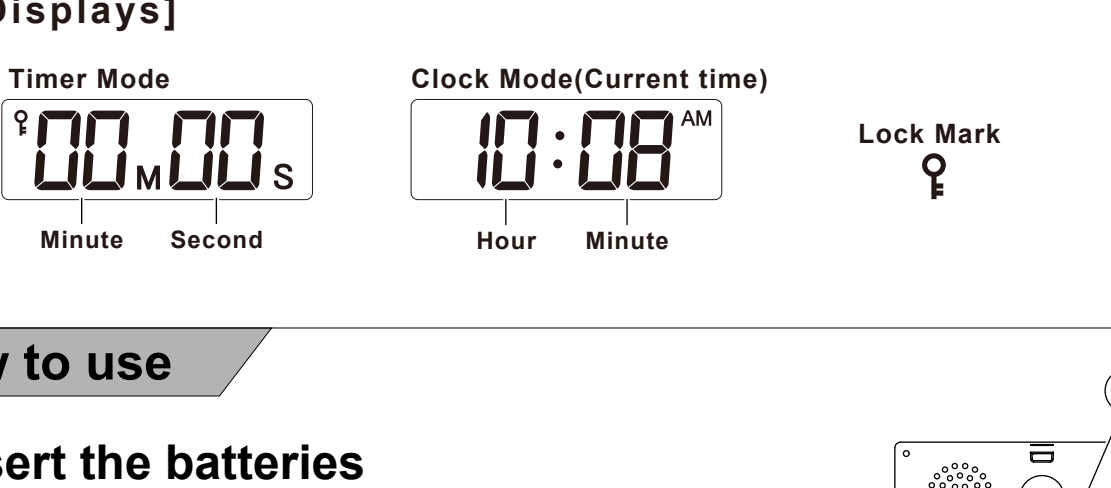

[Displays]

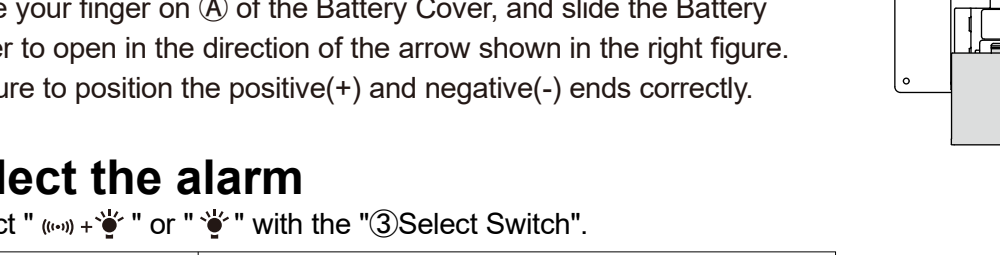

■ How to use

1 Insert the batteries

(AAA alkaline batteries(JIS standard:LR03)), 2 pcs.

Place your finger on (A) of the Battery Cover, and slide the Battery Cover to open in the direction of the arrow shown in the right figure.


Be sure to position the positive(+) and negative(-) ends correctly.



2 Select the alarm

Select " (b=) + " or " " with the "③Select Switch".

Select Switch	Alarm operation
(b=) +	LED flashes and the alarm rings. Also the buttons sound when pushed.
	Only LED flashes. (No sound)

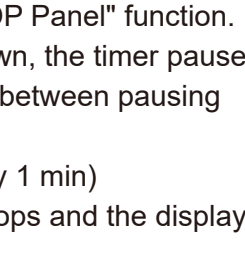

3 Select the mode

Press the "④MODE Button" and select the Timer Mode or the Clock Mode.

● Timer Mode

Count down Max : 99 min 50 sec

- Press the "⑤Setting Button" and set the count down timer.
e.g. To set the timer for 15 min 30 sec:
Press 10M once, 1M five times and 10S three times.
- When the "②START/STOP Panel" is pressed, the count down timer starts.
 - While the timer is counting down, no buttons except the "②START/STOP Panel" function.
 - If the "②START/STOP Panel" is pressed while the timer is counting down, the timer pauses. (Each time the "②START/STOP Panel" is pressed, the timer alternates between pausing and resuming.)
- When the timer reaches 0 sec, the alarm is activated. (For approximately 1 min)
 - If the "②START/STOP Panel" is pressed during the alarm, the alarm stops and the display returns to the designated count down time.
 - If the "⑥RESET/LOCK Button" is pressed during the alarm, the alarm stops and the timer is reset to 0 sec.

Stopwatch Max : 99 min 59 sec

- Press the "⑥RESET/LOCK Button" and reset the timer to 0 sec.
- Press the "②START/STOP Panel" to start.
- If the "②START/STOP Panel" is pressed when the stopwatch is counting up, the stopwatch pauses.
(Each time the "②START/STOP Panel" is pressed, the stopwatch alternates between pausing and resuming.)

※The stopwatch automatically stops at 99 min 59 sec.

※If the "⑤Setting Button" is pressed when the stopwatch pauses and then the "②START/STOP Panel" is pressed, the count down timer starts.

● Clock Mode

Time setting mode

- Press the "④MODE Button" until the display flashes. (For more than 2 sec)
- Set the time with the "⑤Setting Button".
 - If the "⑤Setting Button" is not pressed for more than 1 sec, the time setting mode automatically ends.
- Press the "④MODE Button" and switch the clock to the Clock Mode.
 - Even if the clock is switched into the Timer Mode, the time keeps counting.

CAUTION • Press the "②START/STOP Panel" firmly.

OTHER FUNCTIONS

■ Lock function

All buttons except "⑥RESET/LOCK Button" can be locked to prevent misoperations.

- If the "⑥RESET/LOCK Button" is pressed for more than 2 sec, other buttons are locked.
 - When the buttons are locked, all operation sounds are muted.
 - The lock function cannot be activated if the clock is in the Clock Mode or the timer is counting.

- If the "⑥RESET/LOCK Button" is pressed for more than 2 sec again, the buttons are unlocked.

■ Install the clock

This clock can be installed in various places.

- Used on a flat place such as a table or a desk.
- Put on an iron wall with a magnet on the backside.
- Hung on a hook or worn from your neck by putting a strap on a hole of the clock.

※A strap is not attached.

OTHER

- Even if the "⑤Setting Button" is pressed while the timer is counting, the timer continues. (All operation sounds are muted.)

- When the batteries are inserted, the display shows "12:00 AM".

CARE OF YOUR CLOCK

- When cleaning the clock case, wipe it with a soft moist cloth.
- If the clock case becomes excessively dirty, wipe it with a soft cloth moistened with a small amount of diluted detergent, and wipe again with a dry cloth.
- Do not use benzene, thinner, alcohol, cleanser or brushes, to clean the clock case. Also, do not expose the clock to insecticide or hair spray. Otherwise, discoloration or damage may occur.

TROUBLESHOOTING

When the product does not operate normally, refer to the table below to check before requesting repair. And when replacing the batteries with new ones, check the recommended period of use before use.

Symptom	Possible Cause	Treatment
Nothing is displayed.	• There are no batteries in the clock. • The battery charge is low.	• Insert new batteries ensuring that the direction of the battery is correct.
	• The positive (+) and negative (-) portions of the batteries are positioned incorrectly.	• Reinsert the batteries correctly.
The alarm does not ring (LED does not flash)	• There are no batteries in the clock. • The battery charge is low.	• Insert new batteries ensuring that the direction of the battery is correct.

PRODUCT SPECIFICATIONS

Accuracy : Timer ...±1sec

Clock ...±30sec/month (at a normal temperature range between 5°C and 35°C)

Operational temperature range : Between -10°C and 50°C (the display can be read between 0°C and 40°C)

Timer : Count down timer (Max 99 min 50 sec)

Stopwatch (Max 99 min 59 sec)

Alarm : Beep, LED (Auto stop : for approximately 1 min)

Battery : AAA alkaline batteries (JIS standard: LR3), 2 pcs

Battery life : Approximately 1 year

AFTERSALES SERVICE AND GUARANTEE

- We certify your SEIKO clock is guaranteed against defects in material and workmanship. Refer to the guarantee attached to the clock for further details. This guarantee is valid only in Japan. Also aftersales service is available only in Japan.
- If your clock malfunctions during the course of normal use while under guarantee, we will regulate, adjust, repair, or replace it at no cost to you. Please present your clock to the retailer from whom the clock was purchased with the valid guarantee on which the retailer's stamp is affixed.
- A malfunction which is not covered by our guarantee or that has occurred after the guarantee period has elapsed will be repaired at cost, if you request to have your clock repaired.
- A stock of replacement parts for SEIKO clocks will be kept for 3 years. In principle, your clock can be repaired within this period. Replacement parts are parts essential to maintaining the functional integrity of the clock. Please note that, depending on the conditions of use, your clock may not be able to be reconditioned or its accuracy may not be restored. Please consult the retailer from whom the clock was purchased when requesting repairs to your clock.
- Please note that, if the clock parts or accessories are damaged, some alternative parts may be used for repairs.
- During the guarantee period or after the guarantee period has elapsed, you may present a clock to the retailer from whom the clock was purchased to request repairs.
- In case of a malfunction which is not covered by our guarantee or a malfunction that has occurred after the guarantee period has elapsed, repair costs, transfer fees from the retailer to our factory, and other costs shall be paid by the owner of the clock. Please note that these costs may exceed the retail price of the clock.

INQUIRY

Should you have any questions concerning this product or aftersales service, confirm the product number on the back of the case or the bottom of the clock and contact the CLOCK CUSTOMER SERVICE CENTER.

(Examples of product numbers : MT0000, BC0000, CQ0000, etc.)

CLOCK CUSTOMER SERVICE CENTER

Toll Free 0120-315-474

<https://www.seikowatches.com/jp-ja/> (Japanese language website)

Sales Representative

SEIKO WATCH CORPORATION