

## **ご使用前にご確認ください：DA208 の仕様違いについて**

DA208 には、ボタン電池装着部の仕様違いにより、「ネジなしタイプ」と「ネジありタイプ」の 2 種類の製品があります。お手元の製品仕様に合った取扱説明書をご確認ください。

## **Before Use : Confirm Your DA208 Specifications**

Due to differences in the button battery compartment design, two versions of the DA208 are available: a “non-screw type” and a “screw type.”

Please refer to the manual that corresponds to your product's specifications.

# 目ざまし時計

電波クロック

## 取扱説明書

この度は弊社商品をお買い上げいただき、誠にありがとうございました。ご使用前にこの取扱説明書をよくお読みください。正しくご使用いただけますよう、お願い申し上げます。なお、この取扱説明書はお手元に保管し、必要に応じてご覧ください。

この取扱説明書の内容は、将来予告なく変更することがあります。あらかじめご了承ください。印刷による制限のため、この取扱説明書中の図が実際の表示と異なる場合があります。本製品によって生じた、いかなる支出、損益、その他の損失に対して、弊社は一切の責任を負いません。この取扱説明書の内容の一部またはすべてを、製造者の許可なく転載・変更・複製することは禁じられています。

本製品、またはアフターサービスなどについてご不明な点がありましたら、製品の裏面または底面に表示されている製品番号(品番)をご確認のうえ、下記クロックお客様相談室にお問い合わせください。

(例: DA○○○、BC○○○、SQ○○○など)

クロックお客様相談室 0120-315-474

<https://www.seikowatches.com/jp-ja/>

発売元

セイコーウォッチ株式会社

説明書番号 FDA-014W

## 電波クロックについて

### 〈電波時計／電波修正機能とは〉

正確な時刻およびカレンダー情報をのせた標準電波を受信することにより、自動的に時刻を修正・表示します。

### 〈標準電波とは〉


情報通信研究機構(NICT)が運用している時刻情報をのせた電波で、国内2カ所の標準電波送信所からそれぞれ異なる周波数で送信されています。標準電波の時刻情報はおよそ10万年に1秒の誤差という超高精度を保つ『原子時計』によるものです。

### 〈電波受信について〉

標準電波が受信可能な地域は条件によって異なりますが、送信所(東・西2カ所)からおおむね1000km～1200kmです。この製品は40kHz(東・福島送信所)、60kHz(西・九州送信所)のいずれかを受信しやすい電波を自動的に選択し受信します。ただし、天候、設置場所、時計の向き、時間帯、地形、建物の影響などによって受信できない場合があります。

### 〈ご注意〉

- 電波障害などによって、誤った時刻が表示される場合があります。また設置場所や電波状況によっては受信できないことがあります。そのようなときは、場所を変えてお使いください。
- 電波を受信できない場合は、内蔵クオーツの精度で動作します。
- 標準電波は、毎時15分と45分から各1分間は一部の時刻情報の送信が中断されます。また、設備のメンテナンスや落雷などの影響により電波の送信が停止(停波)することがあります。停波に関する情報は、情報通信研究機構日本標準時グループのホームページをご覧ください。(ホームページアドレス <https://jij.nict.go.jp/>)

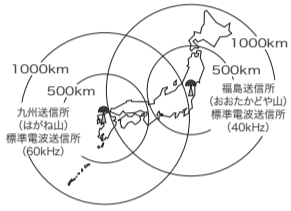

## 保証・アフターサービス

- 本製品はメーカー保証です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応となります。
- 保証期間中の保証規定に基づいた修理品は、販売店がお預かりし、メーカーが無料で修理いたします。必ず販売店名が捺印された保証書を添えてご依頼ください。
- 保証期間中でも無料修理の対象とならない修理品、および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
- 本製品の修理用部品は、製造終了後3年間保有しています。この期間は原則として修理が可能です。修理用部品とは、製品の機能を維持するために不可欠な製品本体の部品です。なお、修理可能な期間は、ご使用条件により異なります。また、修理可能な場合でも、元どりの精度と異なる場合があります。販売店とよくご相談ください。
- 修理の際、部品・その他の付属品は、一部代替部品または再生品を使用させていただくこともありますので、ご了承ください。
- 有料修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃など、諸費用をお客様にご負担いただきます。なお、修理代金が標準小売価格を上回る場合があります。あらかじめご承知ください。
- 保証期間中・経過後ともに、修理を依頼される場合は本製品を販売店にご持参ください。販売店で保証が受けられない場合は、クロックお客様相談室にご相談ください。
- お客様が本製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりますので、ご注意ください。
- ご不明な点は、クロックお客様相談室にお問い合わせください。

## 製品仕様 改良のため予告なく変更する場合があります

時間精度: 平均月差±30秒

(電波受信による時刻修正を行わない場合・気温5°C～35°Cで使用した場合)  
表示誤差±1秒(電波受信による時刻修正を行った直後)

使用温度範囲: 0°C～50°C(液晶表示部 判読可能温度範囲: 0°C～40°C)

アラーム: 音声と3段階に変化する電子音、約5分間オートストップ、約5分間スヌーズ  
(スヌーズは何回でも繰り返すことができます。)

カレンダー: 2000年1月1日～2099年12月31日のフルオートカレンダー(月末、うるう年とも修正不要)

表示内容: 日付(月・日⇄アラーム時刻)、曜日、AM/PM表示による12時間制または24時間制表示

使用電池: コイン型リチウム電池(CR2450) 1個

電池寿命: 約1年 コイン型リチウム電池(CR2450)を1個使用時  
※1日あたりアラームを音量:小で30秒間使用した場合

受信機能: ・自動受信… 毎日午前2時、以後3時間ごとに受信(受信から次の受信まではクオーツの精度で動作)  
・手動受信… ボタン操作による

受信結果確認機能: 受信マークで表示

時刻合わせ機能: 電波受信による自動セット、または手動セット

※電池の寿命はご使用の条件によって変わります。

## 故障かな?と思ったときは

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。なお、新しい電池と交換する場合は、電池の使用推奨期限をご確認のうえご使用ください。

症状	考えられる原因	処置
表示が出ない 音が出ない	・電池が入っていない。 ・電池の容量が少なくなっている。 ・電池が正しい向きに入っていない。 ・きちんとリセットされていない。	・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・電池を正しく入れ直して、確実にリセットボタンを押してください。 ・確実にリセットボタンを押してください。
表示が欠けている	・電池の容量が少なくなっている。 ・きちんとリセットされていない。	・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・確実にリセットボタンを押してください。
時刻またはカレンダー が合っていない	・受信に成功していない。 ・電池の容量が少なくなっている。 ・きちんとリセットされていない。	・「電波を受信できなかった場合」をお読みになり、再度受信させてください。 ・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・確実にリセットボタンを押してください。
進むボタン/戻るボタン 受信ボタン、時刻/日付 合わせボタンが効かない	・ロックスイッチが「ロックの位置」になっている。	・ロックスイッチを「セットの位置」に合わせてください。
アラームの音が鳴らない	・アラーム/時報スイッチがOFF、または 時報になっている。 ・電池の容量が少なくなっている。	・アラーム/時報スイッチをONにしてください。 ・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。

## 必ずお守りください 安全上のご注意

### ⚠ 危険 死亡または重傷を負う可能性が高い内容

#### 〈コイン型リチウム電池について〉

- (1) 電池は乳幼児の手の届かない所に置いてください。
- (2) 誤って電池を飲み込むと、化学やけどや粘膜組織の貫通などを引き起こし、すぐに取り出さないと、最悪の場合は死に至ることがあります。万一飲み込んだとき、または飲み込んだ恐れがあるときは、直ちに医師に相談してください。

### ⚠ 警告 死亡または重傷を負う恐れがある内容

#### 〈コイン型リチウム電池について〉

- (1) 充電、ショート、変形、分解、加熱、火中に投入などをしないでください。この電池は、リチウム、有機溶媒など可燃性物質を内蔵しており、発火、発熱、破裂の原因となります。
- (2) 電池を廃棄する場合および保存する場合には、テープなどで絶縁してください。他の金属や電池と混ぜると発火、破裂の原因となります。

#### 〈梱包用ポリ袋について〉

窒息する恐れがありますので、ポリ袋を絶対にかぶらないでください。

#### 〈液晶パネルについて〉

液晶パネルが破損すると、破損した部分から液晶(液状)が漏れたり、ガラスの破片が飛び散ることがありますので、十分注意してください。万一、以下の状態になったときは、それぞれの応急処置を行ってください。

- (1) 皮膚に付着した場合  
付着物をふき取り、水で流し、石けんでよく洗浄してください。
- (2) 目に入った場合  
きれいな水でよく洗い流し、最低15分間洗浄した後、医師の診断を受けてください。
- (3) 飲み込んだ場合  
水でよく口の中を洗浄してください。大量の水を飲んで吐き出した後、医師の診断を受けてください。

### ⚠ 注意 けがをしたり家財に損害を与える恐れがある内容

#### 〈製品の設置場所について〉

落下により、けがをしたり器物を破損する恐れがありますので、振動のある場所や、不安定な場所には本製品を設置しないでください。

#### 〈電池について〉

下記の注意事項を必ず守ってください。電池の使い方を間違えると、液漏れや破裂により、本製品の故障やけがの恐れがあります。

- (1) 本製品を使わないときは、電池を取り外してください。電池を入れたままにしておくと、寿命の切れた電池からの液漏れなどにより、本製品や周囲の物を汚したり、傷めたりする恐れがあります。
- (2) 電池は必ず⊖側から入れてください。また、⊕側を正しく入れてください。
- (3) 付属の電池は充電式ではありません。充電すると液漏れや破裂の恐れがあります。
- (4) 電池に直接ハンダ付けしたり、水滴を付けたりしないでください。
- (5) 直射日光の当たる場所や、高温・多湿の場所を避けて保管してください。また、使用済みの電池は速やかに処分するか、幼児の手の届かない所に保管してください。
- (6) 本製品が動かないなどの場合、電池の端子が汚れていることがあります。そのときは、やわらかい布で乾拭きしてください。
- (7) 付属の電池は、工場出荷時に内蔵された電池です。お買上げ後、製品仕様の年数に満たないうちに電池寿命が切れることがあります。

#### 〈分解や改造をしない〉

本製品を分解したり、改造したりしないでください。本製品の故障やけがの恐れがあります。

#### 〈製品と電池の廃棄について〉

お住まいの自治体の定める規則に従い、廃棄してください。

## 必ずお読みになってからご使用ください

### 使用上のご注意

- 本製品にはマイコンが内蔵されています。静電気などにより誤動作することがありますが、故障ではありません。誤動作した場合は、リセットボタンを押してください。リセットボタンを押した場合は、時刻などがリセットされます。
- 本製品は日本標準電波仕様のため、海外では電波修正機能は使用できません。
- 電池交換後は、必ずリセットボタンを押してください。

### 〈液晶パネルについて〉

- 見る方向によって表示が薄くなったり、ムラになったりすることがあります。
- 温度が低くなると液晶表示の反応が遅くなる場合があります。
- 温度が高くなると液晶パネル面が黒くなり、判読できなくなる場合があります。
- 次の場合、静電気や圧力を加えることにより、黒い線・しみ・縞模様が発生することがありますが故障ではありません。しばらく放置しますと元に戻ります。  
・表示部のシールをはがしたり、乾いた布などでふいたとき  
・指などで液晶パネルを押したとき

### 使用場所について

下記のような場所では使用しないでください。本製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。

また、本製品は業務用ではありません。

- 温度が50°C以上になる所や直射日光の当たる所。  
(例) 屋外、または暖房器具などの熱風や火気に近い所。
- 温度が0°C以下になる所。
- ちり・ほこりの多い所。
- 大型テレビ・スピーカーのそばや、強い磁気のある所。
- 浴室など湿気が多い所。また、水がかかる所や加湿器の蒸気が直接当たるような所。
- 振動のある所。不安定な所。
- 工場、台所など、多くの油を使用する所。
- ビニール系素材の壁、敷物などの上。  
壁や敷物、および本製品が汚れたり傷むことがあります。
- 温度や湿度の変化が激しい所。  
寒い所から暖かい所への移動などにより、結露が生じることがあります。

本製品は、テレビやラジオと同様に電波を受信するものです。ご使用の際はできるだけ、電波を受けやすい窓際などに設置してください。なお、天候、時間帯、建物の影響など、次のような環境条件では正確に受信できないことがあります。場所を変えてご使用ください。

- ビルの中、ビルの谷間、地下
- 高圧線、テレビ塔、電車の架線の近く
- テレビ、冷蔵庫、エアコン、空気清浄機、パソコン、ファクシミリなどの家電製品やOA機器の近く
- 工事現場、空港や軍事基地の近く、交通量の多い所など、電波障害が起きやすい所
- 乗り物の中(自動車、電車、飛行機など)
- スチール机など、金属製の家具の上や近く
- その他、電波ノイズを発生させるものの近く

※ 電波を受信できない場合は、内蔵クオーツの精度で動作します。



## お手入れについて

- 本体を清掃するときは、湿った、やわらかい布でふいてください。
- 汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。その後、やわらかい布で乾拭きしてください。
- お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種ブラシなどは使用しないでください。また、殺虫剤、ヘアスプレーなどがかかからないようにしてください。変色したり、傷が付く恐れがあります。

## はじめに

安全上のご注意ならびにその他の注意事項をお読みのうえ、ご使用ください。

表示部にシールが貼ってある場合は、ゆっくりはがしてください。

※静電気により黒い線、しみなどが発生することがありますが、しばらく放置しますと元に戻ります。


## 付属品

ご使用前に確認してください。

- 取扱説明書(日本語・英語) 各1枚
- 保証書 1枚
- コイン型リチウム電池(CR2450) 1個
- ソフトケース 1袋

※付属の電池は、工場出荷時に内蔵された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池の寿命が切れることがあります。

## 各部の名称

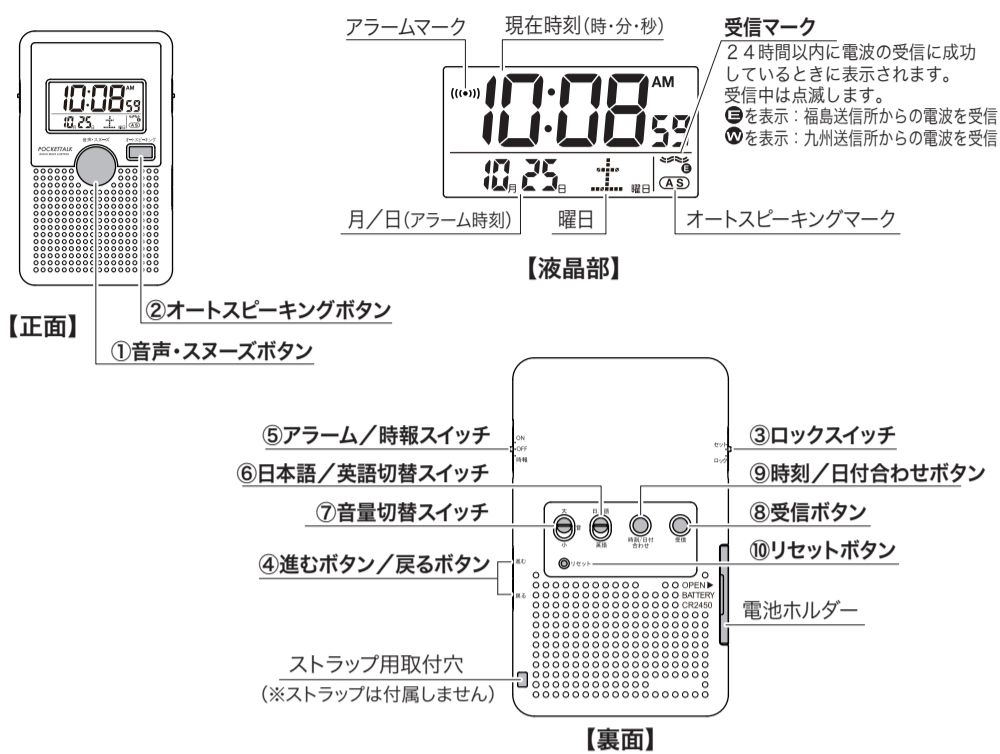


- ①音声・スヌーズボタン ー ボタンを押すと現在時刻、または日付を音声でお知らせします。アラームが鳴っているときに押すとスヌーズ機能が働き、約5分後に再びアラームが鳴ります。
- ②オートスピーキングボタン ー ボタンを押すと、1分毎に15分間現在時刻をお知らせします。
- ③ロックスイッチ ー 通常は、ロックの位置に合わせてください。※「⑧受信ボタン」「④進むボタン/戻るボタン」は効かなくなり、誤作動を防止します。
- ④進むボタン/戻るボタン ー アラーム時刻または現在時刻や日付を合わせるときに使用します。
- ⑤アラーム/時報スイッチ ー O N:セットした時刻にアラームが鳴ります。OFF:アラーム、時報ともに鳴りません。時報:正時(0分)を音声でお知らせします。(アラームは鳴りません。)
- ⑥日本語/英語切替スイッチ ー 音声を日本語/英語に切り替えるときに使用します。
- ⑦音量切替スイッチ ー 音量を「大」または「小」に切り替えるときに使用します。
- ⑧受信ボタン ー 通常表示(日付・時刻が表示状態)のときに押すと標準電波の受信を開始します。受信中に押すと受信を中止します。
- ⑨時刻/日付合わせボタン ー 手で現在時刻や日付を合わせるときに使用します。
- ⑩リセットボタン ー 初期化を行います。電池交換後は先端の細いもので必ず押してください。

## ご使用方法

### 1. 電池を入れてください(コイン型リチウム電池 CR2450 1個)

- (1)時計裏面のくぼみ部分にマイナスドライバーなどをかけて、電池ホルダーを引き出してください。
- (2)絶縁紙をはずしてください。
- (3)電池の⊕側を上にして正しく電池ホルダーに入れ、時計にはめこんでください。

※コイン型リチウム電池は電池の側面を持ってください。電池の⊕⊖面をショートさせると危険です。

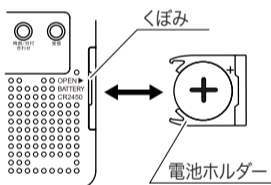

### 2. 「⑩リセットボタン」を先端の細いもので押してください

表示が全てついた後、時刻「12:00AM」となり、標準電波の受信を開始します。(窓際などできるだけ受信しやすい場所でのご使用をお勧めします。)

- 受信中は、Ⓜマーク(またはⓂマーク)が点滅し、受信マークが受信状態に応じて変化します。
- 受信に要する時間は最長約20分間です。

注)電池交換後は、必ず「⑩リセットボタン」を押してください。

#### 【受信成功】

受信マークが表示され、[月/日] [曜日] [時:分] [秒]が正しい日付と時刻に修正されます。

- 受信成功後、正しく表示されているかをご確認ください。



#### 【受信できない】

受信マークが表示されず、このとき時刻、日付の修正は行なわれていません。右記「■電波を受信できなかった場合」にしたがって場所を変えて再度受信させるか、手動操作で時刻、日付を合わせてください。

- 使用場所の受信状態が良くない場合は、数分で受信を中断することができます。



### 3. アラームを鳴らすには

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「④進むボタン/戻るボタン」を押してください。
  - 日付がアラーム時刻に切り替わって点滅し、アラーム時刻合わせの状態になったことを音声でお知らせします。
- (3)「④進むボタン/戻るボタン」を押してアラーム時刻を合わせてください。
  - 「④進むボタン/戻るボタン」を押すたびにアラーム時刻を音声でお知らせします。
  - アラーム時刻合わせの状態が再度「④進むボタン/戻るボタン」を押し続けると早送りします。
  - 約5秒間押されない状態が続くと、自動的にアラーム時刻が確定し、[通常表示]に戻ります。
- (4)「③ロックスイッチ」をロックの位置に合わせてください。
- (5)「⑤アラーム/時報スイッチ」をONにしてください。
  - アラーム時刻になると音声(月日・曜日、現在時刻)と電子音でお知らせします。
  - アラームマーク(Ⓜ)が表示されます。
  - 日付がアラーム時刻に切り替わります。

### 4. アラームを止めるには

アラームを止めるには2通りの方法があります。

#### アラームを完全に止める

- 「⑤アラーム/時報スイッチ」をOFFにして止めます。
- アラームマーク(Ⓜ)が消えます。

#### 約5分後に再度アラームを鳴らす(スヌーズ機能)

- 「①音声・スヌーズボタン」を押すとアラームが止まり、約5分後に再び鳴り出します。
- スヌーズ中はアラームマーク(Ⓜ)が点滅します。
- スヌーズ機能は何回でも繰り返すことができます。

アラームは約5分間で自動的に止まります。(オートストップ機能)

この場合、アラームマーク(Ⓜ)は表示されたままとなり、翌日のアラーム時刻に再びアラームが鳴ります。



## その他の機能

### ■自動受信について

午前2時から3時間ごとに、自動で電波受信を行います。受信に成功すると現在表示している時刻、日付を修正します。

### ■電波を受信できなかった場合

#### 1. 電波を手動で受信させ時刻、日付を合わせる

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑧受信ボタン」を押してください。標準電波の受信を開始します。
  - 受信状態については、左記「ご使用方法」をご覧ください。
  - うまく受信できない場合は本体の向きや場所をかえて、もう一度受信させてください。ご使用中に受信マークが表示されない場合は、使用場所の受信状態が良くないことが考えられます。
  - 詳しくは裏面「使用場所について」をご覧ください。
  - また、夜間は昼間に比べて受信状態が良くなりますので、昼間に受信できなかった場合でも翌日までに自動で受信できる場合があります。
- (3)「③ロックスイッチ」をロックの位置に合わせてください。

#### 2. 手動で時刻、日付を合わせる

電波を受信できない場合は、手動で時刻、日付を合わせてご使用ください。

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑨時刻/日付合わせボタン」を2秒以上押し続けてください。
- (3)「⑨時刻/日付合わせボタン」を押すごとに、下図のように順に表示が点滅します。
- (4)「④進むボタン/戻るボタン」で日付や時刻を合わせてください。
  - 設定中は「⑨時刻/日付合わせボタン」を押すごとに設定する内容を音声でお知らせします。
  - 「④進むボタン/戻るボタン」を押すと変更された内容を音声でお知らせします。
  - 「④進むボタン/戻るボタン」を押し続けている間は早送りします。
  - 設定中に「①音声・スヌーズボタン」を押すと現在設定している内容を音声でお知らせします。
  - 約5分以上「④進むボタン/戻るボタン」や「⑨時刻/日付合わせボタン」が押されなかった場合は、自動的に[通常表示]に切り替わります。時刻や日付は[通常表示]に切り替わる直前の表示です。
  - 設定中に「③ロックスイッチ」をロックの位置に切り替えずと設定ができなくなります。

<時刻表示>



#### 【通常表示】

普段はこの表示でお使いください。



#### 【年合わせ表示】

「⑨時刻/日付合わせボタン」を2秒以上押し続けてください。「④進むボタン/戻るボタン」で年を合わせてください。年は2000年~2099年まで合わせられます。



#### 【月/日合わせ表示】

「⑨時刻/日付合わせボタン」を押してください。「④進むボタン/戻るボタン」で日付を合わせてください。曜日は自動的に合わせます。



#### 【時刻合わせ表示】

「⑨時刻/日付合わせボタン」を押してください。「④進むボタン/戻るボタン」で時刻を合わせてください。「④進むボタン/戻るボタン」を押した瞬間に、秒表示は00秒にリセットされます。



#### 【12/24時間制選択表示】

「⑨時刻/日付合わせボタン」を押してください。「④進むボタン/戻るボタン」で12時間制または24時間制を選んでください。

- (5)12/24時間制選択が終了しましたら、「⑨時刻/日付合わせボタン」を押して[通常表示]に切り替えてください。
- (6)「③ロックスイッチ」をロックの位置に合わせてください。

### ■12時間制/24時間制の選択について

時刻の表示方法を切り替えるときは、上記「■電波を受信できなかった場合 2.手動で時刻、日付を合わせる」にしたがって、12時間制または24時間制表示を選んでください。(受信マークが表示されている場合、時刻の表示方法を切り替えると受信マークは表示されませんが、その後受信に成功すると再度表示されます。)

### ■日本語/英語切替について

「⑥日本語/英語切替スイッチ」で音声を日本語または英語に設定できます。

### ■音量切替について

「⑦音量切替スイッチ」で音声を「大」または「小」に切り替えることができます。

### ■音声機能について

#### 1. スピーク機能

「①音声・スヌーズボタン」を押すと現在時刻や月日・曜日を音声でお知らせします。

#### 【現在時刻】

通常表示のときに「①音声・スヌーズボタン」を1回押すと現在時刻をお知らせします。

・12時間制を選択している場合 “(午前/午後)〇時〇分です”

・24時間制を選択している場合 “〇時〇分です”

※音声を日本語に設定し、かつ12時間制を選択している場合、12時(0分)に限り“12時です”とお知らせします。その際、“午前/午後”はお知らせしません。

#### 【月日・曜日】

通常表示のときに「①音声・スヌーズボタン」を2回押す(約1秒以内)と月日・曜日お知らせします。

#### 2. 時報機能

「⑤アラーム/時報スイッチ」を「時報」に合わせると、毎正時(0分)に時刻を音声でお知らせします。

- 「時報」の位置に合わせてアラームは鳴りません。

#### 3. オートスピーキング機能

「②オートスピーキングボタン」を押すと、1分毎に15分間 現在時刻を音声でお知らせします。

- オートスピーキング中は(AS)マークが点滅します。
- オートスピーキング中に再度「②オートスピーキングボタン」を押すと、オートスピーキング機能は終了します。



過去24時間以内に電波を受信できていない場合は、現在時刻、月日・曜日、時報をそれぞれ音声でお知らせした後に“ブーン”と電子音が鳴ります。

【オートスピーキング中】

### ■自動受信を止めるには

この時計には自動受信を止める機能があります。(海外で使用する場合や設定時刻をずらしてお使いになりたい場合等にご利用ください。)

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑧受信ボタン」を、“OFF”が表示されるまで8秒以上押し続けてください。(音声でもお知らせします。)
- (3)上記「■電波を受信できなかった場合 2.手動で時刻、日付を合わせる」にしたがって時刻を合わせてください。
  - この機能を設定した後も「⑧受信ボタン」を押すと受信を行います。その後自動受信はしません。
  - この機能を解除するには、「⑧受信ボタン」を、“ON”が表示されるまで8秒以上押し続けてください。(音声でもお知らせします。)
- (4)「③ロックスイッチ」をロックの位置に合わせてください。

## Radio-controlled Alarm Clock Instruction Manual

Thank you for purchasing a SEIKO clock. Please read the instructions carefully for proper and safe use of your SEIKO clock before using it, and retain this manual for future reference.

Instructions are subject to change without prior notice. The appearance of the figures in the instructions may differ from the actual display due to printing limitations. SEIKO TIME CREATION is not responsible for any additional expenses or losses that result from the use of this clock. Any amendment or copying of this instruction manual without the permission of SEIKO TIME CREATION is prohibited.

Should you have any questions concerning clock or aftersales service, confirm the product number on the back of the case or the bottom of the clock and contact the CLOCK CUSTOMER SERVICE CENTER

( Examples of product numbers: DA\*\*\*, BC\*\*\*, SQ\*\*\*, etc. )

CLOCK CUSTOMER SERVICE CENTER  
Toll free 0120-315-474  
<https://www.seikowatches.com/jp-ja/> (Japanese language website)

Sales Representative

SEIKO WATCH CORPORATION

INSTRUCTION MANUAL No. FDA-014W-E

## FEATURES

- This radio-controlled clock displays the current time and date by receiving a standard radio signal. This has a radio modification function. (Compatible within Japan)
- It automatically selects the station transmitting an east or west radio signal (Fukushima or Kyushu).
- By pressing the SPEAK/SNOOZE button, a voice informs you of the current time or date. (When the alarm time or current time is adjusted, a voice informs you of the time being set.)
- Either Japanese or English voice can be selected.
- An auto-speaking function informs you of the current time every one minute for 15 minutes.
- Time signal sounds every hour (0th minute) when the time signal is set.
- The alarm consists of both voice and electronic beep sound. (Alarm and time signal functions cannot be used simultaneously.)
- With the snooze function, the alarm starts ringing again even if it is stopped.
- The auto-stop function automatically stops the alarm after approximately five minutes.

\* When the clock is outside the reception range, it can be used as a quartz clock.

## WHAT IS A RADIO-CONTROLLED CLOCK?

### ■ A radio-controlled clock / Automatic time setting:

The radio-controlled clock displays the current time precisely by automatically receiving an official standard frequency.


### ■ Official standard frequency in Japan (JJY)

JJY transmits the time signal from the National Institute of Information and Communications Technology (NICT). There are two JJY stations, and each one transmits at a different frequency. Time information of the official standard frequency is generated by an "atomic clock" that may gain or lose 1 second over the course of 100,000 years.

### ■ Remarks on reception of official standard frequency

The reception ranges from the JJY stations (one in the eastern part and the other in the western part of Japan) are approximately 1,000 km to 1,200 km, depending on conditions.

This clock automatically chooses either of the frequencies, 40 kHz (East, Fukushima transmitting station) and 60 kHz (West, Kyushu transmitting station), whichever is easier to receive; however, it may not be able to receive a radio signal due to climatic conditions, the direction or location of the clock, the time, geographic location or radio disturbance such as caused by buildings.

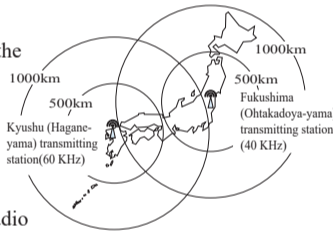

### ■ Note

- The clock may display the wrong time. This may happen if it fails to receive radio signals properly because of interference, an inappropriate location, or bad radio wave receiving conditions. Should this happen, move the clock to another place where it can receive radio signals.
- Even though the clock is unable to receive radio signals, its quartz movement will continue to keep the time.
- Time signal transmission from NICT is stopped twice each hour, for one minute at 15 minutes past and again at 45 minutes past when a call sign is being transmitted. The transmission of a time signal may also be stopped during maintenance of NICT facilities or because of a lightning strike. See Japan Standard Time Group homepage for information on radio signal interruption. (Homepage address: <https://jty.nict.go.jp/>)

## PRODUCT SPECIFICATIONS

- Manual time setting: Loss/gain (monthly rate) is less than 30 seconds (at a normal temperature range between 5°C and 35°C)
- Display shows less than 1 second loss/gain after receiving radio signal.
- Operational temperature range: between 0°C and +50°C (the display can be read between 0°C and +40°C)
- Alarm: Voice and electronic beep sound which changes at three stages, auto-stop for approximately 5 minutes, snooze for approximately 5 minutes (the snooze function can be used repeatedly).
- Automatic calendar: The calendar adjusts automatically for odd and even months including February of leap years from Jan. 1, 2000 to Dec. 31, 2099.
- Time/Calendar display: Hour, minute, second, date (☞alarm time), day of the week can be displayed. 12-hour time indication with AM/PM indicator and 24-hour indication are available.
- Battery: Coin type Lithium batteries (CR2450), 1 pc
- Battery life: Approximately 1 year
- Time setting by receiving a radio signal: Automatic reception (Every three hours from 2:00 AM. The clock moves according to the quartz movement accuracy until the next reception.)  
Manual reception

\* The specifications are subject to change without prior notice due to product improvement.

## AFTERSALES SERVICE AND GUARANTEE

- We certify your SEIKO clock is guaranteed against defects in material and workmanship. Refer to the guarantee attached to the clock for further details. This guarantee is valid only in Japan. Also aftersales service is available only in Japan.
- If your clock malfunctions during the course of normal use while under guarantee, we will regulate, adjust, repair, or replace it at no cost to you. Please present your clock to the retailer from whom the clock was purchased with the valid guarantee on which the retailer's stamp is affixed.
- A malfunction which is not covered by our guarantee or that has occurred after the guarantee period has elapsed will be repaired at cost, if you request to have your clock repaired.
- A stock of replacement parts for SEIKO clocks will be kept for 3 years. In principle, your clock can be repaired within this period. Replacement parts are parts essential to maintaining the functional integrity of the clock. Please note that, depending on the conditions of use, your clock may not be able to be reconditioned or its accuracy may not be restored. Please consult the retailer from whom the clock was purchased when requesting repairs to your clock.
- Please note that, if the clock parts or accessories are damaged, some alternative parts may be used for repairs.
- During the guarantee period or after the guarantee period has elapsed, you may present a clock to the retailer from whom the clock was purchased to request repairs.
- In case of a malfunction which is not covered by our guarantee or a malfunction that has occurred after the guarantee period has elapsed, repair costs, transfer fees from the retailer to our factory, and other costs shall be paid by the owner of the clock. Please note that these costs may exceed the retail price of the clock.

## Make sure to observe. SAFETY PRECAUTIONS

### ⚠ DANGER

#### <Remarks on coin and button type lithium batteries>

- (1) Keep out of reach of children.
- (2) Never put batteries in mouth. Swallowing may lead to serious injury or death, so spit it out soon. If ingested, immediately seek medical attention.

### ⚠ WARNING

#### <Remarks on coin type lithium batteries>

- (1) Never attempt to short circuit, recharge, dismantle, or heat a battery, or place it in a fire. The batteries contain flammable substances such as lithium and organic compounds. Improper use of the batteries may cause fire, heat generation, leakage and explosion.
- (2) If the batteries are to be thrown away or stored, insulate them with tape, etc. If batteries are placed together with other metals or batteries, it may cause a fire or an explosion.

#### <Remarks on plastic bag packaging>

Never put a plastic bag over your head or face.

### ⚠ CAUTION

#### <Remarks on places where clock is installed>

Do not install the clock in a place subject to vibration or an unstable place where the clock may fall resulting in injury or damage to property.

#### <Remarks on batteries>

Please be sure to observe the following correct battery usage. Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

- (1) Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
- (2) If the battery life described in the product specifications has passed, replace all batteries with new ones as specified in this manual even when the clock is still working. Also, remove all batteries if you do not use the clock. If only one of the batteries is replaced or old batteries are kept inside, other parts may stop or liquid leakage from old batteries may contaminate or damage the clock.
- (3) Charging may result in liquid leakage or damage because included batteries are not rechargeable types.
- (4) Do not directly solder the batteries, and do not drop water on the batteries.
- (5) For storage, avoid places exposed to direct sunlight, high temperatures and high humidity. Immediately dispose of used batteries and keep them away from children in the case of storage.
- (6) When the clock does not work, the battery terminals may be contaminated. Clean the terminals with a soft cloth.
- (7) As the initial batteries are inserted at the factory, their actual lives once in your possession may be shorter than the specified period.
- (8) Do not use rechargeable batteries and Hi-Volt type.

#### <Disposal>

Please follow the instructions of local government regulation.

#### <Remarks on liquid crystal panel>

If the liquid crystal panel of the clock is broken, care should be taken to avoid injury. In the case of any of the incidents below, take the following emergency steps;

- (1) If your skin is in contact with the liquid crystal, gently wipe away, rinse your skin with clean water.
- (2) If the liquid crystal gets into your eyes, rinse your eyes with clean water for more than 15 minutes, and consult a doctor immediately.
- (3) If the liquid crystal is swallowed, rinse the inside of the mouth, drink an excessive amount of water so as to induce vomiting, and consult a doctor immediately.

## MAKE SURE TO READ BEFORE USE

### <Location and Carry >

Avoid using your SEIKO clock in the following places. Be careful of carry it.

Otherwise, the quality of the product, malfunction and batteries may not be ensured, resulting in trouble in precision and battery exhaustion. This product is not for commercial use.

- Under conditions where the temperature is below 0°C
  - Under conditions where the temperature is above 50°C or where it is exposed to direct sunlight  
For example, outdoors, places exposed to hot air caused by heating appliances, etc., or close to flames
  - Do not place in moist, humid environments such as in a bathroom, places splashed with water and places directly exposed to steam from humidifying devices
  - Also, do not place near areas exposed to strong magnetic fields or vibrations or unstable places
  - Do not place near the many cooking oil at the kitchen and factory.
  - Do not place in the dust
  - Close to sources that create radio static.
- This clock receives radio signals in the same way as a TV or radio. Keep the clock where it can easily receive signals, for instance, close to a window. Please note that the clock may be unable to receive radio signals properly under the following conditions.**
- Inside a large building, between tall buildings, underground
  - Close to TV stations, overhead power lines, and train cables
  - Close to home electrical appliances or Office Automation devices such as TV's, air conditioners, air cleaners, refrigerators, PC's, or fax machines
  - In places generating radio interference, such as near construction sites, airports, military bases, or in heavy traffic
  - Inside a vehicle, train, or airplane
  - Close to other sources that cause radio static, wave controllers and noise.
  - Close to furniture made of steel, such as a steel desk

### <Remarks on liquid crystal panel>

- Depending on the direction of the clock, the digital display may be faint or uneven.
- When the clock is operated in low temperatures, the response of the digital display may become slower.
- When the clock is operated in high temperatures, the liquid crystal panel may become dark and may not be readable.
- Do not touch the liquid crystal panel, as the digital display may become faint or uneven. If the panel is touched, leave it untouched for a while, and the display will return to normal.

### <Care of your clock>

- When cleaning the clock case, wipe it with a soft moist cloth.
- If the clock case becomes excessively dirty, wipe it with a soft cloth moistened with a small amount of diluted detergent, and wipe again with a dry cloth.
- Do not use benzene, thinner or alcohol, cleanser or brushes, to clean the clock case. Also, do not expose the clock to insecticide or hair spray. Otherwise, discoloration or damage may result.

## TROUBLESHOOTING

When the product does not operate normally, refer to the table below to check before requesting repair. And when replacing the batteries with new ones, check the recommended period of use before use.

Symptom	Possible Cause	Treatment
Nothing is displayed. No sound is produced.	- There is no battery in the clock. - The battery capacity is low. - The plus (+) and minus (-) portions of the battery are positioned incorrectly. -The clock is reset improperly.	- Check the direction of the newly inserted batteries, and press the RESET button. - Reinsert the batteries correctly and make sure to press the RESET button. - Make sure to press the RESET button.
The time or calendar is not displayed completely.	-The battery capacity is low. -The clock is reset improperly. -Improper operation caused by static electricity, etc.	- Check the direction of the newly inserted batteries, and press the RESET button. - Reinsert the batteries correctly and make sure to press the RESET button.
The time or calendar is adjusted improperly.	- The signal reception is unsuccessful. - The battery capacity is low. - The clock is reset improperly.	- Read the reverse page ■ <b>If the clock fails to receive a radio signal</b> , to attempt to receive a radio signal again. - Check the direction of the newly inserted batteries, and press the RESET button. - Make sure to press the RESET button.
No work at push the UP/DOWN button, SIGNAL button, TIME/DATE SETTING button	- "Lock switch." is Lock position.	- Move the "Lock switch." to Set position.
The alarm does not ring	- "ALARM/TIME SIGNAL switch" is turned OFF. - Improper operation caused by static electricity, etc. - The battery capacity is low.	- Turn ON the "ALARM/TIME SIGNAL switch." - Reinsert the batteries correctly and make sure to press the RESET button.

## HOW TO USE THE CLOCK


(While the design of the clock differs depending on the model, the method of operation is the same.)

### ■ Accessories (Check the included accessories before use.)

- Coin type lithium battery (CR2450) 1 pc.
- Instruction manual (Japanese and English) 1 pair.
- One guarantee certificate
- One pouch

\* Attached battery was for test, their actual lives once in your possession may be shorter than the specified period.

### ■ Switch and Buttons

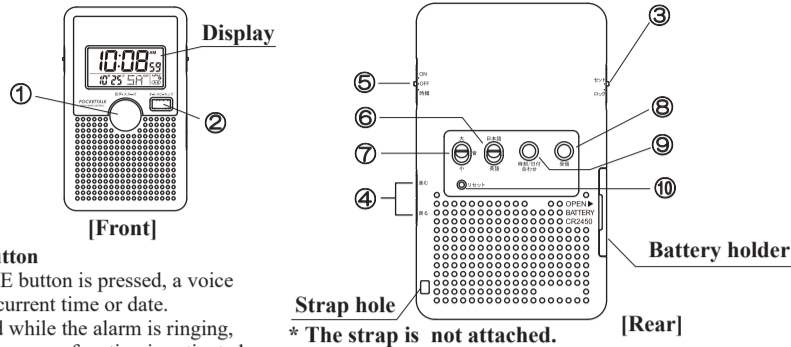

#### ① SPEAK/SNOOZE button

- If the SPEAK/SNOOZE button is pressed, a voice will inform you of the current time or date.
- If this button is pressed while the alarm is ringing, the sound stops and the snooze function is activated. The alarm will ring again approximately 5 minutes later.

#### ② AUTO SPEAKING button

- If the AUTO SPEAKING button is pressed, you will be informed of the current time every one minute for 15 minutes.

#### ③ Lock switch

- Normal position : **Lock**
- \* Set the lock switch to "Lock" position to avoid working ④ UP/DOWN button, ⑧ SIGNAL RECEIVING button.

#### ④ UP/DOWN button

- The UP/DOWN button is used to set the alarm time or the current time and date.


#### ⑤ ALARM/TIME SIGNAL switch

- **ON** : The alarm rings at the set time.
- **OFF** : Both the alarm and time signal do not ring.
- **Time signal** : A voice will inform you of the hour (0th minute). (The alarm does not ring.)

### ■ Displays (ENGLISH selection)

#### Month/Day (⇒alarm time)

When the "ALARM/TIME SIGNAL switch" is turned "ON," alarm time is displayed.

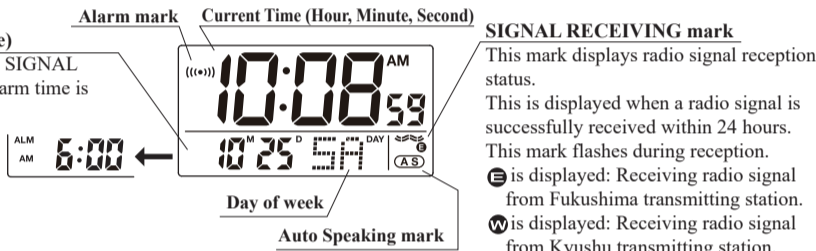


### ■ How to use the clock

If the protective film on the display, please slowly peel off before using the clock. (Black lines or spots may occur due to static electricity at this time. It returns to the normal status if left for a while.)

#### 1. Insert the battery (coin type lithium battery CR2450), 1 pc.

- (1) Pull out the battery holder by catching a minus (-) screw driver on the hollow on the back.
  - (2) Take off the insulator.
  - (3) Set the battery with being the plus (+) side outward.
- \* You should touch the side of the battery. Not to short plus (+) and minus (-) side of the battery.

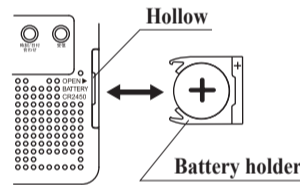

#### 2. Press the RESET button with an object having a thin end.

Press the "⑩ RESET button" with an object having a thin end. After all display details are turned on, the time shows "12:00 AM" and the clock starts receiving a standard radio signal. **Note: After replacing the batteries with new ones, be sure to press the "⑩ RESET button."**

It is recommended to use this clock in a place where a signal can be easily received such as near a window.

- The mark (or mark) flashes during signal reception, and the SIGNAL RECEIVING mark changes depending on receiving status.
- Time necessary for signal reception is up to approximately 20 minutes.

#### [Successful reception]

The SIGNAL RECEIVING mark is displayed, and the [Date], [Day of week], [Hour: minute] and [Second] are modified to the correct date and time.

- Please check whether they are correctly displayed after successful reception.

#### [If a clock fails to receive a radio signal]

The SIGNAL RECEIVING mark is not displayed, and the time and date are not modified at this time. Change the place to allow the clock to receive according to the section of "■ If the clock fails to receive a radio signal", or manually set the time and date.

- When the clock is placed where the reception strength is insufficient to receive radio signals, it will temporary stop searching for radio signals after a few minutes.



[Successful reception]



[Unable to receive radio signals]

#### [Selection of 12/24-hour indication]

When changing the time indication method, select the 12-hour indication or 24-hour indication according to the section of "■ If the clock fails to receive a radio signal 2. The time and calendar can be set manually." as described at the right. (When the SIGNAL RECEIVING mark is being displayed, the mark disappears if the time indication method is changed; however, it is displayed again if the radio signal is successfully received.)

### 3. How to use the alarm

- (1) Press the "④ UP/DOWN button." The Alarm time flashes, and a voice informs you that the alarm time setting mode has been set.
- (2) Press the "④ UP/DOWN button" to set the alarm time.
  - Every time after the "④ UP/DOWN button" is pressed, a voice informs you of the alarm time.
  - If the "④ UP/DOWN button" is again kept pressed in alarm time setting status, the hour and minute digits advance quickly.
  - If the "④ UP/DOWN button" is not pressed for more than approximately 5 seconds, the alarm time is automatically confirmed and the display returns to the NORMAL display.
- (3) Move the "⑤ ALARM/TIME SIGNAL switch" to **ON**. A voice informs you of the date, day of week, current time, and an electronic beep sound is heard at the alarm time.
  - The alarm mark comes on, and display of month and day changes to display of alarm time.
- (4) Select "High" or "Low" with the "⑦ VOLUME switch."

### 4. How to stop the alarm

There are two ways to stop alarm.

#### [To completely stop the alarm]

- Move the "⑤ ALARM/TIME SIGNAL switch" to **OFF** to stop the alarm.
- The ALARM mark disappears.

#### [To ring the alarm again after approximately 5 minutes (Snooze function)]

- When the "① SPEAK/SNOOZE button" is pressed, the alarm stops temporarily, and after approximately 5 minutes, it will start ringing again.
- While the snooze function is activated, the alarm mark continues to flash.
- The snooze function can be used repeatedly.

#### After the alarm rings for approximately 5 minutes, it automatically stops (Automatic stop function).

The alarm mark remains being displayed, and the alarm will ring again at the same time the next day.

## OTHER FUNCTIONS

### ■ Automatic signal reception

The clock automatically receives a radio signal every three hours from 2:00 AM. If the reception is successful, the time and calendar are automatically reset to the current time.

### ■ If the clock fails to receive a radio signal

#### 1. Perform a manual reception of radio signals to set the time and calendar.

- (1) Move the "③ Lock switch" to **Set**.
- (2) Press the "⑧ SIGNAL RECEIVING button." The clock starts receiving radio signals.
  - Refer to "■ How to use the clock" to check the receiving strength and indication.
  - If the clock is unable to receive a radio signal, move it to another place or change the direction of the clock and try again. If the SIGNAL RECEIVING marks are not displayed during reception, the radio signals may not be sufficient to reach/access where the clock is placed.
  - Refer to **WHAT IS A RADIO-CONTROLLED CLOCK** for further details. Since reception conditions are relatively better at night, the clock may be able to receive signals the following day even if the clock has been unable to receive signals during the previous daytime.
- (3) Move the "③ Lock switch" to **Lock**.

#### 2. The time and calendar can be set manually.

##### If the clock is unable to receive any radio signals, the time and date can be set manually.

- (1) Move the "③ Lock switch" to **Set**.
- (2) Keep pressing the "⑨ TIME/DATE SETTING button" for more than 2 seconds.
- (3) With each press of the "⑨ TIME/DATE SETTING button," the selected item to be adjusted flashes in the order as shown in the figure below.
- (4) Set the date and time with the "④ UP/DOWN button."
- (5) When selection of 12/24-hour indication is ended, press "⑨ TIME/DATE SETTING button" to change to the [NORMAL display].



#### [NORMAL display]

Generally use the clock with the NORMAL display.

#### [YEAR SETTING display]

Press the "④ UP/DOWN button" to set the year. The year can be selected from 2000 to 2099.

#### [MONTH /DATE SETTING display]

Press the "④ UP/DOWN button" to set the month and date. The day will be automatically adjusted.

#### [TIME SETTING display]

Press the "④ UP/DOWN button" to set the time.

#### [12/24-HOUR INDICATION SETTING display]

Select the 12 hour indication or 24 hour indication with the "④ UP/DOWN button."

- (6) Move the "③ Lock switch" to **Lock**.
  - Every time the "⑨ TIME/DATE SETTING button" is pressed during setting, a voice announces the contents to be set.
  - After the "④ UP/DOWN button" is pressed, a voice announces the changed contents.
  - If the "④ UP/DOWN button" is kept pressed, the time and date digits advance quickly.
  - When the "① SPEAK/SNOOZE button" is pressed during setting, a voice announces the currently set contents.
  - If the "④ UP/DOWN button" or "⑨ TIME/DATE SETTING button" is not pressed for more than approximately 5 minutes, the display automatically change to the [NORMAL display]. The time and date are those displayed just before they change to the [NORMAL display].

### ■ JAPANESE/ENGLISH selection

The voice can be set to either Japanese or English with the "⑥ JAPANESE/ENGLISH select switch."

### ■ Sound volume change

Voice can be changed to "High" or "Low" with the "⑦ VOLUME switch."

### ■ Voice function

#### 1. SPEAK function

When the "① SPEAK/SNOOZE button" is pressed, and a voice announces the current time, date and day of week.

##### [Current time]

When the "① SPEAK/SNOOZE button" is pressed **once** in the NORMAL display, you are informed of the current time.

- 12-hour indication is selected "It is : : (AM/PM)"
- 24-hour indication is selected "It is : :"

\* If the voice is set to JAPANESE and the 12-hour indication is selected, the time is informed as "12 o'clock" only for 12 o'clock (0th minute). In this case, "AM/PM" is not said.

##### [Date and Day of week]

If the "① SPEAK/SNOOZE button" is pressed **twice** in NORMAL display (within 1 second), you are informed of the Date and Day of week.

#### 2. Time signal function

If the "⑤ ALARM/TIME SIGNAL switch" is set to TIME SIGNAL, the time is informed by voice every hour (0th minute).

- If it is set to "TIME SIGNAL," the alarm does not ring.

#### 3. AUTO SPEAKING function

When the "② AUTO SPEAKING button" is pressed, you are informed of the current time every one minute for 15 minutes.

- The AUTO SPEAKING mark flashes during AUTO SPEAKING mode.
- If the "② AUTO SPEAKING button" is pressed again during AUTO SPEAKING mode, the AUTO SPEAKING function ends.



[In AUTO SPEAKING mode]

When a radio signal has not been received in the past 24 hours, an electronic "bong" will sound after a voice say the current time, date, day and time signal.

### ■ To inactivate the clock radio signal reception

#### The clock can be set not to receive radio signal.

(The function can be used to prevent the clock from receiving the wrong radio signals or to set the clock to a time different from the standard time.)

- (1) Move the "③ Lock switch" to **Set**.
- (2) Keep pressing the "⑧ SIGNAL RECEIVING button" for more than 8 seconds until "OFF" is displayed. (A voice also informs you.)
- (3) Set the time according to the above section of "■ If the clock fails to receive a radio signal 2. The time and calendar can be set manually."
- (4) Move the "③ Lock switch" to **Lock**.
- Even after setting this function, radio signal will be received if the "⑧ SIGNAL RECEIVING button" is pressed. After that, radio signal will not automatically be received.
- To reactivate automatic reception, keep pressing the "⑧ SIGNAL RECEIVING button" for more than 8 seconds until "ON" is displayed. (A voice also informs you.)

### ■ Notes

- The clock is equipped with a microcomputer. Any happening may be caused by interference from static electricity, etc.; however, this is not a malfunction. If this happens, press the "⑩ RESET button."
- When the "⑩ RESET button" is pressed, the set time and other functions are all reset.
- The strap is not attached to this alarm clock.
- This product is of standard Japanese radio signal specifications; therefore, the radio signal modification function cannot be used outside Japan.
- After replacing the batteries with new ones, be sure to press the "⑩ RESET button."

# 目ざまし時計

電波クロック

## 取扱説明書

この度は弊社商品をお買い上げいただき、誠にありがとうございました。ご使用前にこの取扱説明書をよくお読みください。正しくご使用いただけますよう、お願い申し上げます。なお、この取扱説明書はお手元に保管し、必要に応じてご覧ください。

この取扱説明書の内容は、将来予告なく変更することがあります。あらかじめご了承ください。印刷による制限のため、この取扱説明書中の図が実際の表示と異なる場合があります。本製品によって生じた、いかなる支出、損益、その他の損失に対して、弊社は一切の責任を負いません。この取扱説明書の内容の一部またはすべてを、製造者の許可なく転載・変更・複製することは禁じられています。

本製品、またはアフターサービスなどについてご不明な点がありましたら、製品の裏面または底面に表示されている製品番号(品番)をご確認のうえ、下記クロックお客様相談室にお問い合わせください。

(例: DA○○○、BC○○○、SQ○○○など)

クロックお客様相談室 0120-315-474

<https://www.seikowatches.com/jp-ja/>

発売元

セイコーウォッチ株式会社

説明書番号 FDA-015W

## 電波クロックについて

### 〈電波時計／電波修正機能とは〉

正確な時刻およびカレンダー情報をのせた標準電波を受信することにより、自動的に時刻を修正・表示します。

### 〈標準電波とは〉


情報通信研究機構(NICT)が運用している時刻情報をのせた電波で、国内2カ所の標準電波送信所からそれぞれ異なる周波数で送信されています。標準電波の時刻情報はおよそ10万年に1秒の誤差という超高精度を保つ『原子時計』によるものです。

### 〈電波受信について〉

標準電波が受信可能な地域は条件によって異なりますが、送信所(東・西2カ所)からおおむね1000km～1200kmです。この製品は40kHz(東・福島送信所)、60kHz(西・九州送信所)のいずれかを受信しやすい電波を自動的に選択し受信します。ただし、天候、設置場所、時計の向き、時間帯、地形、建物の影響などによって受信できない場合があります。

### 〈ご注意〉

- 電波障害などによって、誤った時刻が表示される場合があります。また設置場所や電波状況によっては受信できないことがあります。そのようなときは、場所を変えてお使いください。
- 電波を受信できない場合は、内蔵クオーツの精度で動作します。
- 標準電波は、毎時15分と45分から各1分間は一部の時刻情報の送信が中断されます。また、設備のメンテナンスや落雷などの影響により電波の送信が停止(停波)することがあります。停波に関する情報は、情報通信研究機構日本標準時グループのホームページをご覧ください。(ホームページアドレス <https://jij.nict.go.jp/>)

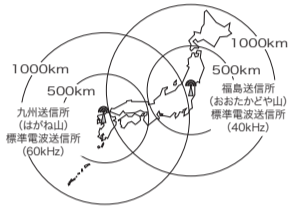

## 保証・アフターサービス

- 本製品はメーカー保証です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応となります。
- 保証期間中の保証規定に基づいた修理品は、販売店がお預かりし、メーカーが無料で修理いたします。必ず販売店名が捺印された保証書を添えてご依頼ください。
- 保証期間中でも無料修理の対象とならない修理品、および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
- 本製品の修理用部品は、製造終了後3年間保有しています。この期間は原則として修理が可能です。修理用部品とは、製品の機能を維持するために不可欠な製品本体の部品です。なお、修理可能な期間は、ご使用条件により異なります。また、修理可能な場合でも、元どりの精度と異なる場合があります。販売店とよくご相談ください。
- 修理の際、部品・その他の付属品は、一部代替部品または再生品を使用させていただくこともありますので、ご了承ください。
- 有料修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃など、諸費用をお客様にご負担いただきます。なお、修理代金が標準小売価格を上回る場合があります。あらかじめご承知ください。
- 保証期間中・経過後ともに、修理を依頼される場合は本製品を販売店にご持参ください。販売店で保証が受けられない場合は、クロックお客様相談室にご相談ください。
- お客様が本製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりますので、ご注意ください。
- ご不明な点は、クロックお客様相談室にお問い合わせください。

## 製品仕様 改良のため予告なく変更する場合があります

時間精度: 平均月差±30秒

(電波受信による時刻修正を行わない場合・気温5°C～35°Cで使用した場合)  
表示誤差±1秒(電波受信による時刻修正を行った直後)

使用温度範囲: 0°C～50°C(液晶表示部 判読可能温度範囲: 0°C～40°C)

アラーム: 音声と3段階に変化する電子音、約5分間オートストップ、約5分間スヌーズ  
(スヌーズは何回でも繰り返すことができます。)

カレンダー: 2000年1月1日～2099年12月31日のフルオートカレンダー(月末、うるう年とも修正不要)

表示内容: 日付(月・日⇄アラーム時刻)、曜日、AM/PM表示による12時間制または24時間制表示

使用電池: コイン型リチウム電池(CR2450) 1個

電池寿命: 約1年 コイン型リチウム電池(CR2450)を1個使用時  
※1日あたりアラームを音量:小で30秒間使用した場合

受信機能: ・自動受信… 毎日午前2時、以後3時間ごとに受信(受信から次の受信まではクオーツの精度で動作)  
・手動受信… ボタン操作による

受信結果確認機能: 受信マークで表示

時刻合わせ機能: 電波受信による自動セット、または手動セット

※電池の寿命はご使用の条件によって変わります。

## 故障かな?と思ったときは

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。なお、新しい電池と交換する場合は、電池の使用推奨期限をご確認のうえご使用ください。

症状	考えられる原因	処置
表示が出ない 音が出ない	・電池が入っていない。 ・電池の容量が少なくなっている。 ・電池が正しい向きに入っていない。 ・きちんとリセットされていない。	・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・電池を正しく入れ直して、確実にリセットボタンを押してください。 ・確実にリセットボタンを押してください。
表示が欠けている	・電池の容量が少なくなっている。 ・きちんとリセットされていない。	・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・確実にリセットボタンを押してください。
時刻またはカレンダー が合っていない	・受信に成功していない。 ・電池の容量が少なくなっている。 ・きちんとリセットされていない。	・「電波を受信できなかった場合」をお読みになり、再度受信させてください。 ・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。 ・確実にリセットボタンを押してください。
進むボタン/戻るボタン 受信ボタン、時刻/日付 合わせボタンが効かない	・ロックスイッチが「ロックの位置」になっている。	・ロックスイッチを「セットの位置」に合わせてください。
アラームの音が鳴らない	・アラーム/時報スイッチがOFF、または 時報になっている。 ・電池の容量が少なくなっている。	・アラーム/時報スイッチをONにしてください。 ・新しい電池を、向きを確かめながら入れて、リセットボタンを押してください。

## 必ずお守りください 安全上のご注意

### ⚠ 危険 死亡または重傷を負う可能性が高い内容

#### <コイン型リチウム電池について>

- (1) 電池は乳幼児の手の届かない所に置いてください。
- (2) 誤って電池を飲み込むと、化学やけどや粘膜組織の貫通などを引き起こし、すぐに取り出さないと、最悪の場合は死に至ることがあります。万一飲み込んだとき、または飲み込んだ恐れがあるときは、直ちに医師に相談してください。

### ⚠ 警告 死亡または重傷を負う恐れがある内容

#### <コイン型リチウム電池について>

- (1) 充電、ショート、変形、分解、加熱、火中に投入などをしないでください。この電池は、リチウム、有機溶媒など可燃性物質を内蔵しており、発火、発熱、破裂の原因となります。
- (2) 電池を廃棄する場合および保存する場合には、テープなどで絶縁してください。他の金属や電池と混ぜると発火、破裂の原因となります。

#### <梱包用ポリ袋について>

窒息する恐れがありますので、ポリ袋を絶対にかぶらないでください。

#### <液晶パネルについて>

液晶パネルが破損すると、破損した部分から液晶(液状)が漏れたり、ガラスの破片が飛び散ることがありますので、十分注意してください。万一、以下の状態になったときは、それぞれの応急処置を行ってください。

- (1) 皮膚に付着した場合  
付着物をふき取り、水で流し、石けんでよく洗浄してください。
- (2) 目に入った場合  
きれいな水でよく洗い流し、最低15分間洗浄した後、医師の診断を受けてください。
- (3) 飲み込んだ場合  
水でよく口の中を洗浄してください。大量の水を飲んで吐き出した後、医師の診断を受けてください。

### ⚠ 注意 けがをしたり家財に損害を与える恐れがある内容

#### <製品の設置場所について>

落下により、けがをしたり器物を破損する恐れがありますので、振動のある場所や、不安定な場所には本製品を設置しないでください。

#### <電池について>

下記の注意事項を必ず守ってください。電池の使い方を間違えると、液漏れや破裂により、本製品の故障やけがの恐れがあります。

- (1) 本製品を使わないときは、電池を取り外してください。電池を入れたままにしておくと、寿命の切れた電池からの液漏れなどにより、本製品や周囲の物を汚したり、傷めたりする恐れがあります。
- (2) 電池は必ず⊖側から入れてください。また、⊕側を正しく入れてください。
- (3) 付属の電池は充電式ではありません。充電すると液漏れや破裂の恐れがあります。
- (4) 電池に直接ハンダ付けしたり、水滴を付けたりしないでください。
- (5) 直射日光の当たる場所や、高温・多湿の場所を避けて保管してください。また、使用済みの電池は速やかに処分するか、幼児の手の届かない所に保管してください。
- (6) 本製品が動かないなどの場合、電池の端子が汚れていることがあります。そのときは、やわらかい布で乾拭きしてください。
- (7) 付属の電池は、工場出荷時に内蔵された電池です。お買上げ後、製品仕様の年数に満たないうちに電池寿命が切れることがあります。

#### <分解や改造をしない>

本製品を分解したり、改造したりしないでください。本製品の故障やけがの恐れがあります。

#### <製品と電池の廃棄について>

お住まいの自治体の定める規則に従い、廃棄してください。

## 必ずお読みになってからご使用ください

### 使用上のご注意

- 本製品にはマイコンが内蔵されています。静電気などにより誤動作することがありますが、故障ではありません。誤動作した場合は、リセットボタンを押してください。リセットボタンを押した場合は、時刻などがリセットされます。
- 本製品は日本標準電波仕様のため、海外では電波修正機能は使用できません。
- 電池交換後は、必ずリセットボタンを押してください。

#### <液晶パネルについて>

- 見る方向によって表示が薄くなったり、ムラになったりすることがあります。
- 温度が低くなると液晶表示の反応が遅くなる場合があります。
- 温度が高くなると液晶パネル面が黒くなり、判読できなくなる場合があります。
- 次の場合、静電気や圧力を加えることにより、黒い線・しみ・縞模様が発生することがありますが故障ではありません。しばらく放置しますと元に戻ります。  
・表示部のシールをはがしたり、乾いた布などでふいたとき  
・指などで液晶パネルを押したとき

### 使用場所について

下記のような場所では使用しないでください。本製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。

また、本製品は業務用ではありません。

- 温度が50°C以上になる所や直射日光の当たる所。  
(例) 屋外、または暖房器具などの熱風や火気に近い所。
- 温度が0°C以下になる所。
- ちり・ほこりの多い所。
- 大型テレビ・スピーカーのそばや、強い磁気のある所。
- 浴室など湿気が多い所。また、水がかかる所や加湿器の蒸気が直接当たるような所。
- 振動のある所。不安定な所。
- 工場、台所など、多くの油を使用する所。
- ビニール系素材の壁、敷物などの上。  
壁や敷物、および本製品が汚れたり傷むことがあります。
- 温度や湿度の変化が激しい所。  
寒い所から暖かい所への移動などにより、結露が生じることがあります。

本製品は、テレビやラジオと同様に電波を受信するものです。ご使用の際はできるだけ、電波を受けやすい窓際などに設置してください。なお、天候、時間帯、建物の影響など、次のような環境条件では正確に受信できないことがあります。場所を変えてご使用ください。

- ビルの中、ビルの谷間、地下
  - 高圧線、テレビ塔、電車の架線の近く
  - テレビ、冷蔵庫、エアコン、空気清浄機、パソコン、ファクシミリなどの家電製品やOA機器の近く
  - 工事現場、空港や軍事基地の近く、交通量の多い所など、電波障害が起きやすい所
  - 乗り物の中(自動車、電車、飛行機など)
  - スチール机など、金属製の家具の上や近く
  - その他、電波ノイズを発生させるものの近く
- ※ 電波を受信できない場合は、内蔵クオーツの精度で動作します。



## お手入れについて

- 本体を清掃するときは、湿った、やわらかい布でふいてください。
- 汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。その後、やわらかい布で乾拭きしてください。
- お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種ブラシなどは使用しないでください。また、殺虫剤、ヘアスプレーなどがかからないようにしてください。変色したり、傷が付く恐れがあります。

# はじめに

安全上のご注意ならびにその他の注意事項をお読みのうえ、ご使用ください。  
表示部にシールが貼ってある場合は、ゆっくりはがしてください。

※静電気により黒い線、しみなどが発生することがありますが、しばらく放置しますと元に戻ります。


# 付属品

ご使用前に確認してください。

- 取扱説明書(日本語・英語) 各1枚
- 保証書 1枚
- コイン型リチウム電池(CR2450) 1個
- ソフトケース 1袋

※付属の電池は、工場出荷時に内蔵された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池の寿命が切れることがあります。

# 各部の名称

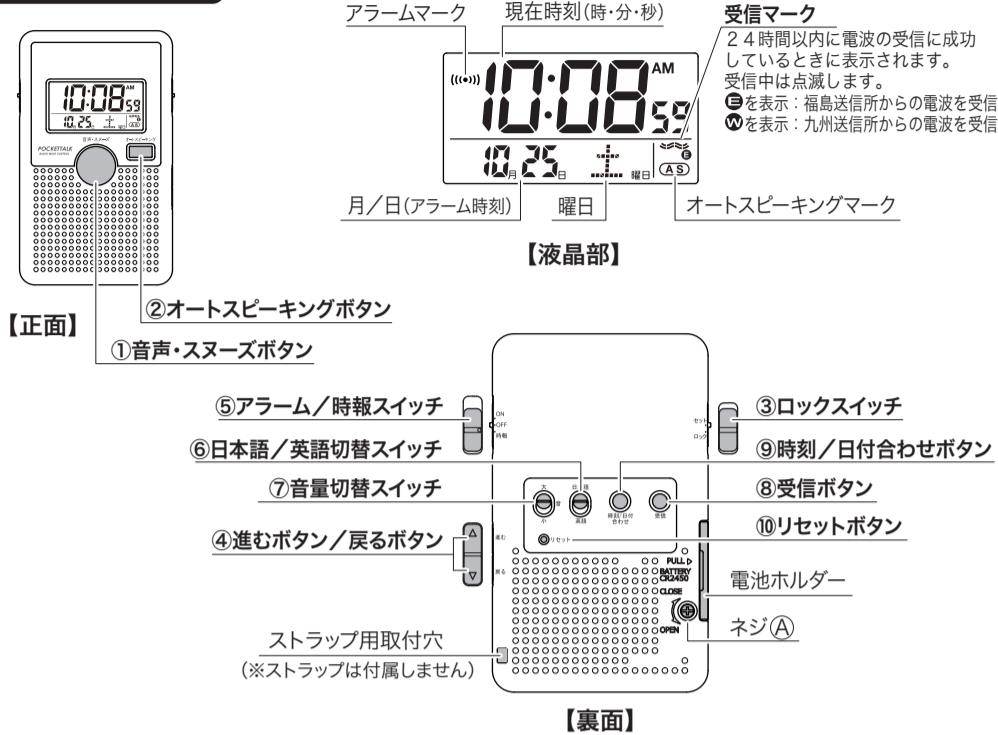


- ①音声・スヌーズボタン ー ボタンを押すと現在時刻、または日付を音声でお知らせします。アラームが鳴っているときに押しとスヌーズ機能が働き、約5分後に再びアラームが鳴ります。
- ②オートスピーキングボタン ー ボタンを押すと、1分毎に15分間現在時刻をお知らせします。
- ③ロックスイッチ ー 通常は、ロックの位置に合わせてください。
- ④進むボタン/戻るボタン ー アラーム時刻または現在時刻や日付を合わせるときに使用します。
- ⑤アラーム/時報スイッチ ー O: N:セットした時刻にアラームが鳴ります。OFF:アラーム、時報ともに鳴りません。時報:正時(0分)を音声でお知らせします。(アラームは鳴りません。)
- ⑥日本語/英語切替スイッチ ー 音声を日本語/英語に切り替えるときに使用します。
- ⑦音量切替スイッチ ー 音量を「大」または「小」に切り替えるときに使用します。
- ⑧受信ボタン ー 通常表示(日付・時刻が表示状態)のときに押しと標準電波の受信を開始します。受信中に押しと受信を中止します。
- ⑨時刻/日付合わせボタン ー 手で現在時刻や日付を合わせるときに使用します。
- ⑩リセットボタン ー 初期化を行います。電池交換後は先端の細いもので必ず押してください。

# ご使用方法

## 1. 電池を入れてください(コイン型リチウム電池 CR2450 1個)

- (1)時計裏面のネジ(A)をプラスドライバーで外してください。
- (2)電池ホルダーのくぼみ部分にマイナスドライバーなどをかけて、電池ホルダーを引き出してください。
- (3)絶縁紙をはずしてください。
- (4)電池の⊕側を上にして正しく電池ホルダーに入れ、時計にはめこんでください。
- (5)時計裏面のネジ(A)を取り付けてください。

※コイン型リチウム電池は電池の側面を持ってください。電池の⊕⊖面を持つとショートするため危険です。

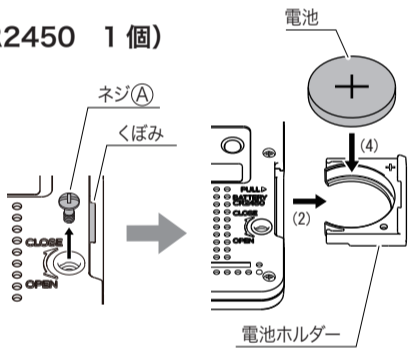

## 2. 「⑩リセットボタン」を先端の細いもので押してください

表示が全てついた後、時刻「12:00AM」となり、標準電波の受信を開始します。

(窓際などでできるだけ受信しやすい場所でのご使用をお勧めします。)

- 受信中は、Ⓜマーク(またはⓂマーク)が点滅し、受信マークが受信状態に応じて変化します。
- 受信に要する時間は最長約20分間です。
- 注)電池交換後は、必ず「⑩リセットボタン」を押してください。

### 【受信成功】

受信マークが表示され、[月/日] [曜日] [時:分] [秒]が正しい日付と時刻に修正されます。

- 受信成功後、正しく表示されているかをご確認ください。

### 【受信できない】

受信マークが表示されず、このとき時刻、日付の修正は行なわれていません。右記「電波を受信できなかった場合」にしたがって場所を変えて再度受信させるか、手動操作で時刻、日付を合わせてください。

- 使用場所の受信状態が良くない場合は、数分で受信を中断することができます。

## 3. アラームを鳴らすには

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「④進むボタン/戻るボタン」を押してください。
  - 日付がアラーム時刻に切り替わって点滅し、アラーム時刻合わせの状態になったことを音声でお知らせします。
- (3)「④進むボタン/戻るボタン」を押してアラーム時刻を合わせてください。
  - 「④進むボタン/戻るボタン」を押すたびにアラーム時刻を音声でお知らせします。
  - アラーム時刻合わせの状態が再度「④進むボタン/戻るボタン」を押し続けると早送りします。
  - 約5秒間押されない状態が続くと、自動的にアラーム時刻が確定し、[通常表示]に戻ります。
- (4)「③ロックスイッチ」をロックの位置に合わせてください。
- (5)「⑤アラーム/時報スイッチ」をONにしてください。
  - アラーム時刻になると音声(月日・曜日、現在時刻)と電子音でお知らせします。
  - アラームマーク(Ⓜ)が表示されます。
  - 日付がアラーム時刻に切り替わります。

## 4. アラームを止めるには

アラームを止めるには2通りの方法があります。

### アラームを完全に止める

- 「⑤アラーム/時報スイッチ」をOFFにして止めます。
- アラームマーク(Ⓜ)が消えます。

### 約5分後に再度アラームを鳴らす(スヌーズ機能)

- 「①音声・スヌーズボタン」を押すとアラームが止まり、約5分後に再び鳴り出します。
- スヌーズ中はアラームマーク(Ⓜ)が点滅します。
- スヌーズ機能は何回でも繰り返すことができます。

### アラームは約5分間で自動的に止まります。(オートストップ機能)

この場合、アラームマーク(Ⓜ)は表示されたままとなり、翌日のアラーム時刻に再びアラームが鳴ります。



# その他の機能

## ■自動受信について

午前2時から3時間ごとに、自動で電波受信を行います。受信に成功すると現在表示している時刻、日付を修正します。

## ■電波を受信できなかった場合

### 1. 電波を手動で受信させ時刻、日付を合わせる

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑧受信ボタン」を押してください。標準電波の受信を開始します。
  - 受信状態については、左記「ご使用方法」をご覧ください。
  - うまく受信できない場合は本体の向きや場所をかえて、もう一度受信させてください。ご使用中に受信マークが表示されない場合は、使用場所の受信状態が良くないことが考えられます。詳しくは裏面「使用場所について」をご覧ください。
  - また、夜間は昼間にくらべて受信状態が良くなりますので、昼間に受信できなかった場合でも翌日までに自動で受信できる場合があります。
- (3)「③ロックスイッチ」をロックの位置に合わせてください。

### 2. 手動で時刻、日付を合わせる

電波を受信できない場合は、手動で時刻、日付を合わせてご使用ください。

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑨時刻/日付合わせボタン」を2秒以上押し続けてください。
- (3)「⑨時刻/日付合わせボタン」を押すごとに、下図のように順に表示が点滅します。
- (4)「④進むボタン/戻るボタン」で日付や時刻を合わせてください。
  - 設定中は「⑨時刻/日付合わせボタン」を押すごとに設定する内容を音声でお知らせします。
  - 「④進むボタン/戻るボタン」を押すと変更された内容を音声でお知らせします。
  - 「④進むボタン/戻るボタン」を押し続けている間は早送りします。
  - 設定中に「①音声・スヌーズボタン」を押すと現在設定している内容を音声でお知らせします。
  - 約5分以上「④進むボタン/戻るボタン」や「⑨時刻/日付合わせボタン」が押されなかった場合は、自動的に[通常表示]に切り替わります。時刻や日付は[通常表示]に切り替わる直前の表示です。
  - 設定中に「③ロックスイッチ」をロックの位置に切り替えますと設定ができなくなります。

### <時刻表示>



### 【通常表示】

普段はこの表示でお使いください。

### 【年合わせ表示】

「⑨時刻/日付合わせボタン」を2秒以上押し続けてください。「④進むボタン/戻るボタン」で年を合わせてください。年は2000年~2099年まで合わせられます。

### 【月/日合わせ表示】

「⑨時刻/日付合わせボタン」を押してください。「④進むボタン/戻るボタン」で日付を合わせてください。曜日は自動的に合わせます。

### 【時刻合わせ表示】

「⑨時刻/日付合わせボタン」を押してください。「④進むボタン/戻るボタン」で時刻を合わせてください。「④進むボタン/戻るボタン」を押した瞬間に、秒表示は00秒にリセットされます。

### 【12/24時間制選択表示】

「⑨時刻/日付合わせボタン」を押してください。「④進む/戻るボタン」で12時間制または24時間制を選んでください。

- (5)12/24時間制選択が終了しましたら、「⑨時刻/日付合わせボタン」を押して[通常表示]に切り替えてください。
- (6)「③ロックスイッチ」をロックの位置に合わせてください。

## ■12時間制/24時間制の選択について

時刻の表示方法を切り替えるときは、上記「電波を受信できなかった場合 2.手動で時刻、日付を合わせる」にしたがって、12時間制または24時間制表示を選んでください。(受信マークが表示されている場合、時刻の表示方法を切り替えると受信マークは表示されませんが、その後受信に成功すると再度表示されます。)

## ■日本語/英語切替について

「⑥日本語/英語切替スイッチ」で音声を日本語または英語に設定できます。

## ■音量切替について

「⑦音量切替スイッチ」で音声を 大 または 小 に切り替えることができます。

## ■音声機能について

### 1. スピーク機能

「①音声・スヌーズボタン」を押すと現在時刻や月日・曜日を音声でお知らせします。

### 【現在時刻】

通常表示のときに「①音声・スヌーズボタン」を1回押しと現在時刻をお知らせします。

・12時間制を選択している場合 “(午前/午後)〇時〇分です”

・24時間制を選択している場合 “〇時〇分です”

※音声を日本語に設定し、かつ12時間制を選択している場合、12時(0分)に限り“12時です”とお知らせします。その際、“午前/午後”はお知らせしません。

### 【月日・曜日】

通常表示のときに「①音声・スヌーズボタン」を2回押し(約1秒以内)と月日・曜日お知らせします。

### 2. 時報機能

「⑤アラーム/時報スイッチ」を「時報」に合わせると、毎正時(0分)に時刻を音声でお知らせします。

- 「時報」の位置に合わせてアラームは鳴りません。

### 3. オートスピーキング機能

「②オートスピーキングボタン」を押すと、1分毎に15分間 現在時刻を音声でお知らせします。

- オートスピーキング中は(AS)マークが点滅します。
- オートスピーキング中に再度「②オートスピーキングボタン」を押すと、オートスピーキング機能は終了します。

過去24時間以内に電波を受信できていない場合は、現在時刻、月日・曜日、時報をそれぞれ音声でお知らせした後に“ブーン”と電子音が鳴ります。



## ■自動受信を止めるには

この時計には自動受信を止める機能があります。(海外で使用する場合や設定時刻をずらしてお使いになりたい場合等にご利用ください。)

- (1)「③ロックスイッチ」をセットの位置に合わせてください。
- (2)「⑧受信ボタン」を、“OFF”が表示されるまで8秒以上押し続けてください。(音声でもお知らせします。)
- (3)上記「電波を受信できなかった場合 2.手動で時刻、日付を合わせる」にしたがって時刻を合わせてください。
  - この機能を設定した後も「⑧受信ボタン」を押すと受信を行います。その後自動受信はしません。
  - この機能を解除するには、「⑧受信ボタン」を、“ON”が表示されるまで8秒以上押し続けてください。(音声でもお知らせします。)
- (4)「③ロックスイッチ」をロックの位置に合わせてください。

## Radio-controlled Alarm Clock Instruction Manual

Thank you for purchasing a SEIKO clock. Please read the instructions carefully for proper and safe use of your SEIKO clock before using it, and retain this manual for future reference.

Instructions are subject to change without prior notice. The appearance of the figures in the instructions may differ from the actual display due to printing limitations. SEIKO WATCH is not responsible for any additional expenses or losses that result from the use of this clock. Any amendment or copying of this instruction manual without the permission of SEIKO WATCH is prohibited.

Should you have any questions concerning clock or aftersales service, confirm the product number on the back of the case or the bottom of the clock and contact the CLOCK CUSTOMER SERVICE CENTER

( Examples of product numbers: DA\*\*\*, BC\*\*\*, SQ\*\*\*, etc. )

CLOCK CUSTOMER SERVICE CENTER  
Toll Free 0120-315-474

<https://www.seikowatches.com/jp-ja/> (Japanese language website)

Sales Representative

SEIKO WATCH CORPORATION

INSTRUCTION MANUAL No. (E)FDA-015W

## FEATURES

- This radio-controlled clock displays the current time and date by receiving a standard radio signal. This has a radio modification function. (Compatible within Japan)
  - It automatically selects the station transmitting an east or west radio signal (Fukushima or Kyushu).
  - By pressing the SPEAK/SNOOZE button, a voice informs you of the current time or date. (When the alarm time or current time is adjusted, a voice informs you of the time being set.)
  - Either Japanese or English voice can be selected.
  - An auto-speaking function informs you of the current time every one minute for 15 minutes.
  - Time signal sounds every hour (0th minute) when the time signal is set.
  - The alarm consists of both voice and electronic beep sound. (Alarm and time signal functions cannot be used simultaneously.)
  - With the snooze function, the alarm starts ringing again even if it is stopped.
  - The auto-stop function automatically stops the alarm after approximately five minutes.
- \* When the clock is outside the reception range, it can be used as a quartz clock.

## WHAT IS A RADIO-CONTROLLED CLOCK?

### ■ A radio-controlled clock / Automatic time setting:

The radio-controlled clock displays the current time precisely by automatically receiving an official standard frequency.


### ■ Official standard frequency in Japan (JJY)

JJY transmits the time signal from the National Institute of Information and Communications Technology (NICT). There are two JJY stations, and each one transmits at a different frequency. Time information of the official standard frequency is generated by an "atomic clock" that may gain or lose 1 second over the course of 100,000 years.

### ■ Remarks on reception of official standard frequency

The reception ranges from the JJY stations (one in the eastern part and the other in the western part of Japan) are approximately 1,000 km to 1,200 km, depending on conditions.

This clock automatically chooses either of the frequencies, 40 kHz (East, Fukushima transmitting station) and 60 kHz (West, Kyushu transmitting station), whichever is easier to receive; however, it may not be able to receive a radio signal due to climatic conditions, the direction or location of the clock, the time, geographic location or radio disturbance such as caused by buildings.

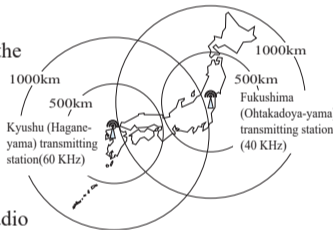

### ■ Note

- The clock may display the wrong time. This may happen if it fails to receive radio signals properly because of interference, an inappropriate location, or bad radio wave receiving conditions. Should this happen, move the clock to another place where it can receive radio signals.
- Even though the clock is unable to receive radio signals, its quartz movement will continue to keep the time.
- Time signal transmission from NICT is stopped twice each hour, for one minute at 15 minutes past and again at 45 minutes past when a call sign is being transmitted. The transmission of a time signal may also be stopped during maintenance of NICT facilities or because of a lightning strike. See Japan Standard Time Group homepage for information on radio signal interruption. (Homepage address: <https://jty.nict.go.jp/>)

## PRODUCT SPECIFICATIONS

- Manual time setting: Loss/gain (monthly rate) is less than 30 seconds (at a normal temperature range between 5°C and 35°C)
  - Display shows less than 1 second loss/gain after receiving radio signal.
  - Operational temperature range: between 0°C and +50°C (the display can be read between 0°C and +40°C)
  - Alarm: Voice and electronic beep sound which changes at three stages, auto-stop for approximately 5 minutes, snooze for approximately 5 minutes (the snooze function can be used repeatedly).
  - Automatic calendar: The calendar adjusts automatically for odd and even months including February of leap years from Jan. 1, 2000 to Dec. 31, 2099.
  - Time/Calendar display: Hour, minute, second, date (⇄alarm time), day of the week can be displayed. 12-hour time indication with AM/PM indicator and 24-hour indication are available.
  - Battery: Coin type Lithium batteries (CR2450), 1 pc
  - Battery life: Approximately 1 year
  - Time setting by receiving a radio signal: Automatic reception (Every three hours from 2:00 AM. The clock moves according to the quartz movement accuracy until the next reception.) Manual reception
- \* The specifications are subject to change without prior notice due to product improvement.

## AFTERSALES SERVICE AND GUARANTEE

- We certify your SEIKO clock is guaranteed against defects in material and workmanship. Refer to the guarantee attached to the clock for further details. This guarantee is valid only in Japan. Also aftersales service is available only in Japan.
- If your clock malfunctions during the course of normal use while under guarantee, we will regulate, adjust, repair, or replace it at no cost to you. Please present your clock to the retailer from whom the clock was purchased with the valid guarantee on which the retailer's stamp is affixed.
- A malfunction which is not covered by our guarantee or that has occurred after the guarantee period has elapsed will be repaired at cost, if you request to have your clock repaired.
- A stock of replacement parts for SEIKO clocks will be kept for 3 years. In principle, your clock can be repaired within this period. Replacement parts are parts essential to maintaining the functional integrity of the clock. Please note that, depending on the conditions of use, your clock may not be able to be reconditioned or its accuracy may not be restored. Please consult the retailer from whom the clock was purchased when requesting repairs to your clock.
- Please note that, if the clock parts or accessories are damaged, some alternative parts may be used for repairs.
- During the guarantee period or after the guarantee period has elapsed, you may present a clock to the retailer from whom the clock was purchased to request repairs.
- In case of a malfunction which is not covered by our guarantee or a malfunction that has occurred after the guarantee period has elapsed, repair costs, transfer fees from the retailer to our factory, and other costs shall be paid by the owner of the clock. Please note that these costs may exceed the retail price of the clock.

## Make sure to observe. SAFETY PRECAUTIONS

### ⚠ DANGER

#### <Remarks on coin and button type lithium batteries>

- (1) Keep out of reach of children.
- (2) Never put batteries in mouth. Swallowing may lead to serious injury or death, so spit it out soon. If ingested, immediately seek medical attention.

### ⚠ WARNING

#### <Remarks on coin type lithium batteries>

- (1) Never attempt to short circuit, recharge, dismantle, or heat a battery, or place it in a fire. The batteries contain flammable substances such as lithium and organic compounds. Improper use of the batteries may cause fire, heat generation, leakage and explosion.
- (2) If the batteries are to be thrown away or stored, insulate them with tape, etc. If batteries are placed together with other metals or batteries, it may cause a fire or an explosion.

#### <Remarks on plastic bag packaging>

Never put a plastic bag over your head or face.

### ⚠ CAUTION

#### <Remarks on places where clock is installed>

Do not install the clock in a place subject to vibration or an unstable place where the clock may fall resulting in injury or damage to property.

#### <Remarks on batteries>

Please be sure to observe the following correct battery usage. Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

- (1) Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
- (2) If the battery life described in the product specifications has passed, replace all batteries with new ones as specified in this manual even when the clock is still working. Also, remove all batteries if you do not use the clock. If only one of the batteries is replaced or old batteries are kept inside, other parts may stop or liquid leakage from old batteries may contaminate or damage the clock.
- (3) Charging may result in liquid leakage or damage because included batteries are not rechargeable types.
- (4) Do not directly solder the batteries, and do not drop water on the batteries.
- (5) For storage, avoid places exposed to direct sunlight, high temperatures and high humidity. Immediately dispose of used batteries and keep them away from children in the case of storage.
- (6) When the clock does not work, the battery terminals may be contaminated. Clean the terminals with a soft cloth.
- (7) As the initial batteries are inserted at the factory, their actual lives once in your possession may be shorter than the specified period.
- (8) Do not use rechargeable batteries and Hi-Volt type.

#### <Disposal>

Please follow the instructions of local government regulation.

#### <Remarks on liquid crystal panel>

If the liquid crystal panel of the clock is broken, care should be taken to avoid injury. In the case of any of the incidents below, take the following emergency steps;

- (1) If your skin is in contact with the liquid crystal, gently wipe away, rinse your skin with clean water.
- (2) If the liquid crystal gets into your eyes, rinse your eyes with clean water for more than 15 minutes, and consult a doctor immediately.
- (3) If the liquid crystal is swallowed, rinse the inside of the mouth, drink an excessive amount of water so as to induce vomiting, and consult a doctor immediately.

## MAKE SURE TO READ BEFORE USE

### <Location and Carry >

Avoid using your SEIKO clock in the following places. Be careful of carry it.

Otherwise, the quality of the product, malfunction and batteries may not be ensured, resulting in trouble in precision and battery exhaustion. This product is not for commercial use.

- Under conditions where the temperature is below 0°C
  - Under conditions where the temperature is above 50°C or where it is exposed to direct sunlight  
For example, outdoors, places exposed to hot air caused by heating appliances, etc., or close to flames
  - Do not place in moist, humid environments such as in a bathroom, places splashed with water and places directly exposed to steam from humidifying devices
  - Also, do not place near areas exposed to strong magnetic fields or vibrations or unstable places
  - Do not place near the many cooking oil at the kitchen and factory.
  - Do not place in the dust
  - Close to sources that create radio static.
- This clock receives radio signals in the same way as a TV or radio. Keep the clock where it can easily receive signals, for instance, close to a window. Please note that the clock may be unable to receive radio signals properly under the following conditions.**
- Inside a large building, between tall buildings, underground
  - Close to TV stations, overhead power lines, and train cables
  - Close to home electrical appliances or Office Automation devices such as TV's, air conditioners, air cleaners, refrigerators, PC's, or fax machines
  - In places generating radio interference, such as near construction sites, airports, military bases, or in heavy traffic
  - Inside a vehicle, train, or airplane
  - Close to other sources that cause radio static, wave controllers and noise.
  - Close to furniture made of steel, such as a steel desk

### <Remarks on liquid crystal panel>

- Depending on the direction of the clock, the digital display may be faint or uneven.
- When the clock is operated in low temperatures, the response of the digital display may become slower.
- When the clock is operated in high temperatures, the liquid crystal panel may become dark and may not be readable.
- Do not touch the liquid crystal panel, as the digital display may become faint or uneven. If the panel is touched, leave it untouched for a while, and the display will return to normal.

### <Care of your clock>

- When cleaning the clock case, wipe it with a soft moist cloth.
- If the clock case becomes excessively dirty, wipe it with a soft cloth moistened with a small amount of diluted detergent, and wipe again with a dry cloth.
- Do not use benzene, thinner or alcohol, cleanser or brushes, to clean the clock case. Also, do not expose the clock to insecticide or hair spray. Otherwise, discoloration or damage may result.

## TROUBLESHOOTING

When the product does not operate normally, refer to the table below to check before requesting repair. And when replacing the batteries with new ones, check the recommended period of use before use.

Symptom	Possible Cause	Treatment
Nothing is displayed. No sound is produced.	- There is no battery in the clock.	- Check the direction of the newly inserted batteries, and press the RESET button.
	- The battery capacity is low.	- Reinsert the batteries correctly and make sure to press the RESET button.
	- The plus (+) and minus (-) portions of the battery are positioned incorrectly.	- Make sure to press the RESET button.
The time or calendar is not displayed completely.	-The clock is reset improperly.	- Check the direction of the newly inserted batteries, and press the RESET button.
	-Improper operation caused by static electricity, etc.	- Reinsert the batteries correctly and make sure to press the RESET button.
The time or calendar is adjusted improperly.	-The battery capacity is low.	- Read the reverse page ■ <b>If the clock fails to receive a radio signal</b> , to attempt to receive a radio signal again.
	- The clock is reset improperly.	- Check the direction of the newly inserted batteries, and press the RESET button.
	- The signal reception is unsuccessful.	- Make sure to press the RESET button.
No work at push the UP/DOWN button, SIGNAL button, TIME/DATE SETTING button	- "Lock switch." is Lock position.	- Move the "Lock switch." to Set position.
The alarm does not ring	- "ALARM/TIME SIGNAL switch" is turned OFF.	- Turn ON the "ALARM/TIME SIGNAL switch."
	- Improper operation caused by static electricity, etc.	- Reinsert the batteries correctly and make sure to press the RESET button.
	- The battery capacity is low.	

## HOW TO USE THE CLOCK



(While the design of the clock differs depending on the model, the method of operation is the same.)

### ■ Accessories (Check the included accessories before use.)

- Coin type lithium battery (CR2450) 1 pc.
- One guarantee certificate
- One pouch
- Instruction manual (Japanese and English) 1 pair.

\* Attached battery was for test, their actual lives once in your possession may be shorter than the specified period.

### ■ Switch and Buttons

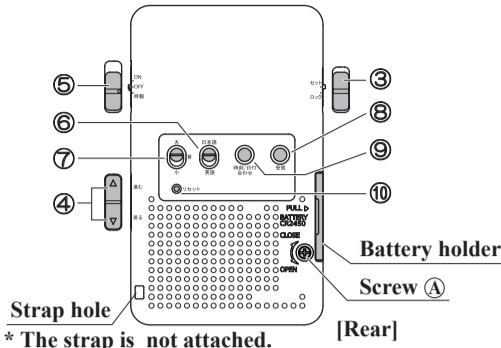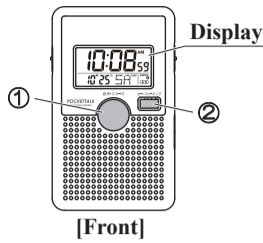

\* The strap is not attached.

#### ① SPEAK/SNOOZE (音声・スヌーズ) button

- If the SPEAK/SNOOZE button is pressed, a voice will inform you of the current time or date.
- If this button is pressed while the alarm is ringing, the sound stops and the snooze function is activated. The alarm will ring again approximately 5 minutes later.

#### ② AUTO SPEAKING (オートスピーキング) button

- If the AUTO SPEAKING button is pressed, you will be informed of the current time every one minute for 15 minutes.

#### ③ Lock (ロック) switch

- Normal position : **Lock**
- \* Set the lock switch to "Lock" position to avoid working ④ UP/DOWN button, ⑧ SIGNAL RECEIVING button.

#### ④ UP (進む)/DOWN (戻る) button

- The UP/DOWN button is used to set the alarm time or the current time and date.


#### ⑤ ALARM/TIME SIGNAL switch

- **ON** : The alarm rings at the set time.
- **OFF**: Both the alarm and time signal do not ring.
- **Time signal (時報)** :  
A voice will inform you of the hour (0th minute).  
(The alarm does not ring.)

### ■ Displays (ENGLISH selection)

#### Month/Day (⇒alarm time)

When the "ALARM/TIME SIGNAL switch" is turned "ON," alarm time is displayed.

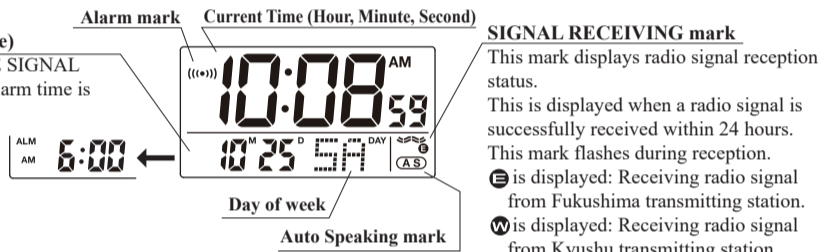


### ■ How to use the clock

- If the protective film on the display, please slowly peel off before using the clock.  
(Black lines or spots may occur due to static electricity at this time. It returns to the normal status if left for a while.)

#### 1. Insert the battery (coin type lithium battery CR2450), 1 pc.

- (1) Loosen Screw A on the back of the clock with a plus (+) screw driver.
- (2) Pull out the battery holder by catching a minus (-) screw driver on the hollow on the back.
- (3) Take off the insulator.
- (4) Set the battery with being the plus (+) side outward.
- (5) Tighten Screw A on the back of the clock.

\* Hold the sides of the battery when handling it. Holding plus (+) and minus (-) sides of the battery may cause a short circuit.

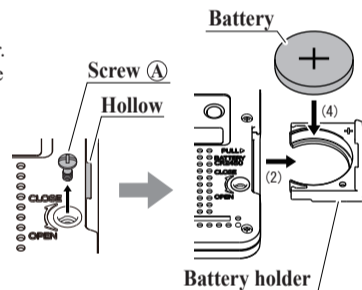

#### 2. Press the RESET button with an object having a thin end.

- Press the "⑩ RESET button" with an object having a thin end.
- After all display details are turned on, the time shows "12:00 AM" and the clock starts receiving a standard radio signal.
- **Note:** After replacing the batteries with new ones, be sure to press the "⑩ RESET button."

It is recommended to use this clock in a place where a signal can be easily received such as near a window.

- The ⑤ mark (or ⑥ mark) during signal reception, and the SIGNAL RECEIVING mark ⑧ changes depending on receiving status.
- Time necessary for signal reception is up to approximately 20 minutes.

#### [Successful reception]

The SIGNAL RECEIVING mark ⑧ is displayed, and the [Date], [Day of week], [Hour: minute] and [Second] are modified to the correct date and time.

- Please check whether they are correctly displayed after successful reception.

#### [If a clock fails to receive a radio signal]

The SIGNAL RECEIVING mark ⑧ is not displayed, and the time and date are not modified at this time. Change the place to allow the clock to receive according to the section of "■ If the clock fails to receive a radio signal", or manually set the time and date.

- When the clock is placed where the reception strength is insufficient to receive radio signals, it will temporary stop searching for radio signals after a few minutes.

#### [Selection of 12/24-hour indication]

When changing the time indication method, select the 12-hour indication or 24-hour indication according to the section of "■ If the clock fails to receive a radio signal 2. The time and calendar can be set manually." as described at the right. (When the SIGNAL RECEIVING mark ⑧ is being displayed, the mark disappears if the time indication method is changed; however, it is displayed again if the radio signal is successfully received.)

### 3. How to use the alarm

- (1) Press the "④ UP/DOWN button."  
The Alarm time flashes, and a voice informs you that the alarm time setting mode has been set.
- (2) Press the "④ UP/DOWN button" to set the alarm time.
  - Every time after the "④ UP/DOWN button" is pressed, a voice informs you of the alarm time.
  - If the "④ UP/DOWN button" is again kept pressed in alarm time setting status, the hour and minute digits advance quickly.
  - If the "④ UP/DOWN button" is not pressed for more than approximately 5 seconds, the alarm time is automatically confirmed and the display returns to the NORMAL display.
- (3) Move the "⑤ ALARM/TIME SIGNAL switch" to **ON**.  
A voice informs you of the date, day of week, current time, and an electronic beep sound is heard at the alarm time.
  - The alarm mark ⑩ comes on, and display of month and day changes to display of alarm time.
- (4) Select "High" or "Low" with the "⑦ VOLUME switch."

### 4. How to stop the alarm

There are two ways to stop alarm.

#### [To completely stop the alarm]

- Move the "⑤ ALARM/TIME SIGNAL switch" to **OFF** to stop the alarm.
- The ALARM mark ⑩ disappears.

#### [To ring the alarm again after approximately 5 minutes (Snooze function)]

When the "① SPEAK/SNOOZE button" is pressed, the alarm stops temporarily, and after approximately 5 minutes, it will start ringing again.

- While the snooze function is activated, the alarm mark ⑩ continues to flash.
- The snooze function can be used repeatedly.

#### After the alarm rings for approximately 5 minutes, it automatically stops (Automatic stop function).

The alarm mark ⑩ remains being displayed, and the alarm will ring again at the same time the next day.

## OTHER FUNCTIONS

### ■ Automatic signal reception

The clock automatically receives a radio signal every three hours from 2:00 AM. If the reception is successful, the time and calendar are automatically reset to the current time.

### ■ If the clock fails to receive a radio signal

#### 1. Perform a manual reception of radio signals to set the time and calendar.

- (1) Move the "③ Lock switch" to **Set**.
- (2) Press the "⑧ SIGNAL RECEIVING button." The clock starts receiving radio signals.
  - Refer to "■ How to use the clock" to check the receiving strength and indication.
  - If the clock is unable to receive a radio signal, move it to another place or change the direction of the clock and try again. If the SIGNAL RECEIVING marks ⑧ are not displayed during reception, the radio signals may not be sufficient to reach/access where the clock is placed.
  - Refer to **WHAT IS A RADIO-CONTROLLED CLOCK** for further details.  
Since reception conditions are relatively better at night, the clock may be able to receive signals the following day even if the clock has been unable to receive signals during the previous daytime.
- (3) Move the "③ Lock switch" to **Lock**.

#### 2. The time and calendar can be set manually.

If the clock is unable to receive any radio signals, the time and date can be set manually.

- (1) Move the "③ Lock switch" to **Set**.
- (2) Keep pressing the "⑨ TIME/DATE SETTING button" for more than 2 seconds.
- (3) With each press of the "⑨ TIME/DATE SETTING button," the selected item to be adjusted flashes in the order as shown in the figure below.
- (4) Set the date and time with the "④ UP/DOWN button."
- (5) When selection of 12/24-hour indication is ended, press "⑨ TIME/DATE SETTING button" to change to the

[NORMAL display].



[NORMAL display]

Generally use the clock with the NORMAL display.



[YEAR SETTING display]

Press the "④ UP/DOWN button" to set the year. The year can be selected from 2000 to 2099.



[MONTH /DATE SETTING display]

Press the "④ UP/DOWN button" to set the month and date. The day will be automatically adjusted.



[TIME SETTING display]

Press the "④ UP/DOWN button" to set the time.



[12/24-HOUR INDICATION SETTING display]

Select the 12 hour indication or 24 hour indication with the "④ UP/DOWN button."

#### (6) Move the "③ Lock switch" to **Lock**.

- Every time the "⑨ TIME/DATE SETTING button" is pressed during setting, a voice announces the contents to be set.
- After the "④ UP/DOWN button" is pressed, a voice announces the changed contents.
- If the "④ UP/DOWN button" is kept pressed, the time and date digits advance quickly.
- When the "① SPEAK/SNOOZE button" is pressed during setting, a voice announces the currently set contents.
- If the "④ UP/DOWN button" or "⑨ TIME/DATE SETTING button" is not pressed for more than approximately 5 minutes, the display automatically change to the [NORMAL display]. The time and date are those displayed just before they change to the [NORMAL display].

### ■ JAPANESE/ENGLISH selection

The voice can be set to either Japanese or English with the "⑥ JAPANESE/ENGLISH select switch."

### ■ Sound volume change

Voice can be changed to "High" or "Low" with the "⑦ VOLUME switch."

### ■ Voice function

#### 1. SPEAK function

When the "① SPEAK/SNOOZE button" is pressed, and a voice announces the current time, date and day of week.

#### [Current time]

When the "① SPEAK/SNOOZE button" is pressed **once** in the NORMAL display, you are informed of the current time.

- 12-hour indication is selected "It is : : (AM/PM)"
- 24-hour indication is selected "It is : :"

\* If the voice is set to JAPANESE and the 12-hour indication is selected, the time is informed as "12 o'clock" only for 12 o'clock (0th minute). In this case, "AM/PM" is not said.

#### [Date and Day of week]

If the "① SPEAK/SNOOZE button" is pressed **twice** in NORMAL display (within 1 second), you are informed of the Date and Day of week.

#### 2. Time signal function

If the "⑤ ALARM/TIME SIGNAL switch" is set to TIME SIGNAL, the time is informed by voice every hour (0th minute).

- If it is set to "TIME SIGNAL," the alarm does not ring.

#### 3. AUTO SPEAKING function

When the "② AUTO SPEAKING button" is pressed, you are informed of the current time every one minute for 15 minutes.

- The AUTO SPEAKING mark ⑬ flashes during AUTO SPEAKING mode.
- If the "② AUTO SPEAKING button" is pressed again during AUTO SPEAKING mode, the AUTO SPEAKING function ends.



[In AUTO SPEAKING mode]

When a radio signal has not been received in the past 24 hours, an electronic "bong" will sound after a voice say the current time, date, day and time signal.

### ■ To inactivate the clock radio signal reception

The clock can be set not to receive radio signal.

(The function can be used to prevent the clock from receiving the wrong radio signals or to set the clock to a time different from the standard time.)

- (1) Move the "③ Lock switch" to **Set**.
- (2) Keep pressing the "⑧ SIGNAL RECEIVING button" for more than 8 seconds until "OFF" is displayed.  
(A voice also informs you.)
- (3) Set the time according to the above section of "■ If the clock fails to receive a radio signal 2. The time and calendar can be set manually."
- (4) Move the "③ Lock switch" to **Lock**.
  - Even after setting this function, radio signal will be received if the "⑧ SIGNAL RECEIVING button" is pressed. After that, radio signal will not automatically be received.
  - To reactivate automatic reception, keep pressing the "⑧ SIGNAL RECEIVING button" for more than 8 seconds until "ON" is displayed. (A voice also informs you.)

### ■ Notes

- The clock is equipped with a microcomputer. Any happening may be caused by interference from static electricity, etc.; however, this is not a malfunction. If this happens, press the "⑩ RESET button."
- When the "⑩ RESET button" is pressed, the set time and other functions are all reset.
- The strap is not attached to this alarm clock.
- This product is of standard Japanese radio signal specifications; therefore, the radio signal modification function cannot be used outside Japan.
- After replacing the batteries with new ones, be sure to press the "⑩ RESET button."