DECOR
SEIKO

置時計　クオーツクロック

取扱説明書

この度はデコールセイコーをお買い上げいただき、誠にありがとうございました。
ご使用の前にこの取扱説明書をよくお読みのうえ、正しくご使用ください ますようお願い申し上げます。
なお、この取扱説明書はお手元に保管し、必要に応じてご覧ください。

必ずお守りください。　安全上のご注意 ▶

⚠ 危険　死亡または重傷を負う可能性が高い内容

<コイン型リチウム電池について>
(1) 電池は乳幼児の手の届かない所に置いてください。
(2) 誤って電池を飲み込んだ、化学やけどや粘膜組織の異通などを引き起こし、すぐに取り出さないと、最悪の場合は死に至ることがあります。万一飲み込んだ と、または飲み込んだ恐れがあるときは、直ちに医師にご相談ください。

⚠ 警告　死亡または重傷を負う恐れがある内容

<コイン型リチウム電池について>
(1) 充電、ショート、分解、加熱、火中に投入をしないでください。この電池は、リチウム、有機溶媒などの可燃性物質を内蔵しており、発火、発熱、破裂の原因となります。
(2) 電池を廃棄する場合はショートを防止するため、テープなどで絶縁してください。他の金属や電池と混ぜると発火、破裂の原因となります。

<長時間用ボリ接については>
壁掛ける恐れがありますので、ボリ溝を絶対にお止ないでください。

⚠ 注意　けがをしたり家財に損害を与える恐れがある内容

<製品の設置場所について>
落下や転倒による、けがをしたり器物を破損する恐れがありますので、振動のある場所や、不安定な場所には本製品を設置しないでください。

<電池について>
下記の注意事項を必ずマッてください。電池の使い方を間違えると、液漏れや破裂により本製品の故障や火災などの恐れがあります。
(1) 製品仕様に記載された電池寿命を経過した場合は、本製品が正常に動いても、新しい電池と交換してください。また、本製品を使わないときは、電池を取り外してください。電池を入れたままにすると、寿命の切れた電池からの液漏れなどによる、本製品や周囲の物を汚したり、傷めたりする恐れがあります。
(2) 電池は必ず＋と－を合わせてください。また、⊖ ⊕を正しく入れてください。
(3) 付属の電池は充電ではきません。充電すると液漏れや破裂の恐れがあります。
(4) 電池に直接ハンダ付けはしないでください。本体を傷めることがあります。
(5) 直射日光の当たる場所や、温湿・多湿の場所を避けて保管してください。また、使用済みの電池は速やかに処分するか、お近くの手の届かない所に保管してください。
(6) 本製品が動かないなどの場合、電池の端子が汚れていることがあります。そのときは、やわらかい布で拭き上げてください。
(7) 付属の電池は、工場出荷時に同梱された電池です。お買い上げ後、製品仕様の寿命に達しないうちに電池交換が切れることがあります。
(8) 充電式電池や初期電圧が高い電池を使用しないでください。正常に動作しなかったり、電池寿命が大幅なばらつきの不具合が発生する場合があります。

<分解や改造をしないよう>
本製品を分解したり、改造したりしないでください。本製品の故障やけがの恐れがあります。

<製品と電池の廃棄について>
お住まいの自治体の定める規則に従い、廃棄してください。

必ず読みになってからご使用ください。　使用場所・お手入れ ▶

使用場所について

下記のような場所では使用しないでください。
本製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。また、本製品は雑雨ではありません。
●温度が5℃以上となる冷や暖房日光の当る所。
（例）屋外、または玄関屋員などの熱風や火気に近い所。
●温度が－10℃以下になる所。
フラストチップなどの電池が劣化することがあります。
●匂り、ほこりの多い所。
型気中に匂いよどったこみが歯車や接点に挟まり、時計が止まることがあります。
●天型テレビ・スピーカーの そばや、強い磁気の ある所。
磁力の影響で、遅み・進みが生じて、時計が止まることがあります。
●湿気など湿気が多い所。また、水がかかる所や加湿器の蒸気が直接当たるような所。
●結露のある所。不安定な所。
●工場、台所など、多くの油を使用する所。
型気になった油分が時計の歯車などに付着し、時計が止まることがあります。
●ビニール系素材の型、敷物などの上。
型や敷物、および本製品が汚れたり変色することがあります。
●温度や湿度の変化が激しい所。
周い所や寒い所から暖かい所へ移動したとき、結露が生じることがあります。
●木枠の製品の場合は、空気が非常に乾燥した状態や湿気の多い状態が続くと、枠が痛むことがあります。また、40℃以上の高温になると、接合部が変形したり接着することがあります。

お手入れについて

【プラスチック枠の製品の場合】
●本体を清掃するときは、湿った、やわらかい布でふいてください。
●汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。その後、やわらかい布で乾かしてください。

【木枠・金属枠の製品の場合】
●汚れやすいので、やわらかい布で乾かしてください。

※お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種プラシなどは使用しないでください。また、殺虫剤、ヘアスプレーなどがかからないようにしてください。変色したり、傷が付く恐れがあります。
※輸送などにお使いいただくために、個装箱の保管もおすすめいたします。

ご使用方法 ▶　（製品により外観が異なりますが、操作方法は同じです。）

■ご使用の前に付属品をご確認ください。
●取扱説明書（本書）　1冊　●保証書　1冊　●手袋　1双
●コイン型リチウム電池(CR2477)　1個　●クロス　1枚
（※電池は電池ふた内にセットされています。）

■①～③の手順にしたがって操作してください。

1 裏ぶたを開ける

つまみを左に回して裏ぶたを開けてください。

2 時刻を合わせる


スタート/ストップスイッチをSTOPにして針まわしを回し、時刻を合わせます。
※左右どちらに回しても構いません。

3 STARTに合わせる

スタート/ストップスイッチをSTARTに合わせてください。
※針が動きます。
つまみを右に回して裏ぶたを閉めてください。

■ 電池の交換方法
① 裏ぶたを開けてください。
② コイン状のもの電池ふたの溝に合わせてOPENの方向に回し、電池ふたを左にはずします。
③ 古い電池をはずしてください。
④ ⊕ 側を上にして電池を入れ、電池ふたをCLOSEの方向に閉めてください。
⑤ 裏ぶたを閉めてください。



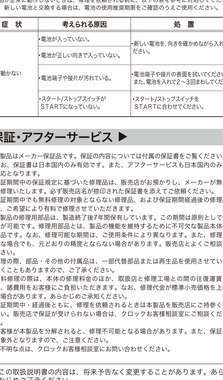

製品仕様 ▶（改良のため予告なく変更する場合があります。）

● 時　間　精　度：平均月差±15秒
（気温5℃から35℃で使用した場合）
● 使 用 温 度 範 囲：－10℃～50℃
● 使　用　電　池：コイン型リチウム電池（CR2477）　1個
● 電　池　寿　命：約5年

※電池の寿命はご使用の条件によって変わります。

故障かな？と思ったときには ▶

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。なお、新しい電池と交換する場合は、電池の使用推奨期間をご確認のうえご使用ください。

症　状	考えられる原因	処　置
針が動かない	・電池が入っていない。	・新しい電池を、向きを確かめながら入れてください。
	・電池が正しい向きで入っていない。	
	・電池端子や接片が汚れている。	・電池端子や接片の表面を拭いてください。また、電池を入れて2～3回おもりください。
	・スタート/ストップスイッチがSTARTになっていない。	・スタート/ストップスイッチをSTARTに合わせてください。

保証・アフターサービス ▶

●本製品はメーカー保証品です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応となります。
●保証期間中の保証規定に基づいた修理品は、販売店がお預かりし、メーカーが無料で修理いたします。必ず販売店名が捺印された保証書を添えてご依頼ください。
●保証期間中でも無料修理のお受けできない修理品、および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
●本製品の修理用部品は、製造終了後7年間保有しています。この期間は原則として修理が可能です。修理用部品とは、製品の機能を維持するために不可欠な製品本体の部品です。なお、修理可能な期間は、ご使用条件により異なります。また、修理可能な場合でも、元どおりの機能とならない場合があります。販売店などよくご相談ください。
●修理の際、部品・その他の付属品は、一部代替部品または再生品を使用させていただくことがありますので、ご了承ください。
●有料修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃など、諸費用をお客様にご負担いただきます。なお、修理代金が標準小売価格を上回る場合があります。あらかじめご相談ください。
●保証期間中・経過後とも、修理を依頼されるときは本製品を販売店にご持参ください。販売店で保証が受けられない場合は、クロックお客様相談室にご相談ください。
●お客様がお製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりますので、ご注意ください。
●ご不明な点は、クロックお客様相談室にお問い合わせください。

この取扱説明書の内容は、将来予告なく変更することがあります。あらかじめご了承ください。
印刷による制限のため、この取扱説明書中の図が実際の表示と異なる場合があります。
本製品によって生じた、いかなる支出、損益、その他の損失に対して、弊社は一切の責任を負いません。
この取扱説明書の内容の一部または全てを、製造者の許可なく転載・変更・複製することは禁じられています。

本製品、またはアフターサービスなどについてご不明な点がありましたら、製品の裏面または底面に表示されている製品番号（品番）をご確認のうえ、下記クロックお客様相談室にお問い合わせください。

（例：AZ○○○、AS○○○、FW○○○など）

クロックお客様相談室　0120-315-474
https://www.seikowatches.com/jp-ja/

発売元
セイコーウオッチ株式会社

DECOR
SEIKO

Table Clock / Quartz Clock

Instruction Manual

Thank you for purchasing DECOR SEIKO.
Please read this instruction manual carefully before use for proper and safe operation.
Please keep this instruction manual in a safe place for future reference.

Please make sure to observe. SAFETY PRECAUTIONS

⚠ DANGER — Content that may cause death or serious injury

< Coin-type lithium battery >
(1) Always keep batteries out of the reach of babies and small children.
(2) If a battery is accidentally swallowed, it may cause chemical burns or perforation of mucous membrane tissues. If it is not removed immediately, it may cause death in the worst case. If swallowed, or if there is a possibility that a battery has been swallowed, immediately consult a doctor.

⚠ WARNING — Content that may cause death or serious injury

< Coin-type lithium battery >
(1) Do not charge, short circuit, deform, disassemble, or heat a battery, or put a battery into a fire. This battery contains combustible substances such as lithium and organic solvents, which may cause ignition, overheating, or explosion.
(2) When disposing or storing a battery, insulate it with tape. Mixing with other metals or batteries may cause ignition or explosion.
< Plastic bag packaging >
Never place the plastic bag over your head or face, as there is a risk of suffocation.

⚠ CAUTION — Content that may cause injury or damage to household property

< Installation locations >
Do not install the clock in locations subject to vibrations or on unstable surfaces where the clock may topple over or fall. Installing it in such locations may result in injury or damage to property.
< Batteries >
Please be sure to observe the following precautions. Improper use of a battery may cause leakage or explosion, which may result in malfunction of the clock or injury.
(1) Even if the product is still operating, please replace the battery with a new one once the battery life described in the product specifications has passed. Also, please remove the battery when this product is not being used. If a battery is left inside the product, leakage from the depleted battery may contaminate or damage the clock and surrounding objects.
(2) Always insert the negative (–) end of a battery first. Also, insert the positive (+) and negative (–) ends correctly.
(3) The included battery is not rechargeable. Charging the battery may result in leakage or explosion.
(4) Do not directly solder the battery and do not drop water on the battery.
(5) For storage, avoid locations exposed to direct sunlight, high temperatures, and high humidity. Also, immediately dispose of any used battery and always keep batteries out of the reach of small children in the case of storage.
(6) If the clock is not operating, the battery terminals may be contaminated. In that case, wipe the terminals dry with a soft cloth.
(7) The included battery is pre-installed at the factory. The battery life may be shorter than the specified duration after purchase.
(8) Do not use a rechargeable battery or a battery with high initial voltage. Doing so may cause problems such as malfunction or shortened battery life.
< Do not disassemble or modify >
Do not attempt to disassemble or modify the clock.
Failure to observe this precaution may result in malfunction or injury.
< Disposal of the clock and battery >
Please dispose according to the regulations of your municipality.

Please read carefully before use. USE LOCATION AND CARE

USE LOCATION

Do not use the clock in the following locations.
The quality of the clock and/or the battery may be compromised, resulting in poor accuracy or battery depletion. Also, this clock is not intended for commercial use.
- Places where the temperature exceeds 50°C and places exposed to direct sunlight. (Example) Outdoors, and near heat sources such as heating appliances (hot air) or open flames.
- Places where the temperature drops below –10°C.
  Plastic parts and batteries may deteriorate.
- Places where dust accumulates.
  Dust stirred up in the air may catch in the gears and/or contacts, which may cause the clock to stop moving.
- Places near large TVs and/or speakers or in places with strong magnetic fields.
  Magnetic influence can cause the clock to slow down or advance, and even stop.
- Places exposed to humidity such as baths and showers.
  Places exposed to water or direct steam from a humidifier, etc.
- Places subject to vibrations.
  Places that are unstable.
- Places where large amounts of oil are used, such as factories and kitchens.
  Atomized oil may adhere to the clock gears, etc., which may cause the clock to stop operating.
- On surfaces such as vinyl-based walls, carpets, etc.
  Walls, carpets and/or clock may become dirty or damaged.
- Places exposed to extreme changes in temperature or humidity.
  Condensation may occur when the clock is moved from a cold place to a warm place.
- The wooden cases of the clock may become damaged if exposed to prolonged periods of very dry air or humid conditions. Also, joints may become deformed or damaged at high temperatures exceeding 40°C.

CARE

<For products with plastic cases>
- When cleaning the main clock body, wipe it with a damp, soft cloth.
- For heavy dirt, wipe it with a soft cloth with a small amount of neutral detergent diluted with water. Then dry with a soft cloth.

<For products with wooden and metal cases>
- When removing dirt or dust, wipe dry with a soft cloth.

※Do not use benzene, thinner, alcohol, polishing powder or any kind of brush when cleaning. Also, do not expose the clock to insecticides or hairsprays.
Otherwise, discoloration or damage may result.
※We also recommend storage in the packaging box for transportation.

HOW TO USE (The appearance of each product varies, but the operation is the same.)

■ Please check the accessories before use.

- One instruction manual (this manual)
- One coin-type lithium battery (CR2477)
- One pair of gloves
- One cloth

(※ The battery is inserted inside the battery hatch.)

■Follow the procedures described in 1 to 3 .

1 Open the rear cover.

Turn the knob to the left to open the rear cover.

2 Set the time.


Set the START/STOP switch to STOP and turn the timesetting knob to set the time.
※ You can turn it left or right.

3 Set to START.


Set the START/STOP switch to START.
※ The hands move.
Turn the knob to the right and close the rear cover.

■ How to replace the battery

(1) Please open the rear cover.
(2) Align the coin-shaped object with the groove on the battery hatch and turn it in the "OPEN" arrow direction to remove the battery hatch.
(3) Remove the old battery.
(4) Insert the battery with the positive (+) end facing up, and close the battery hatch in the "CLOSE" arrow direction.
(5) Close the rear cover.

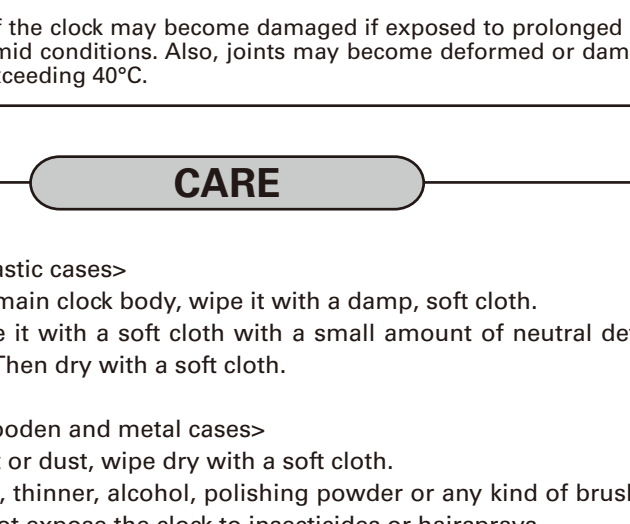

● Back side of the clock ●

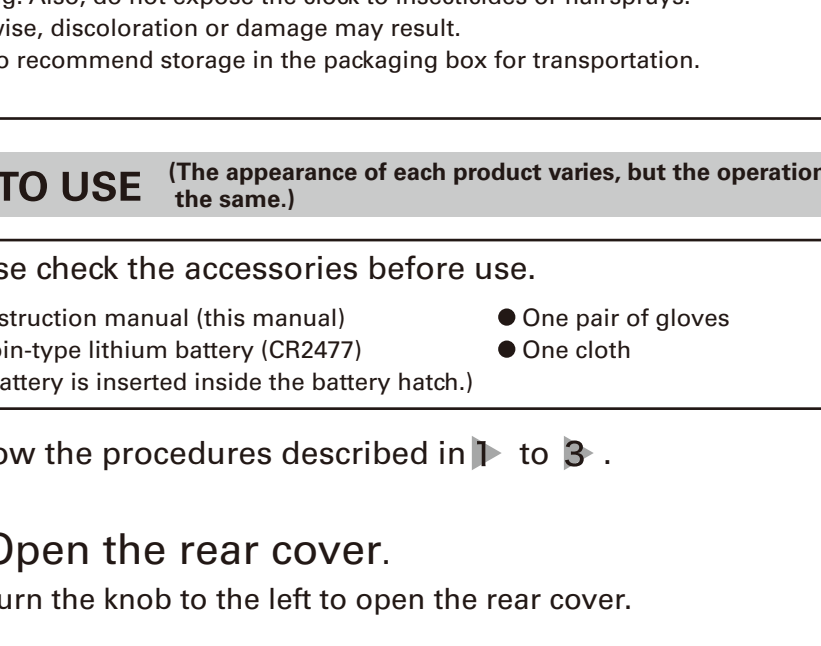

PRODUCT SPECIFICATIONS (Subject to change without notice due to improvements.)

- Accuracy: Average monthly rate ±15 seconds
  (when the clock is used at temperatures of 5°C to 35°C)
- Ambient temperature range: –10°C to +50°C
- Battery: 1 Coin-type lithium battery (CR2477)
- Battery life: About 5 years

※ Battery life depends on use conditions.

TROUBLESHOOTING

When the clock does not operate normally, refer to the table below to check before requesting repair.
When the battery is replaced with a new one, check the recommended use-by date of the battery.

Symptom	Possible Cause	Action
The clock hands do not move.	· There is no battery inside the clock.	· Insert a new battery while checking the orientation.
	· The battery is not inserted correctly.	
	· The battery terminals or contact pieces are dirty.	· Wipe the surface of the battery terminals and contact pieces. Insert the battery, then rotate it 2 to 3 times.
	· The START/STOP switch is not set to START.	· Set the START/STOP switch to START.

The contents of this instruction manual are subject to change without notice.
Thank you for your understanding.
The illustrations in this instruction manual may differ from the actual displays due to printing limitations.
We are not responsible for any expenses, profits or losses, or other damages arising from this product.
Reproduction, modification, or copying in part or in whole of this instruction manual without the permission of the manufacturer is prohibited.

Sales Representative

SEIKO WATCH CORPORATION