説明書番号　ZAZ-068W

DECOR
SEIKO

置時計　クオーツクロック

取扱説明書

この度はデコールセイコーをお買い上げいただき、誠にありがとうございました。
ご使用の前にこの取扱説明書をよくお読みのうえ、正しくご使用くださいますよう、お願い申し上げます。
なお、この取扱説明書はお手元に保管し、必要に応じてご覧ください。

必ずお守りください。　安全上のご注意 ▶

⚠ 警　告　死亡または重傷を負う恐れがある内容

＜アルカリ電池について＞
(1) 充電、ショート、変形、分解、加熱、火中に投入などをしないでください。液漏れや発熱、破裂の原因となります。
(2) 万一、アルカリ性溶液が皮膚や衣類に付着した場合は、きれいな水で洗い流してください。また、目に入ったときは、きれいな水で洗った後、直ちに医師の治療を受けてください。

＜梱包用ポリ袋について＞
窒息する恐れがありますので、ポリ袋を絶対にかぶらないでください。

⚠ 注　意　けがをしたり家財に損害を与える恐れがある内容

＜製品の設置場所について＞
落下や転倒により、けがをしたり器物を破損する恐れがありますので、振動のある場所や、不安定な場所には本製品を設置しないでください。

＜電池について＞
下記の注意事項を必ず守ってください。電池の使い方を間違えると、液漏れや破裂により本製品の故障やけがの恐れがあります。
(1) 製品仕様に記載された電池寿命を経過した場合は、本製品がまだ動いていても、新しい電池と交換してください。また、本製品を使わないときは、電池を取り外してください。電池を入れたままにしておくと、寿命の切れた電池からの液漏れなどにより、本製品や周囲の物を汚したり、傷めたりする恐れがあります。
(2) 電池は必ず ㊀ 側から入れてください。また、 ⊕ ㊀ を正しく入れてください。
(3) 付属の電池は充電式ではありません。充電すると液漏れや破裂の恐れがあります。
(4) 電池に直接ハンダ付けしたり、水滴を付けたりしないでください。
(5) 直射日光の当たる場所や、高温・多湿の場所を避けて保管してください。また、使用済みの電池は速やかに処分するか、幼児の手の届かない所に保管してください。
(6) 本製品が動かないなどの場合、電池の端子が汚れていることがあります。そのときは、やわらかい布で乾ぶきしてください。
(7) 付属の電池は、工場出荷時に同梱された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池寿命が切れることがあります。
(8) 充電式電池や初期電圧が高い電池を使用しないでください。正常に動作しなかったり、電池寿命が短くなるなどの不具合が発生する場合があります。

＜分解や改造をしない＞
本製品を分解したり、改造したりしないでください。本製品の故障やけがの恐れがあります。

＜製品と電池の廃棄について＞
お住まいの自治体の定める規則に従い、廃棄してください。

必ずお読みになってからご使用ください。　使用場所・お手入れ ▶

使用場所について

下記のような場所では使用しないでください。
本製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。また、本製品は業務用ではありません。

●温度が50℃以上になる所や直射日光の当たる所。
（例）屋外、または暖房器具などの熱風や火気に近い所。
●温度が－10℃以下になる所。
プラスチック製の部品や電池が劣化することがあります。
●ちり、ほこりの多い所。
空気中に舞い上がったごみが歯車や接点に挟まり、時計が止まることがあります。
●大型テレビ・スピーカーのそばや、強い磁気のある所。
磁力の影響で、進み・遅れが生じたり、時計が止まることがあります。
●浴室など湿気が多い所。また、水がかかる所や加湿器の蒸気が直接当たるような所。
●振動のある所。不安定な所。
●工場、台所など、多くの油を使用する所。
霧状になった油分が時計の歯車などに付着し、時計が止まることがあります。
●ビニール系素材の壁、敷物などの上。
壁や敷物、および本製品が汚れたり傷むことがあります。
●温度や湿度の変化が激しい所。
寒い所から暖かい所への移動などにより、結露が生じることがあります。
●木枠の製品の場合は、空気が非常に乾燥した状態や湿気の多い状態が続くと、枠が傷むことがあります。また、40℃以上の高温になると、接合部が変形したり損傷することがあります。

お手入れについて

【プラスチック枠の製品の場合】
●本体を清掃するときは、湿った、やわらかい布でふいてください。
●汚れがひどいときは、水で薄めた中性洗剤を少量、やわらかい布に含ませてふいてください。その後、やわらかい布で乾ぶきしてください。

【木枠・金属枠の製品の場合】
●汚れやほこりを取るときは、やわらかい布で乾ぶきしてください。

※お手入れの際、ベンジン、シンナー、アルコール、磨き粉、各種ブラシなどは使用しないでください。また、殺虫剤、ヘアスプレーなどがかからないようにしてください。変色したり、傷が付く恐れがあります。
※輸送などにお使いいただくために、個装箱の保管もおすすめいたします。

ご使用方法 ▶（製品により外観が異なりますが、操作方法は同じです。）

■ご使用の前に付属品をご確認ください。

●取扱説明書（本書）　１冊　●保証書　１冊　●手袋　１双
●単３形アルカリ乾電池　１個　●クロス　１枚

※付属の電池は、工場出荷時に同梱された電池です。お買い上げ後、製品仕様の年数に満たないうちに電池の寿命が切れることがあります。

■ 各部の名称

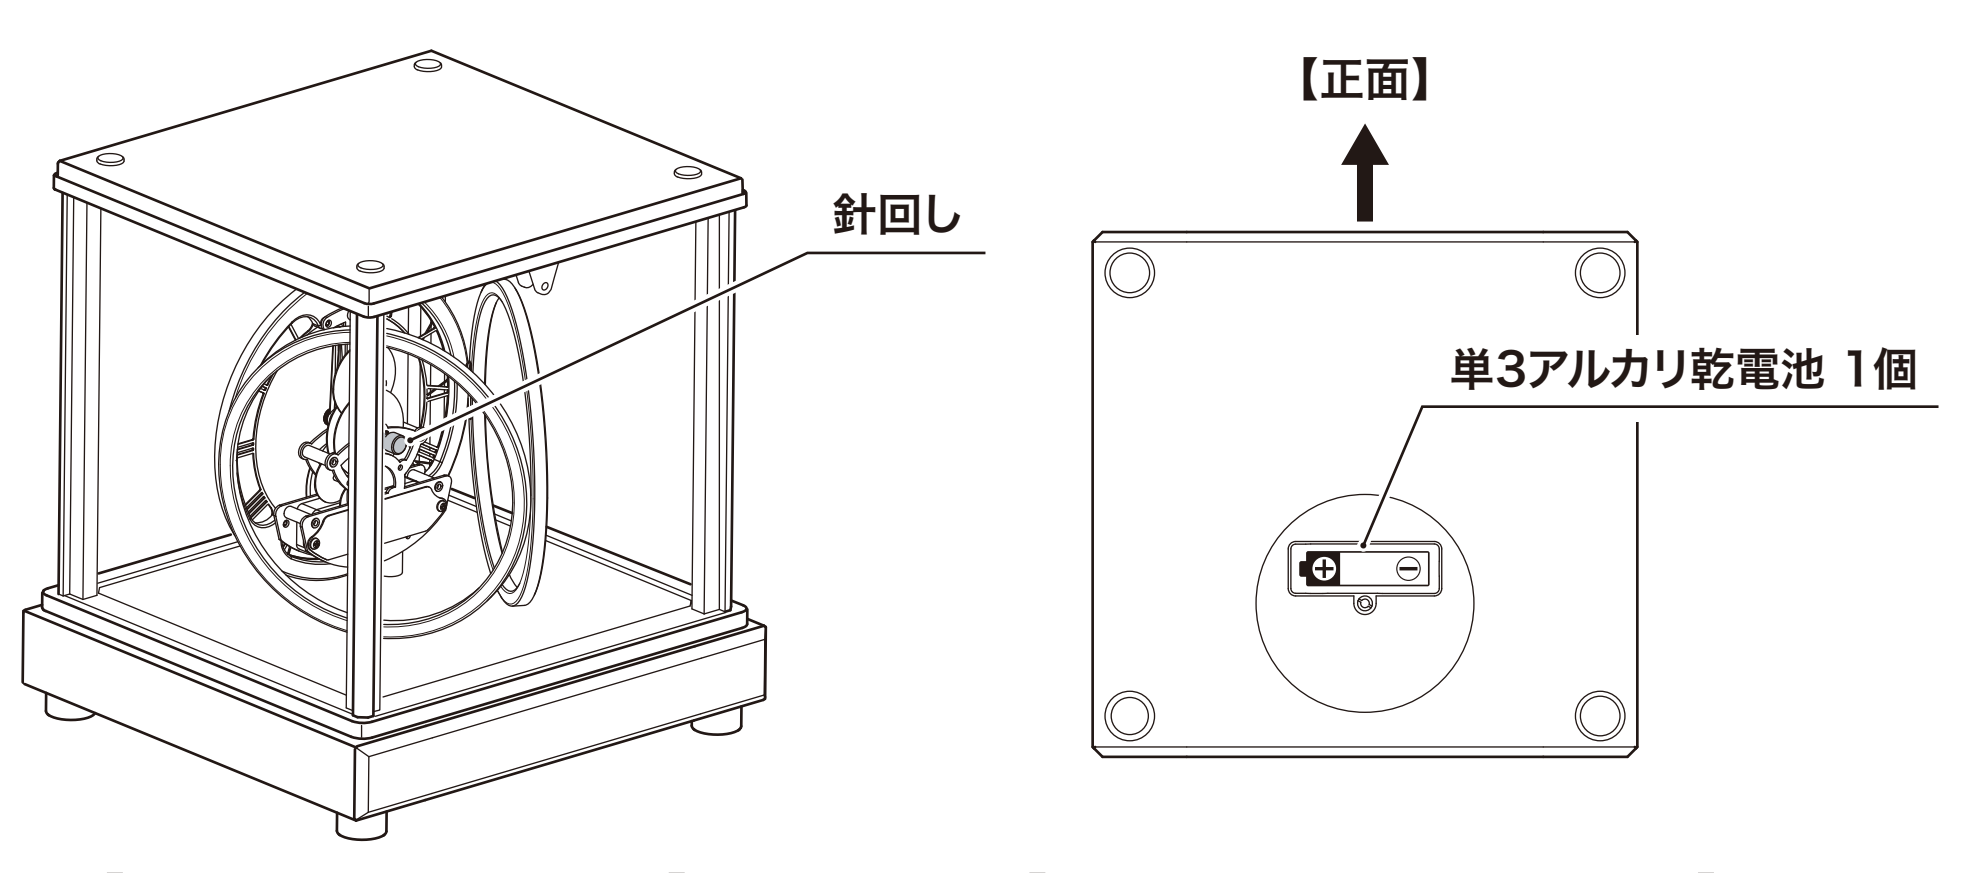

【裏面:ふたを開けた状態】　【底面:電池ぶたを開けた状態】

■1～6の手順に従って操作してください。

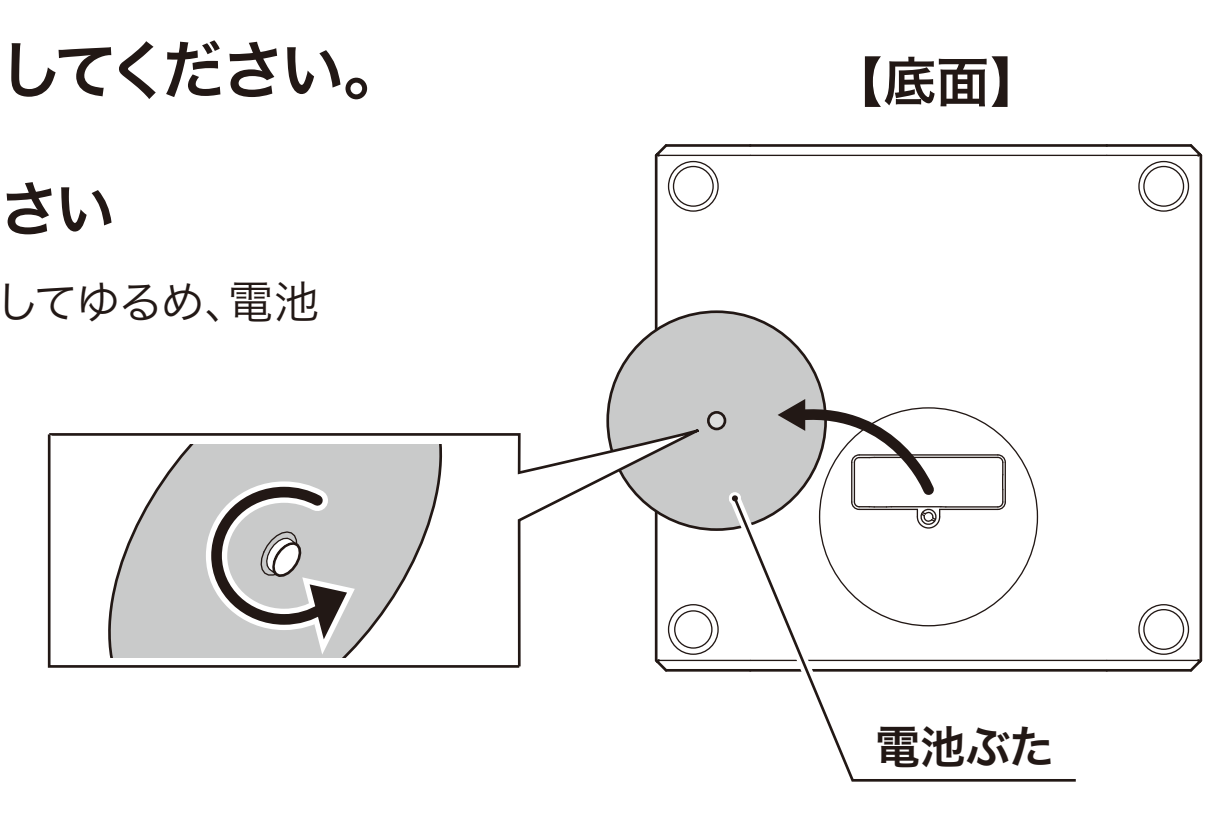

1 電池ぶたをはずしてください

底面のつまみを反時計回りに回してゆるめ、電池ぶたをはずしてください。

2 電池を入れてください
（単３アルカリ乾電池　１個）

必ず ㊀ 側から ⊕ ㊀ をまちがえないように注意して入れてください。

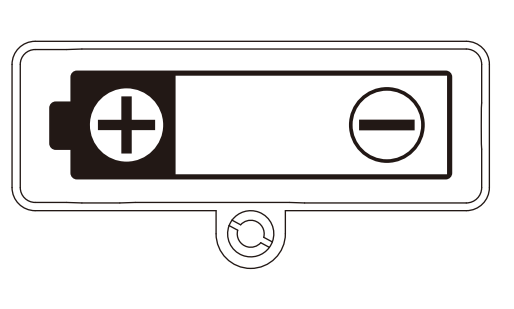

3 電池ぶたを元に戻してください

4 裏面のふたをはずしてください

裏面のつまみを反時計回りに回してゆるめ、ふたをはずしてください。

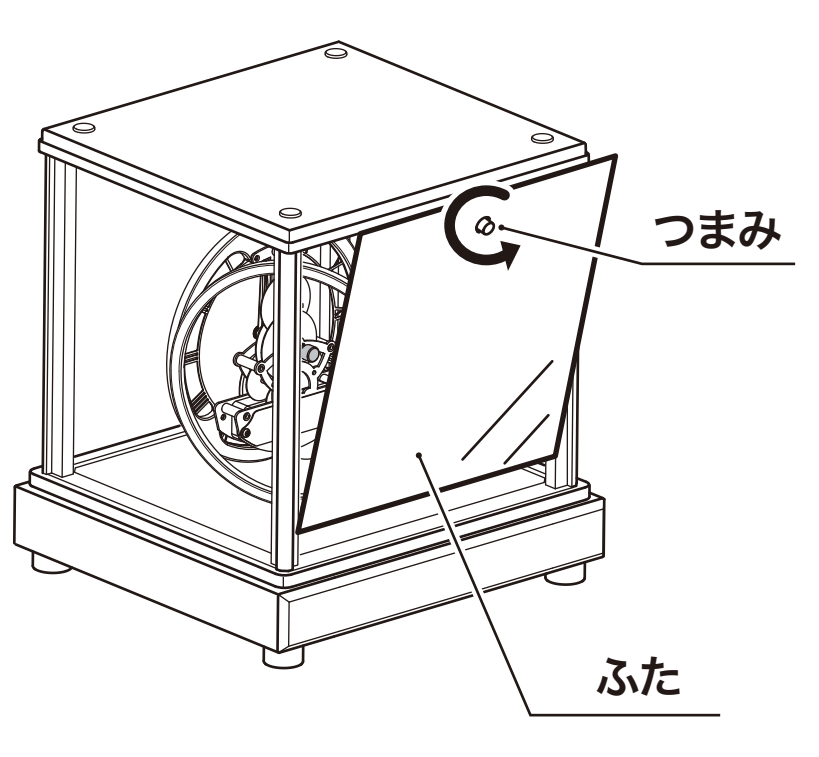

5 時刻を合わせてください

針回しを回して、時刻を合わせてください。
左右どちらに回しても構いません。

6 裏面のふたを元に戻してください

裏面のふたを元の位置に戻し、つまみをしっかりと締めてください。

製品仕様 ▶（改良のため予告なく変更する場合があります。）

●時間精度：平均月差±15秒
（気温５°C～35°Cで使用した場合）
●使用温度範囲：－10°C～50°C
●使用電池：単３形アルカリ乾電池（LR6）　１個
●電池寿命：約３年

※電池の寿命はご使用の条件によって変わります。

故障かな？と思ったときには ▶

本製品が正常に動作しないときは、修理を依頼される前に、以下の表を参考に対処してください。
なお、新しい電池と交換する場合は、電池の使用推奨期限をご確認のうえご使用ください。

症　状	考えられる原因	処　置
針が動かない	・電池が入っていない。	・新しい電池を、向きを確かめながら入れてください。
	・電池が正しい向きで入っていない。	
	・電池端子や接片が汚れている。	・電池端子や接片の表面を拭いてください。また、電池を入れて2～3回まわしてください。

保証・アフターサービス ▶

●本製品はメーカー保証品です。保証の内容については付属の保証書をご覧ください。なお、保証書は日本国内のみ有効です。また、アフターサービスも日本国内のみの対応となります。
●保証期間中の保証規定に基づいた修理品は、販売店がお預かりし、メーカーが無料で修理いたします。必ず販売店名が捺印された保証書を添えてご依頼ください。
●保証期間中でも無料修理の対象とならない修理品、および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
●本製品の修理用部品は、製造終了後7年間保有しています。この期間は原則として修理が可能です。修理用部品とは、製品の機能を維持するために不可欠な製品本体の部品です。なお、修理可能な期間は、ご使用条件により異なります。また、修理可能な場合でも、元どおりの精度とならない場合があります。販売店とよくご相談ください。
●修理の際、部品・その他の付属品は、一部代替部品または再生品を使用させていただくこともありますので、ご了承ください。
●有料修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃など、諸費用をお客様にご負担いただきます。なお、修理代金が標準小売価格を上回る場合があります。あらかじめご承知ください。
●保証期間中・経過後ともに、修理を依頼されるときは本製品を販売店にご持参ください。販売店で保証が受けられない場合は、クロックお客様相談室にご相談ください。
●お客様が本製品を分解されると、修理不可能となる場合があります。また、保証の対象外となりますので、ご注意ください。
●ご不明な点は、クロックお客様相談室にお問い合わせください。

この取扱説明書の内容は、将来予告なく変更することがあります。あらかじめご了承ください。
印刷による制限のため、この取扱説明書中の図が実際の表示と異なる場合があります。
本製品によって生じた、いかなる支出、損益、その他の損失に対して、弊社は一切の責任を負いません。
この取扱説明書の内容の一部またはすべてを、製造者の許可なく転載・変更・複製することは禁じられています。

本製品、またはアフターサービスなどについてご不明な点がありましたら、製品の裏面または底面に表示されている製品番号（品番）をご確認のうえ、下記クロックお客様相談室にお問い合わせください。

（例：AZ○○○、AS○○○、FW○○○など）

クロックお客様相談室　0120-315-474
https://www.seikowatches.com/jp-ja/
発売元
セイコーウオッチ株式会社

INSTRUCTION MANUAL No. (E)ZAZ-068W

DECOR
SEIKO

Table Clock / Quartz Clock

Instruction Manual

Thank you for purchasing DECOR SEIKO.
Please read this instruction manual carefully before use for proper and safe operation.
Please keep this instruction manual in a safe place for future reference.

Please make sure to observe. SAFETY PRECAUTIONS

⚠ WARNING — Content that may cause death or serious injury

< Alkaline batteries >

(1) Do not charge, short-circuit, deform, disassemble, or heat a battery, or put a battery into a fire. This may cause leakage, overheating, or explosion.

(2) If your skin or clothing comes into contact with the alkaline solution, immediately rinse it off with clean water. If the solution gets into your eyes, immediately rinse it with clean water and seek medical attention.

< Plastic bag packaging >

Never place the plastic bag over your head or face, as there is a risk of suffocation.

⚠ CAUTION — Content that may cause injury or damage to household property

< Installation locations >

Do not install the clock in locations subject to vibrations or on unstable surfaces where the clock may topple over or fall. Installing it in such locations may result in injury or damage to property.

< Batteries >

Please be sure to observe the following precautions. Improper use of a battery may cause leakage or explosion, which may result in malfunction of the clock or injury.

(1) Even if the product is still operating, please replace the battery with a new one once the battery life described in the product specifications has passed. Also, please remove the battery when this product is not being used. If a battery is left inside the product, leakage from the depleted battery may contaminate or damage the clock and surrounding objects.

(2) Always insert the negative (–) end of a battery first. Also, insert the positive (+) and negative (–) ends correctly.

(3) The included battery is not rechargeable. Charging the battery may result in leakage or explosion.

(4) Do not directly solder the battery and do not drop water on the battery.

(5) For storage, avoid locations exposed to direct sunlight, high temperatures, and high humidity. Also, immediately dispose of any used battery and always keep batteries out of the reach of small children in the case of storage.

(6) If the clock is not operating, the battery terminals may be contaminated. In that case, wipe the terminals dry with a soft cloth.

(7) The included battery is pre-installed at the factory. The battery life may be shorter than the specified duration after purchase.

(8) Do not use a rechargeable battery or a battery with high initial voltage. Doing so may cause problems such as malfunction or shortened battery life.

< Do not disassemble or modify >

Do not attempt to disassemble or modify the clock.
Failure to observe this precaution may result in malfunction or injury.

< Disposal of the clock and battery >

Please dispose according to the regulations of your municipality.

Please read carefully before use. USE LOCATION AND CARE

USE LOCATION

Do not use the clock in the following locations.
The quality of the clock and/or the battery may be compromised, resulting in poor accuracy or battery depletion. Also, this clock is not intended for commercial use.

- Places where the temperature exceeds 50°C and places exposed to direct sunlight. (Example) Outdoors, and near heat sources such as heating appliances (hot air) or open flames.
- Places where the temperature drops below –10°C.
  Plastic parts and batteries may deteriorate.
- Places where dust accumulates.
  Dust stirred up in the air may catch in the gears and/or contacts, which may cause the clock to stop moving.
- Places near large TVs and/or speakers or in places with strong magnetic fields.
  Magnetic influence can cause the clock to slow down or advance, and even stop.
- Places exposed to humidity such as baths and showers.
  Places exposed to water or direct steam from a humidifier, etc.
- Places subject to vibrations.
  Places that are unstable.
- Places where large amounts of oil are used, such as factories and kitchens.
  Atomized oil may adhere to the clock gears, etc., which may cause the clock to stop operating.
- On surfaces such as vinyl-based walls, carpets, etc.
  Walls, carpets and/or clock may become dirty or damaged.
- Places exposed to extreme changes in temperature or humidity.
  Condensation may occur when the clock is moved from a cold place to a warm place.
- The wooden cases of the clock may become damaged if exposed to prolonged periods of very dry air or humid conditions. Also, joints may become deformed or damaged at high temperatures exceeding 40°C.

CARE

<For products with plastic cases>

- When cleaning the main clock body, wipe it with a damp, soft cloth.
- For heavy dirt, wipe it with a soft cloth with a small amount of neutral detergent diluted with water. Then dry with a soft cloth.

<For products with wooden, metal, and stone cases>

- When removing dirt or dust, wipe dry with a soft cloth.

※Do not use benzene, thinner, alcohol, polishing powder or any kind of brush when cleaning. Also, do not expose the clock to insecticides or hairsprays.
Otherwise, discoloration or damage may result.

※We also recommend storage in the packaging box for transportation.

HOW TO USE (The appearance of each product varies, but the operation is the same.)

■ Please check the accessories before use.

- One instruction manual (this manual)
- One AA alkaline dry cell battery
- One pair of gloves
- One cloth

※ The included battery is pre-installed at the factory. The battery life may be shorter than the specified duration after purchase.

■ Names of parts

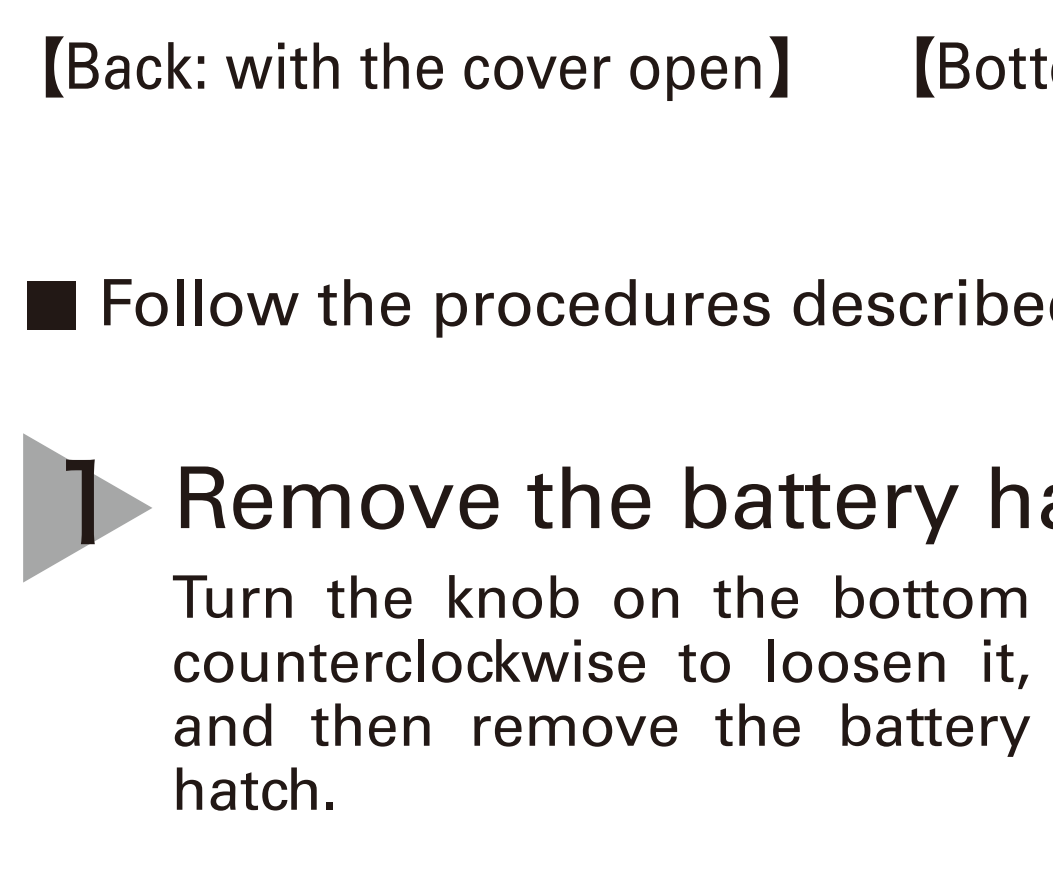

【Back: with the cover open】

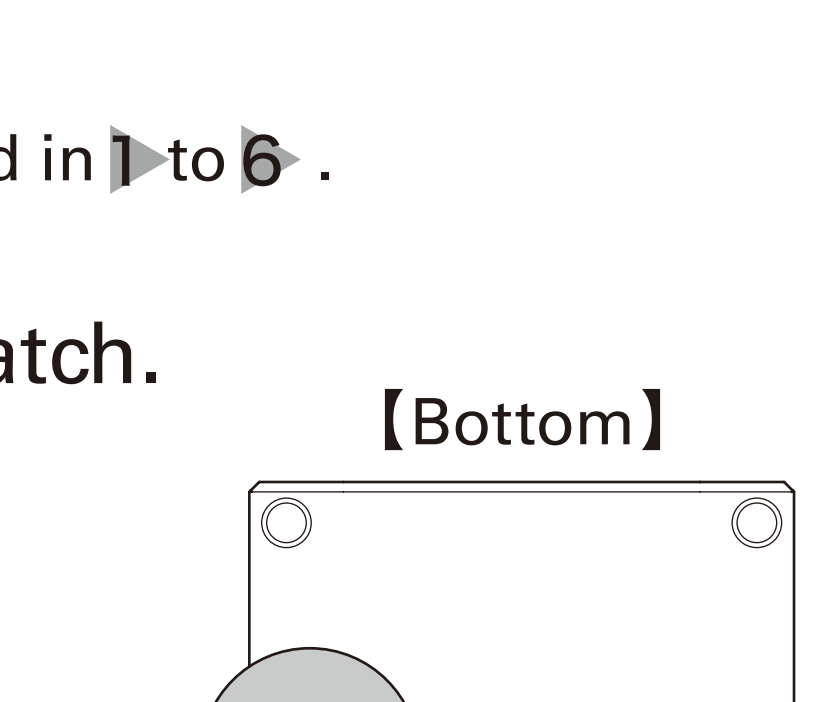

【Bottom: with the battery hatch open】

■ Follow the procedures described in 1 to 6 .

1 Remove the battery hatch.

Turn the knob on the bottom counterclockwise to loosen it, and then remove the battery hatch.

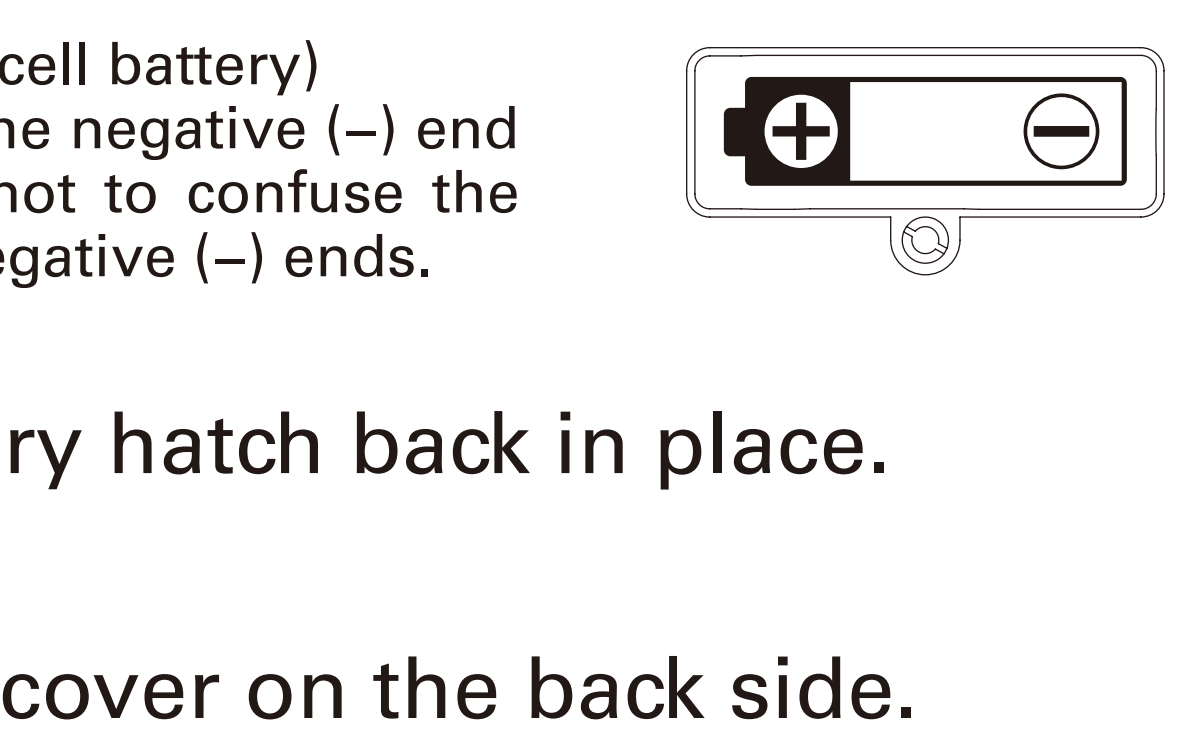

2 Insert the battery.

(1 AA alkaline dry cell battery)
Be sure to insert the negative (–) end first, taking care not to confuse the positive (+) and negative (–) ends.

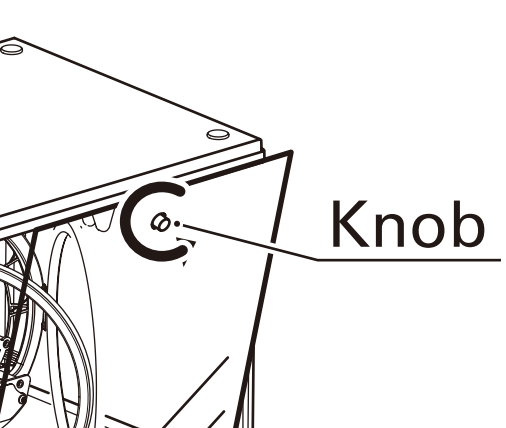

3 Put the battery hatch back in place.

4 Remove the cover on the back side.

Turn the knob on the back side counterclockwise to loosen and remove the cover.

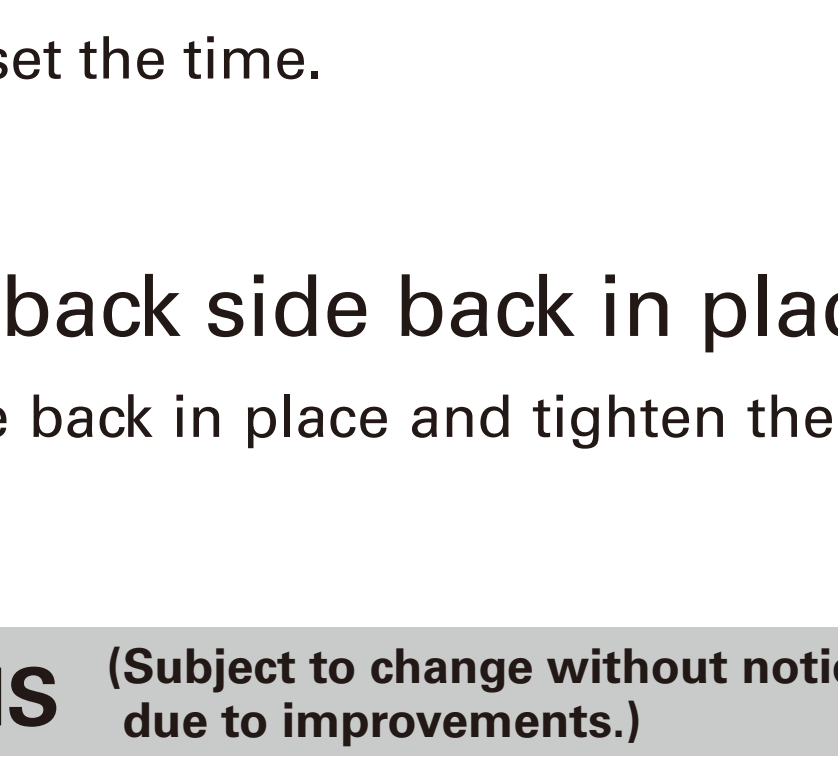

5 Set the time.

Turn the time setting knob to set the time.
You can turn it left or right.

6 Put the cover on the back side back in place.

Put the cover on the back side back in place and tighten the knob securely.

PRODUCT SPECIFICATIONS (Subject to change without notice due to improvements.)

- Accuracy: Average monthly rate ±15 seconds
  (when the clock is used at temperatures of 5°C to 35°C)
- Ambient temperature range: –10°C to +50°C
- Battery: 1 AA alkaline dry cell battery (LR6)
- Battery life: Approximately 3 years

※ Battery life depends on use conditions.

TROUBLESHOOTING

When the clock does not operate normally, refer to the table below to check before requesting repair.
When the battery is replaced with a new one, check the recommended use-by date of the battery.

Symptom	Possible Cause	Action
The clock hands do not move.	· There is no battery inside the clock.	· Insert a new battery while checking the orientation.
	· The battery is not inserted correctly.	
	· The battery terminals or contact pieces are dirty.	· Wipe the surface of the battery terminals and contact pieces. Insert the battery, then rotate it 2 to 3 times.

The contents of this instruction manual are subject to change without notice.
Thank you for your understanding.
The illustrations in this instruction manual may differ from the actual displays due to printing limitations.
We are not responsible for any expenses, profits or losses, or other damages arising from this product.
Reproduction, modification, or copying in part or in whole of this instruction manual without the permission of the manufacturer is prohibited.

Sales Representative

SEIKO WATCH CORPORATION